


Rear Seat Backrest 76.70.38


Removal

1. Heated seat only. Remove battery cover and disconnect ground cable from battery terminal. Refer to <<86.15.19>>.
2. Remove rear seat cushion. Refer to <<76.70.37>>.
3. Remove rear head restraints.

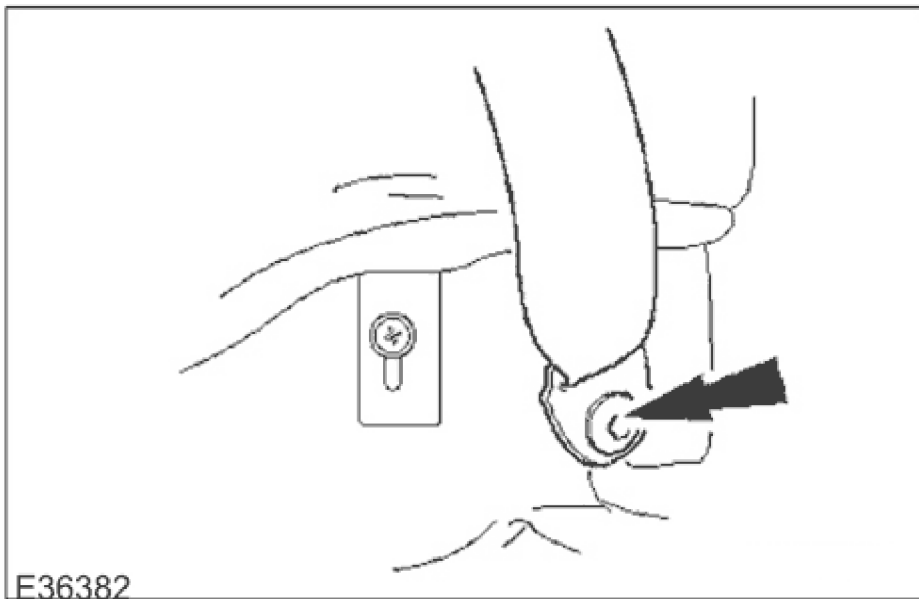


4. Slacken and remove outer seat belt lower anchor securing bolts.

1998 XJ RANGE - Seating - 501-10

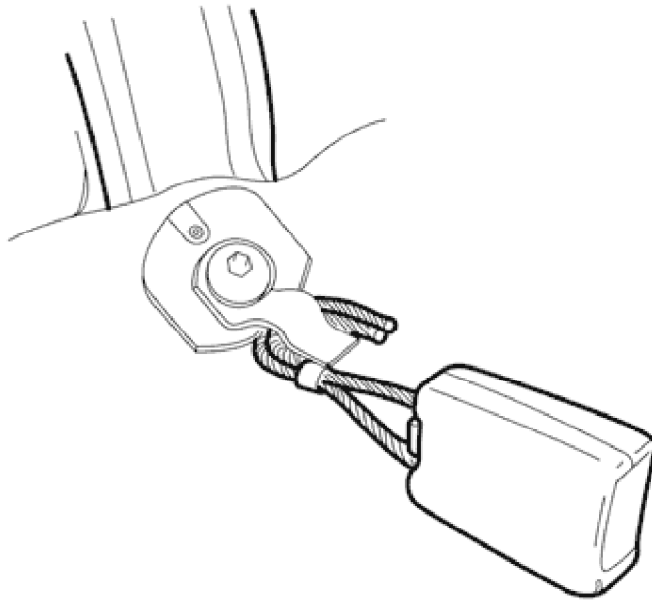

E36159


5. Slacken and remove bolt securing centre seat belt lower anchor plate and buckle cable to seat pan.

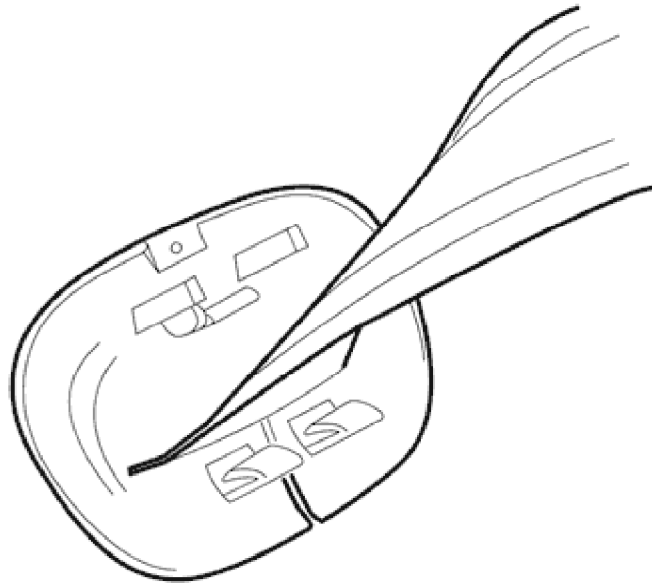


E36158

6. Remove seat belt escutcheon.
 1. Using a flat-bladed screwdriver in the two rectangular apertures, carefully withdraw escutcheon from squab top roll.
 2. Remove escutcheon from belt via split in moulding.

1998 XJ RANGE - Seating - 501-10

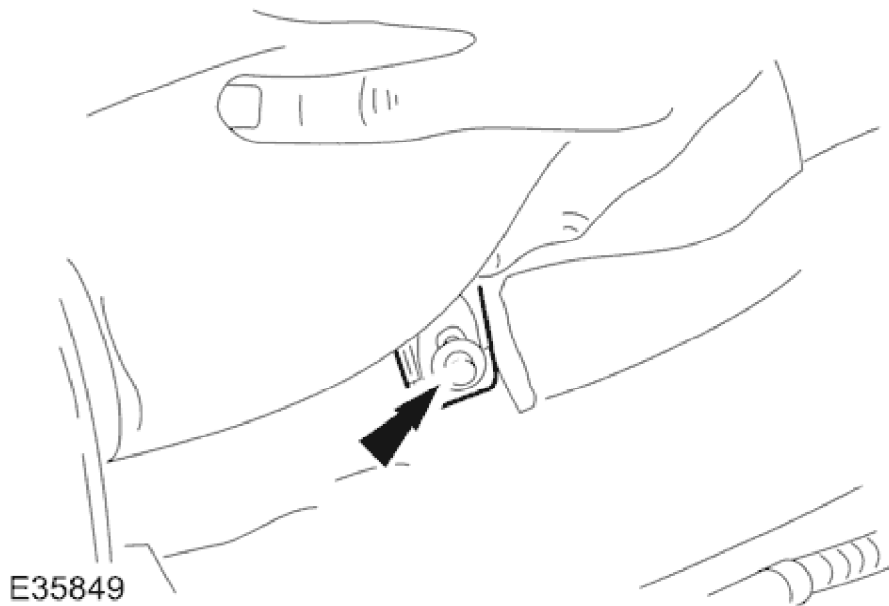

7. Slacken and remove the four seat squab securing screws.

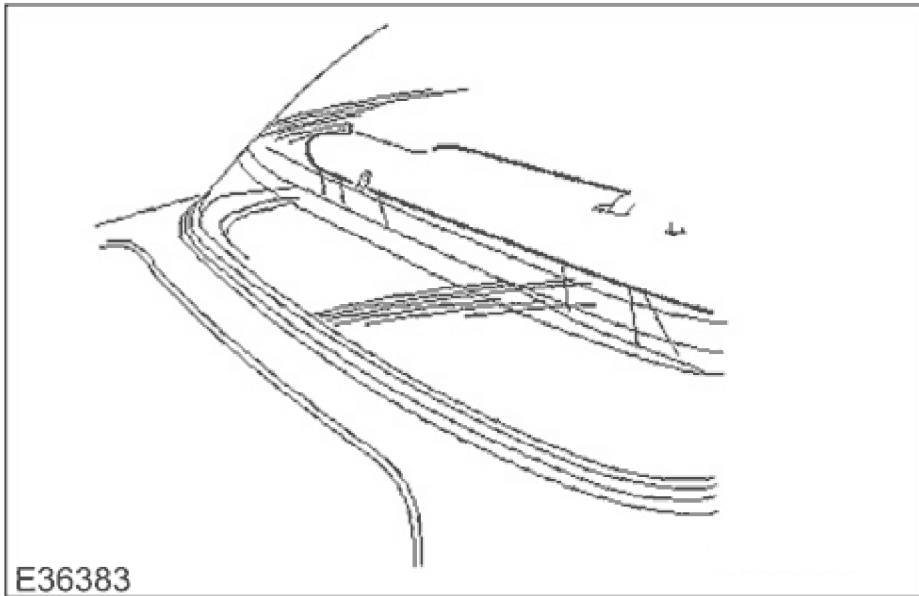

8. Remove seat squab.

- Lift squab clear of inertia reel assemblies withdrawing dowels from top panel.
- Carefully feed seat belt anchor plates and tongues through squab apertures.

9. Disconnect heater element harness multiplugs (if fitted) and remove seat squab via rear passenger door.

Installation

1. Position squab in vehicle and pass seat belt tongues and anchor plates through apertures.

1998 XJ RANGE - Seating - 501-10

2. Lift squab top roll over inertia reel assemblies, locate dowels in panel apertures and lower and fully seat squab.
3. Fit and tighten the four squab securing screws.
4. Fit seat belt escutcheons to squab top roll.
5. Fit and fully tighten outer seat belt lower anchor securing bolts.
6. Fit and fully tighten bolts securing centre seat belt lower anchor plate and buckle cable.
7. Fit rear cushion. Refer to <<**76.70.37**>>.
8. Fit rear head restraints.