



Removal

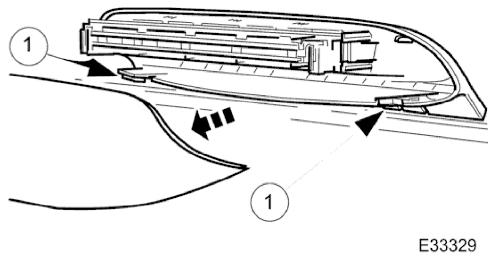


1. Remove lamp cover.

1. Depress two tangs at base of lamp carrier and withdraw cover.

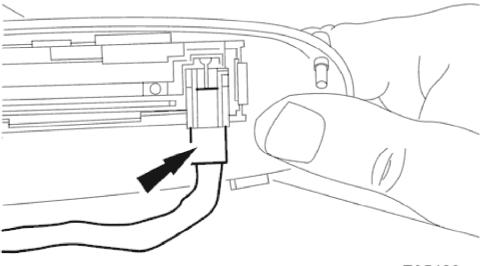

2. Disconnect lamp harness connector.


E35433

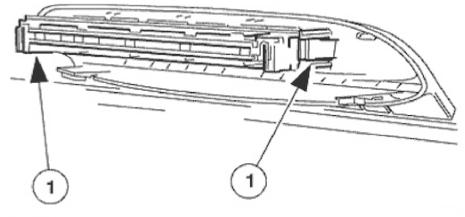

#### E33330


3. Remove module.

1. Release spring clips at each end of lamp lens module and withdraw module from carrier.

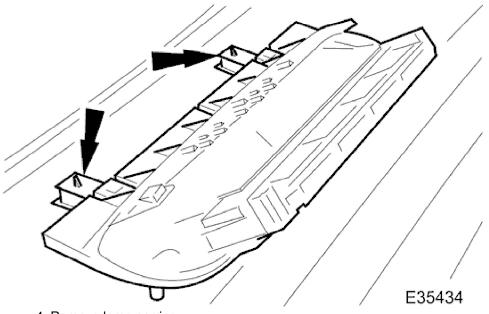


- 4. Remove lamp carrier.
  - Release lamp carrier lower securing tangs.
  - Slide carrier upwards to release and remove carrier from backlight.


#### Installation

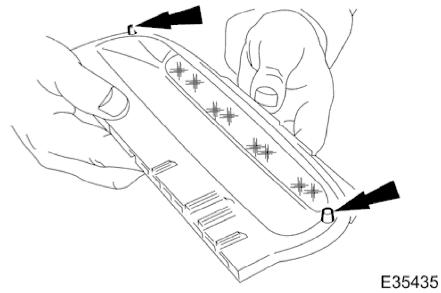

1. Ensure that rubber insulating pads are installed on lamp carrier.

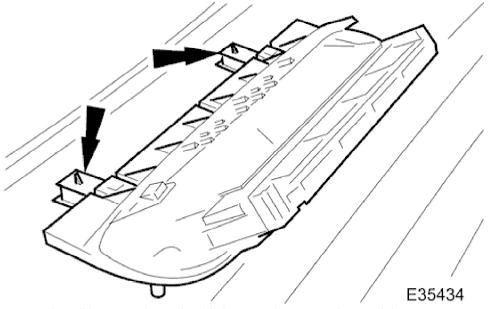


2. Install lamp carrier on backlight mountings, ensuring retaining tangs seat correctly.

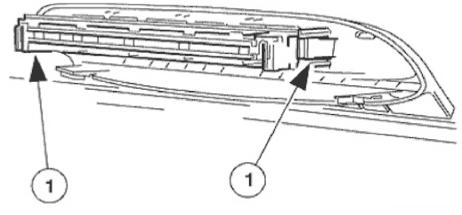


#### E33330

Install lamp module.
Slide lamp module into carrier ensuring retaining clips seat correctly.

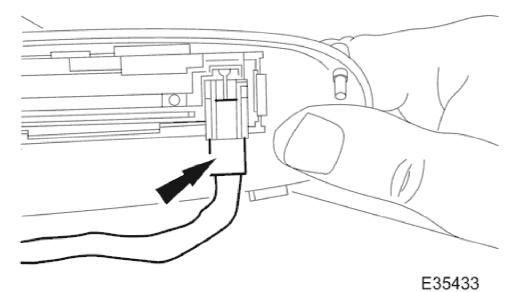

4. Connect harness connector to lamp assembly.

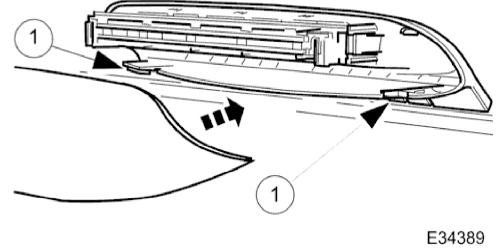

5. Install cover on lamp ensuring tangs locate correctly in carrier.