


Transmission Fluid Pan Gasket 44.24.05

RemovalNOTE:

This procedure will not remove residual fluid from the torque converter.

1. Disconnect the battery ground lead.
2. Raise the vehicle for access.

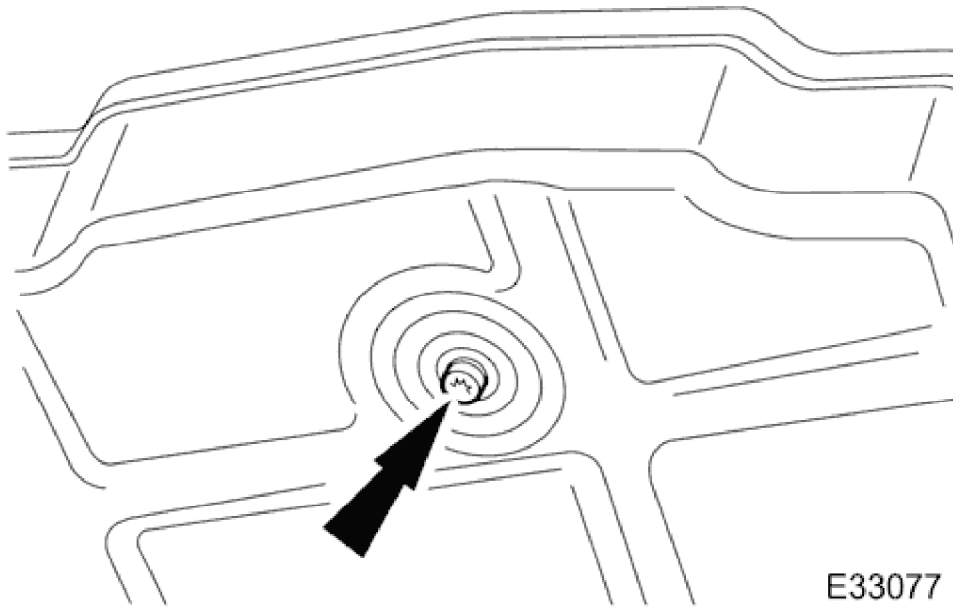


3. Drain the transmission fluid.



WARNING:

TRANSMISSION FLUID MAY CAUSE SEVERE BURNS, ENSURE THAT ALL SAFETY PROCEDURES ARE OBSERVED AND THAT THE RECEPTACLE FOR WASTE HAS SUFFICIENT CAPACITY.

- Carefully remove the drain plug and discard the sealing washer.

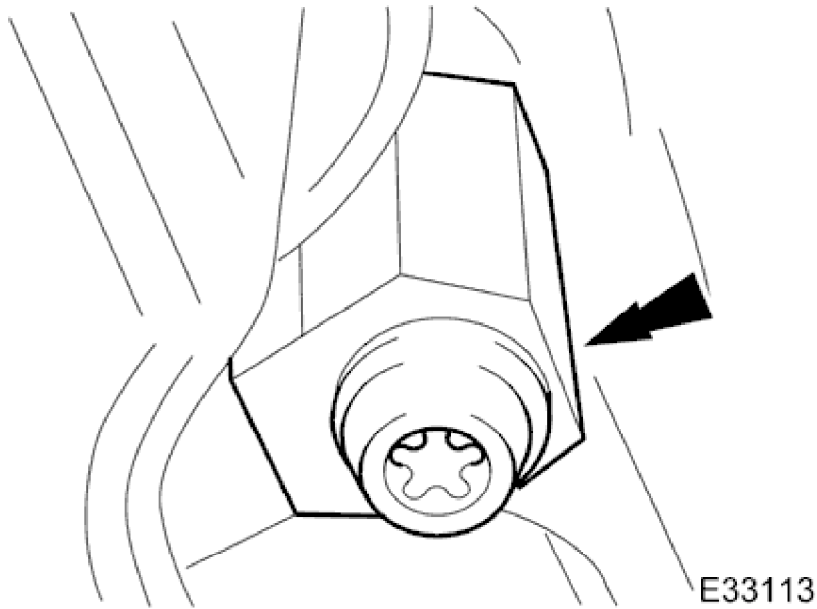


4. Remove the fluid pan.

NOTE:

The harness heatshield upper edge is retained by a clip.


- Remove the six bolts and clamps which secure the fluid pan to the transmission.

Installation

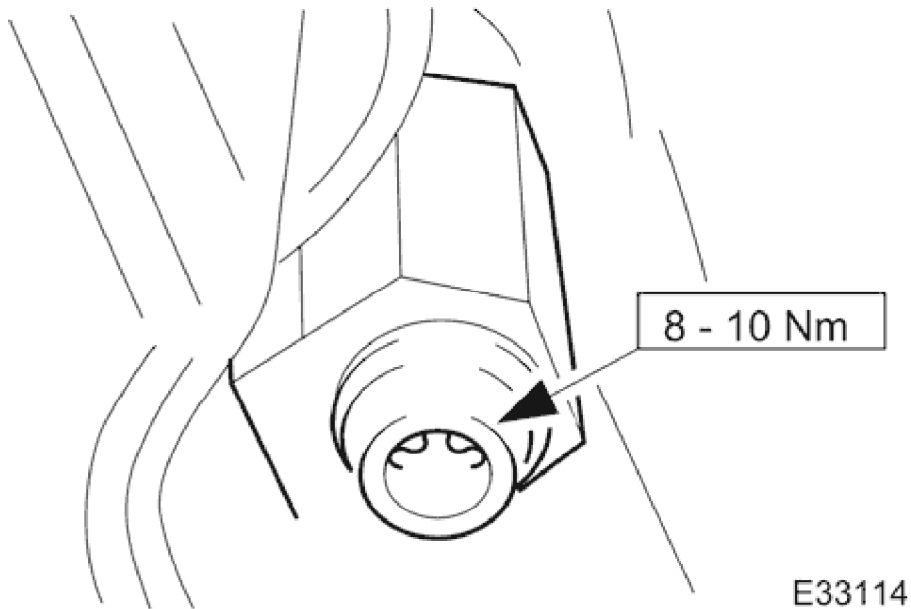

1. Installation is the reverse of the removal procedure.

- Tighten the fluid pan retaining bolts to the specified torque figure.

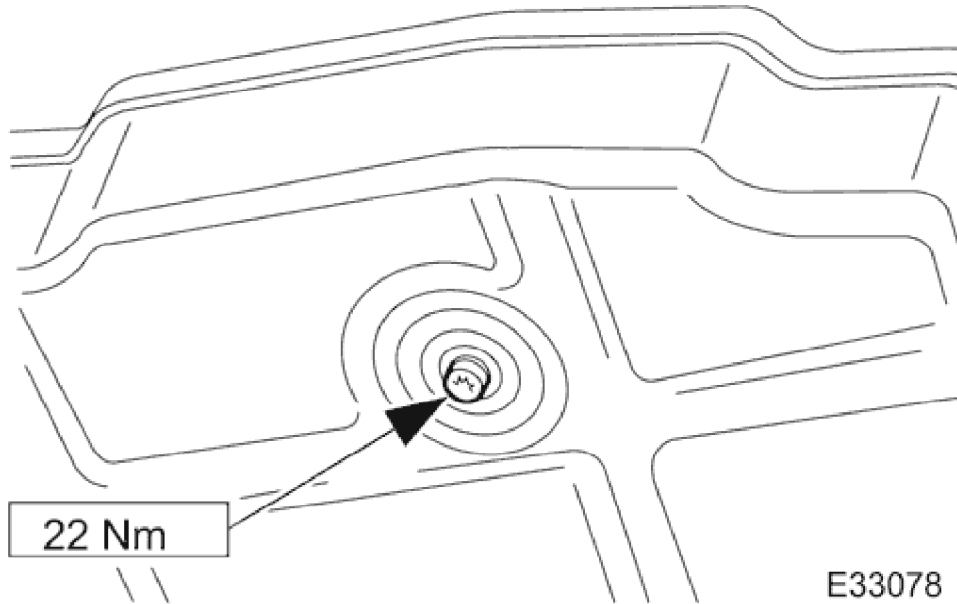

2. Refit and tighten the drain plug to the specified torque figure.
• Use a new sealing washer.

3. Refer to Operation <<44.24.02>> for fluid fill procedure.

4. Check for leaks and remove spilt fluid.