
Steering Gear 57.10.01

Special Service tools

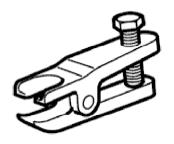


E36397

Taper Separator 211-098 (JD 100)

Removal


All vehicles

- 1. Centralize steering the wheel.
- 2. Raise and support the vehicle on a four-post ramp.
- 3. Place a suitable drain pan under the steering gear.

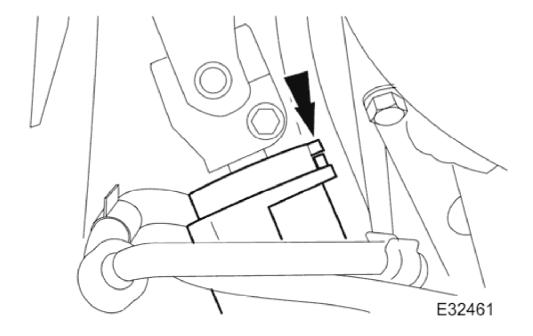

1


4. From below the vehicle, check that steering gear is centralized by aligning the centralizing notch on the dirt protection cover with the location hole in the pinion housing casting.

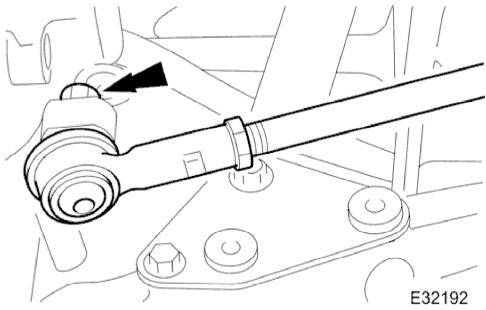

5. **NOTE:**

Right-hand shown, left-hand similar.

Remove and discard both tie rod end nuts.

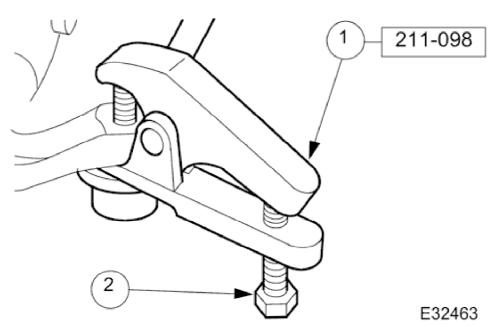


6. **NOTE:**


Right-hand shown, left-hand similar.

Detach both of the tie rod ends.

- 1. Fit the special tool to tie rod end.
- 2. Tighten the tool bolt to release the taper.
- Remove the tool.

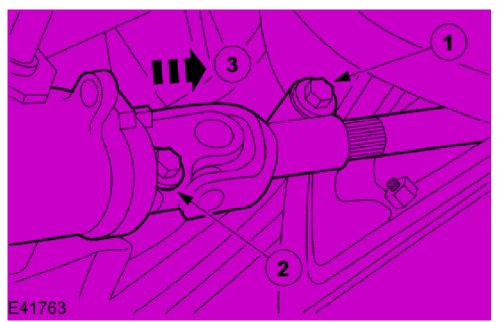


- 7. Detach the steering column lower shaft.
 1. Loosen the steering column lower shaft retaining bolt.
 2. Remove and discard the steering column lower shaft retaining bolt.
 - 3. Detach the steering column lower shaft.

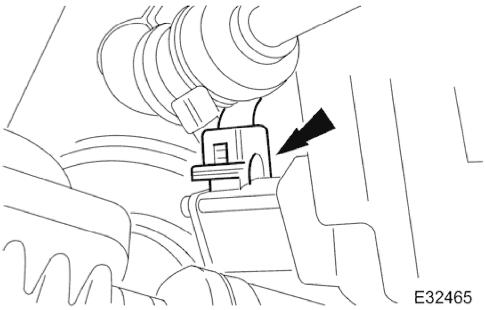

8. Disconnect the steering gear transducer electrical connector.


3

Right-hand drive vehicles

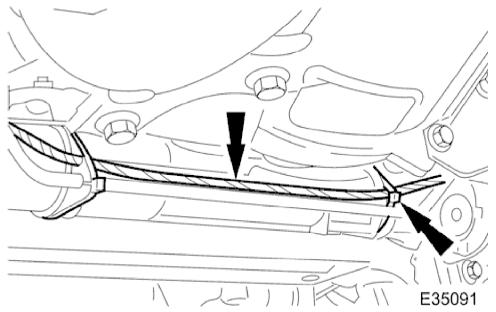


9. Cut and discard the steering gear transducer harness tie-strap.


All vehicles

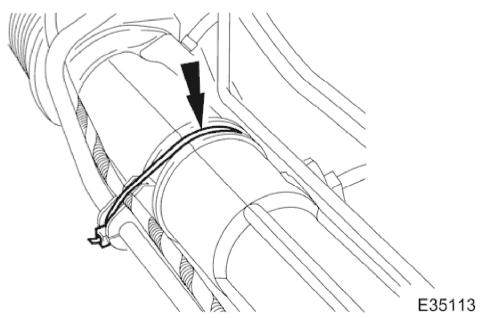


10. Cut and discard the power steering return pipe tie-strap.

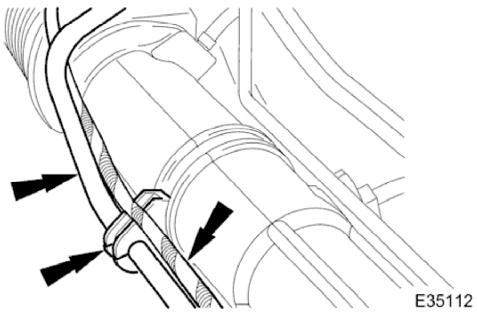

- 11. Detach the power steering return pipe from the mounting rubber.
 - Route the steering gear transducer harness from behind the power steering return pipe (right-hand drive vehicles only).

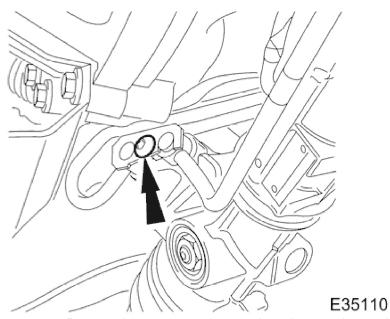

12. Remove the power steering supply and return pipe retaining plate bolt and withdraw the plate.

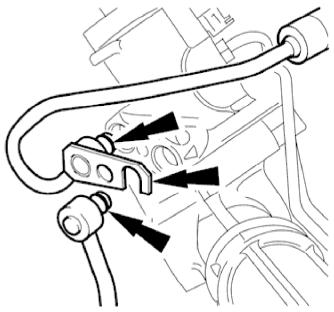

E35111

- 13. Drain the power steering fluid.
 - Disconnect the power steering supply and return pipes and allow the fluid to drain.
 - Remove and discard the ´ O´ ring seals from the pipe connectors.
 - Fit suitable blanking caps to the pipe connectors and pinion housing ports.
- 14. Remove the drain pan and discard the fluid.

15. **NOTE:**

The steering gear mounting bushings are handed; they are marked accordingly and must be replaced as a pair.

Remove the steering gear mounting bracket bushings. << Steering Gear Bushing>>

16. **NOTE:**

When removing the steering gear, manoeuvre the power steering return pipe past the pinion housing to steering gear pipes.


6

Remove the steering gear.

17. Using a tap (M10 x 1.5 mm), clean the steering gear to crossbeam bolt hole threads.

Installation

All vehicles

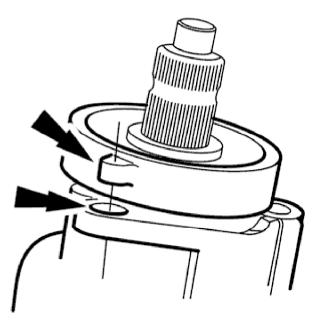

E33832

1. If a new steering gear assembly is to be fitted, make sure steering gear is centralized before installation.

2. **NOTE:**


When installing the steering gear, manoeuvre the power steering return pipe past the pinion housing to steering gear pipes.

NOTE:

A new steering gear assembly is supplied with a dirt protection cover/centralizing cap fitted.


Position the steering gear to vehicle.

3. Install the steering gear mounting bracket bushings. << Steering Gear Bushing>>

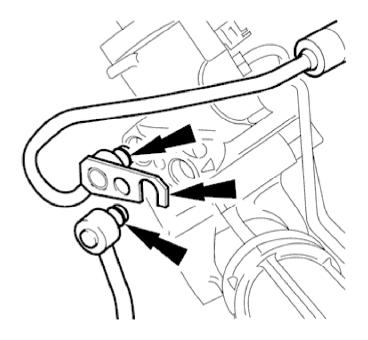


E35111

- 4. Connect the power steering supply and return pipes to the pinion housing.
 - Remove the blanking caps and install new ´O´ring seals in pipe connectors.
 - lubricate the ´O´ring seals with clean power steering fluid.
 - Remove the blanking caps from the pinion housing ports.
 - Position the power steering supply and return pipes to the pinion ports and seat ´O´rings.

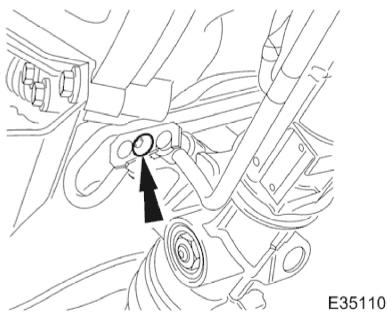


- 5. Attach the power steering supply and return pipes to the pinion housing.
 - Ensure the power steering supply and return pipes and the retaining plate are correctly seated.
 - Install the bolt.
 - Tighten to 9-12 Nm.
- 6. Clean any fluid spillage from the steering gear and surrounding area.

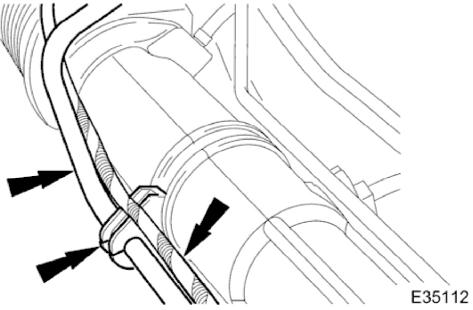


7. Attach the power steering return pipe to the steering gear.

- Attach the rubber support to the power steering return pipe.
- Route the steering gear transducer harness behind the power steering return pipe (right-hand drive vehicles only).

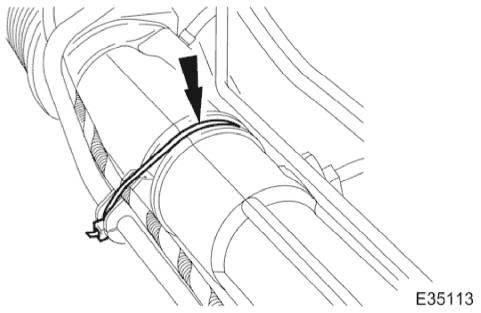


8. Install a new power steering return pipe tie-strap.

Right-hand drive vehicles

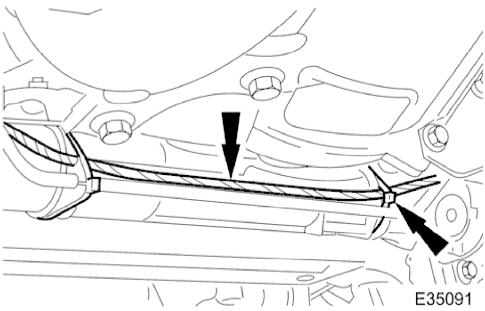


9. Install a new steering gear transducer harness tie-strap.

All vehicles

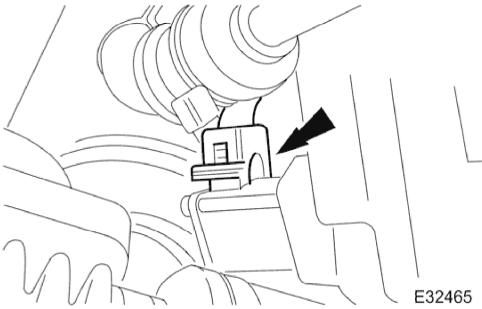

- 10. Connect the steering gear transducer electrical connector.
 - On right-hand drive vehicles, position the steering gear transducer harness behind the power steering return pipe.

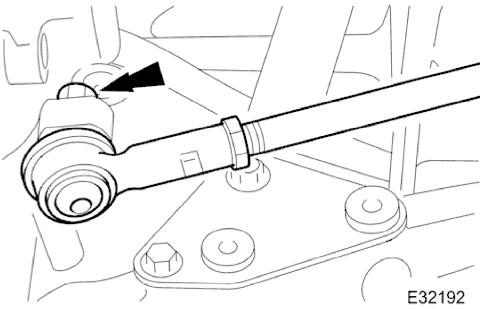


11. **NOTE:**

Right-hand shown, left-hand similar.

Attach the tie rod end.

- Locate the tie rod end into the steering arm.
- Install a new nut.
- Tighten the nut to 22-28 Nm.

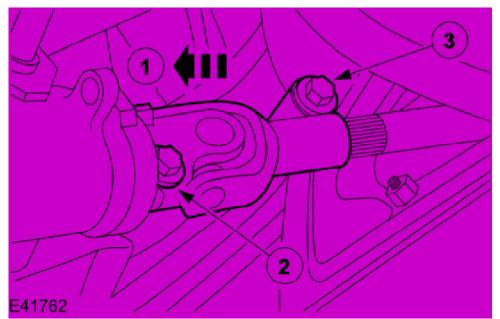

12. **NOTE:**

Make sure the steering wheel and wheel and tire assemblies are in the straight ahead position before fitting the steering column lower shaft.

Attach the steering column lower shaft.

- 1. Attach the steering column lower shaft.
- 2. Install the steering column lower shaft retaining bolt.
 - Tighten to 28 34 Nm.
- 3. Tighten to 28 34 Nm.
- 13. Fit a new power steering fluid reservoir, refill with new power steering fluid and bleed air from the system. <<211-00>>[Power Steering System Filling and Bleeding]
- 14. Check and adjust the front toe. <<204-00>>[Front Toe Adjustment]