

[Go to Foreword >>](#)

[Go to Contents >>](#)

[Go to Index >>](#)

**XJ/XK 2001 MY
IN-CAR TELEPHONE
HANDBOOK**



BY APPOINTMENT TO
HER MAJESTY QUEEN ELIZABETH II
MANUFACTURERS OF DAIMLER AND JAGUAR CARS
JAGUAR CARS LIMITED COVENTRY



BY APPOINTMENT TO
HER MAJESTY QUEEN ELIZABETH
THE QUEEN MOTHER
MANUFACTURERS OF DAIMLER AND JAGUAR CARS
JAGUAR CARS LIMITED COVENTRY



BY APPOINTMENT TO
HIS ROYAL HIGHNESS THE PRINCE OF WALES
MANUFACTURERS OF DAIMLER AND JAGUAR CARS
JAGUAR CARS LIMITED COVENTRY

In-car Telephone Handbook

JAGUAR CARS LIMITED, as manufacturers, are dedicated to the design and production of vehicles which meet the expectations of the world's most discerning purchasers.

To complement the features, systems and technology of your new vehicle we have produced this In-car Telephone Handbook. In it we have undertaken to make the control of complex systems easy to understand and operate.

The information contained herein applies to a range of vehicles and not to a specific vehicle. For the specification of a particular vehicle, owners should consult their Jaguar Dealer.

The Manufacturer reserves the right to vary its specifications with or without notice, and at such times and in such manner as it thinks fit. Major as well as minor changes may be involved in accordance with the Manufacturer's policy of constant product improvement.

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form, electronic, mechanical, photocopying, recording or other means without prior written permission from the Service Division of Jaguar Cars Limited.

Contents

1. General information

Introduction	1-1
Safety Recommendations	1-2

2. Handsfree controls

XK Series Audio panel controls	2-1
Display messages	2-1
XJ Series Audio panel controls.	2-2
Display messages	2-2
Steering wheel controls.	2-3
Audio panel controls.	2-3

3. Hands-free operation

Receiving a call.	3-1
Making a call.	3-1

4. Additional information

Additional information	4-1
Continuity of calls.	4-1
DTMF Tones	4-1
Changing a Phone Number	4-1
Caller Identity option	4-1

Introduction

Your in-car telephone can be used as a handsfree system or as a conventional portable handset. To enjoy optimum performance from the system, only a Jaguar approved and supplied Timeport portable handset should be used. Incorporating the latest advances in digital technology, this will provide your system with superior performance under the most demanding conditions.

Note: As with all radio frequency operated telephones, the performance of your in-car system is dependent upon network availability and strength.

Handsfree system

For handsfree operation the handset must be correctly installed in the cradle in the centre console storage compartment. Interfacing with an overhead, directional microphone and the audio system speakers, the phone can then be operated via the keypad and phone buttons on the audio panel, and/or the steering wheel switches.

Note: It is not necessary to extend the handset aerial, as the vehicle antenna is used in handsfree mode.

Conditions for handsfree operation

Whilst your Jaguar Dealer will have

ensured that the phone is correctly set up for handsfree operation, the following pre-requisites must be satisfied:

- The phone must be connected to a cellular network and unlocked.
- The handset must be correctly installed in the cradle.
- The vehicle ignition switch must be in position I (auxiliary) or II (ignition).

Note: The radio, cassette tape or CD player can be OFF or ON.

For handset operating details, refer to the telephone manufacturer's handbook.


Phone volume adjustment

Independent adjustment of phone volume can be carried out using the audio panel or steering wheel switches. The set volume is memorised and will not affect other audio volume settings.

If the audio system is in use when the phone becomes active, the audio source is suppressed for the duration of the call.

Audio panel display

Phone related messages are shown on the audio panel display when the phone system is active.

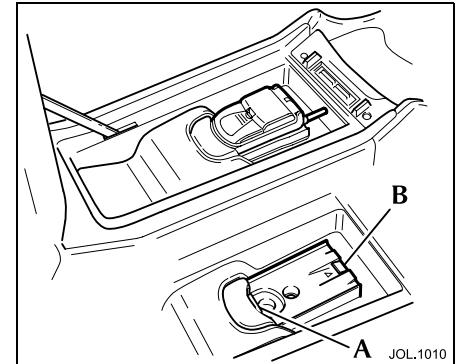

To remove or install the handset

To remove the handset from the cradle, slide the handset forward to disconnect it from the base connector (A). Lift the handset and remove it from the cradle.

To install the handset in the cradle, retract the extendable aerial, locate the top of the handset in the cradle and slide it forward into the clip (B). Finally position the handset in the cradle by allowing it to move rearward under spring pressure until it is fully engaged in the base connector (A).

Caution: Ensure the handset is folded to the closed position before lowering the armrest.

1-2 General information

Safety Recommendations



WARNING:

Read this information before using your portable phone.

Exposure to Radio Frequency Signals

Your portable telephone is a low power radio transmitter and receiver. When it is switched ON, it receives and sends out radio frequency (RF) signals.

International authorities have set standards and recommendations for protection of the public from exposure to RF electromagnetic energy. Your telephone is designed to satisfy all international requirements when used as described in this handbook

Antenna Care

Only approved Jaguar antennae should be installed on the vehicle. The use of unauthorized antennae can damage the phone and may violate local authority regulations.

Phone Operation

Do not operate your portable telephone when a person is within 10 centimetres (4 inches) of the vehicle antenna. A

person positioned within this range of the antenna can adversely affect phone performance and may cause the phone to operate at abnormally high power levels exposing that person to excessive RF energy levels.

Driving

Check local regulations on the use of portable telephones in the areas where you drive and always obey them. Observe the following guidelines when using your phone while driving:

- Give full attention to driving – safe driving is your first responsibility.
- Always use handsfree operation when driving.
- When receiving a call, if driving conditions demand, pull off the road and park.

Electronic Devices

Most modern electronic equipment is shielded from RF signals. However, certain equipment may not be shielded against the RF signals from your portable phone.

Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of 15 centimetres (6 inches) is maintained between a wireless phone antenna and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with pacemakers should:

- Preferably use the vehicle handsfree phone system.
- ALWAYS keep the phone more than 15 centimetres (6 inches) from their pacemaker when the phone is switched ON.
- Turn the phone OFF immediately if there is any reason to suspect that interference is taking place.

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device, or your doctor, to determine that it is adequately shielded from external RF energy.

Turn your phone OFF in health care facilities when any regulations posted in such areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect non-Jaguar or improperly installed equipment. Always consult the manufacturer of any equipment that has been retro-fitted to your vehicle.

Posted Facilities

Turn your phone OFF in any facility where posted notices so require.

Blasting Areas

To avoid interfering with blasting operations, turn your phone OFF when in a blasting area or in areas posted: 'Turn off two-way radios.' Obey all signs and instructions.

Potentially Explosive Atmospheres

Areas with a potentially explosive atmosphere are often but not always clearly marked. Turn your phone OFF when you are in such an area, as the use of unapproved electrical equipment can cause an explosion or fire resulting in bodily injury or death.

For Vehicles Equipped with an Airbag

Airbags inflate with great force. Do NOT place objects, including both installed or portable wireless equipment, in the area over an airbag or in the airbag deployment area. If in-vehicle wireless equipment is improperly installed and the airbag inflates, serious injury could result.

XK Series Audio panel controls

1. ON/OFF switch and volume control.
2. Mode.
3. Phone send and end.
4. Phone memory recall.
5. Phone key pad - buttons 0 to 9.
6. Phone mode.
7. Display.
8. Phone clear
9. Scroll memory location.

Display messages

The following is a list of messages that may be displayed:

INCOMING CALL - There is an incoming call.


CALL ENDED - Current call is terminated.

CALL ON HOLD - When pressing function key followed by digital button 6 to mute in-car microphone during a call.

SIGNAL LOST - Loss of signal, displayed only when using TDMA handset.

LOADING PBOOK - Indication that may appear when portable phone book is loading during in-car initialisation at ignition, or when returning handset to cradle.

EMPTY - Memory location is empty.

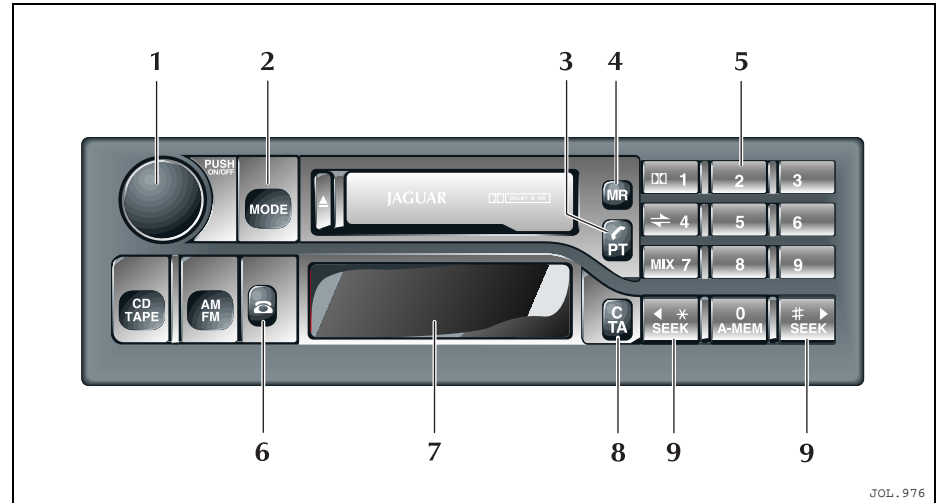

PHONE LOCKED - The phone is locked. Enter unlock code on the handset keypad.

ENTER CODE - Enter code to unlock phone.

SYSTEM BUSY - Cellular system is busy when call is attempted.

NO SERVICE - No cellular service available.

PHONE - System is entering phone mode.

ROAM - Phone connected to different network from 'home' system and an indication of signal strength.

SIG - Indication of signal strength.

MESSAGE A A new Short Message Service note has been received.

MESSAGE n (n is message number) - Indicates number of messages available for viewing

Note: Messages on the audio display may not be in the same language as the messages on the phone display.

XJ Series Audio panel controls

1. ON/OFF switch and volume control.
2. Phone clear button.
3. Display.
4. Scroll memory location.
5. Phone key pad - buttons 0 to 9.
6. Phone memory recall button.
7. Phone mode button, send/end calls.

Display messages

The following is a list of messages that may be displayed:

INCOMING CALL - There is an incoming call.

CALL ENDED - Current call is terminated.


CALL ON HOLD - When pressing function key followed by digital button **6** to mute in-car microphone during a call.

SIGNAL LOST - Loss of signal, displayed only when using TDMA handset.

LOADING PBOOK - Indication that may appear when portable phone book is loading during in-car initialisation at ignition, or when returning handset to cradle

EMPTY - Memory location is empty.

PHONE LOCKED - The phone is locked. Enter code using the handset keypad.

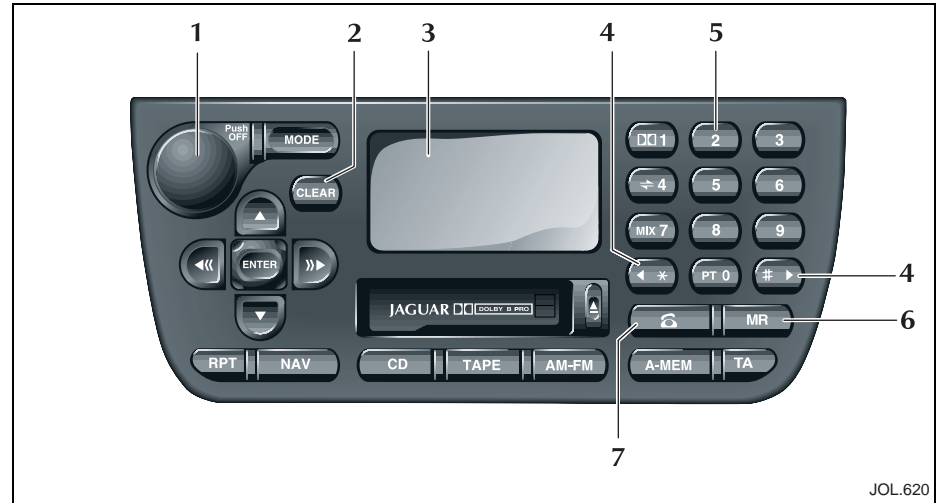

ENTER CODE - Enter code to unlock phone.

SYSTEM BUSY - Cellular system is busy when call is attempted.

NO SERVICE - No cellular service available

PHONE - System is entering phone mode.

ROAM - Phone connected to different network from 'home' system and an indication of signal strength.

SIG - Indication of signal strength.


MESSAGE A A new Short Message Service note has been received.

MESSAGE n (n is message number)
- Indicates number of messages available for viewing

Note: Messages on the audio display may not be in the same language as the messages on the phone display.

2-3 Handsfree controls

Steering wheel controls

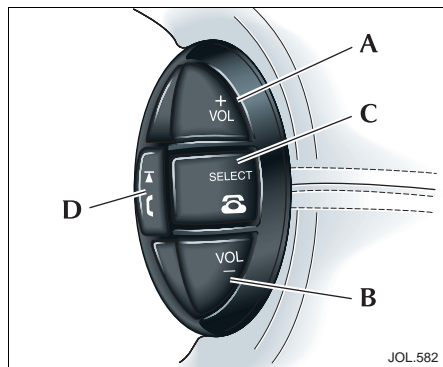

Four control buttons are situated on the left-hand side of the steering wheel. These buttons override the functions of the similar buttons on the audio panel.

- A. Press to increase volume.
- B. Press to decrease volume.
- C. Press and hold to access phone mode. Momentarily press and release to exit phone mode.
- D. Press and release to scroll up to next memory location. Press and hold to send and end a call

Audio panel controls

Volume control and fader

Phone volume can be adjusted from the

audio panel or the steering wheel switches and the volume set is memorised for future calls (this will not alter the other audio volume settings).

To adjust, operate the ON/OFF volume control while the system is in phone mode.

If the audio system is in use when the phone becomes active, the audio system source is suppressed for the duration of the call.

To adjust front /rear fade:

With the system in phone mode, press the audio panel **MODE** button. With **FADE** displayed, use the ON/OFF volume control to set fade to preferred level.



Phone mode

This button will activate the phone in readiness to make a call. The audio panel display will indicate that phone mode has been selected.

This function can also be controlled from the steering wheel (press and hold button C on steering wheel switchpack).



Audio panel key pad

Press digits to enter the required telephone number. Each key press will display the digits on the audio panel.

Also used in **Memory Recall** to enter a location number, or scroll up and down the memory locations.

2-4 Handsfree controls



Clear

Momentarily press to clear the last digit from the entered telephone number.

Press and hold this button to clear all of the digits entered.



Send and end

Press this button to send the entered telephone number. Also used to end a call that is in progress.

This function can also be controlled from the steering wheel, (press and hold button **D** shown on page 3).



CD/Tape

When a call has ended, press this button to cycle through CD, Tape or insert a tape function.

Note: These buttons are inoperative during a handsfree telephone call.



Memory recall

Press to access the phone memory and recall a number. Either a memory location number can be entered from the key pad, or memory locations can be scrolled up and down from the key pad scroll buttons.

This function can also be controlled from the steering wheel, (momentarily press button **D** shown on page 3).

Note: Memory locations can only be scrolled numerically.









Band switches AM and FM

Pressing this button selects radio operation (when a call has ended).

Receiving a call

An incoming call automatically switches the sound system into the phone mode. The audio panel display will show **INCOMING CALL** and ringing is heard through the sound system.

1. **To answer:** press and hold the  switch on the steering wheel or press  or  on the audio panel. **SIG** or **ROAM** is displayed.
2. **To end:** press and hold the  switch on the steering wheel or press  or  on the audio panel.
3. **To exit:** when the call has ended the radio will automatically leave phone mode after two seconds.





 





If the radio, cassette or CD was OFF, the system will return to OFF.

Making a call

When making a call, there are five methods of dialling:

Audio Panel Keypad, Turbo, Memory Recall and last number redial.

Keypad dialling:






1. **To dial:** press and hold the  switch on the steering wheel or press  or  on the audio panel. **PHONE** is displayed for two seconds followed by **SIG** or **ROAM**.
2. Key in the phone number on the audio panel keypad. The number is displayed.
3. **To connect:** press and hold the  switch on the steering wheel or press  or  on the audio panel. When the call is connected the display shows **SIG** or **ROAM**.
4. **To end:** press and hold the  switch on the steering wheel or press  or  on the audio panel.
5. **To exit:** press the  switch on the steering wheel or press a source button, **AM-FM**, **TAPE** or **CD**.

Note: If the steering wheel switch or source button is not pressed within 10 seconds, the audio system will return to the previously selected mode. If the radio,

cassette or CD was OFF, the audio system will return to OFF.

Turbo dialling:





Note: Turbo dialling is only available from the phone memory (buttons 1 to 9).



1. **To dial:** press and hold the  switch on the steering wheel. **PHONE** is displayed for two seconds followed by **SIG** or **ROAM**.
2. On the audio panel keypad, press and hold the required turbo dialling memory location number 1 to 9. After three seconds a beep sounds and the call is placed.
3. **To end:** press and hold the  switch on the steering wheel or press  or  on the audio panel.
4. **To exit:** press the  switch on the steering wheel or press a source button, **AM-FM**, **Tape** or **CD**.

Note: If the steering wheel switch or source button is not pressed within 10 seconds, the audio system will return to the previously selected mode. If the radio, cassette or CD was OFF, the audio system will return to OFF.

3-2 Hands-free operation







Memory recall dialling: (audio panel buttons only)

1. **To dial:** Press and hold the  switch on the steering wheel or press  or  on the audio panel.
PHONE is displayed for two seconds followed by **SIG** or **ROAM**.
2. Press the **MR** button followed by the digits **0 0** on the keypad. The last number dialled is displayed. To access previous dialled numbers, press * or # to scroll.
3. To initiate the call press  on the audio panel.
4. On the audio panel keypad, press the required memory number.

Press the  button (for memory recall location 1) or the  button (for the highest stored location number), then repeatedly press either button to scroll through until you reach the location number you require.

Note: You can key in any number in the Phone Book, then use the arrow keys to scroll up and down.



The memory location number is displayed followed by the location name and then the location phone number.






 


5. **To connect:** press and hold the  switch on the steering wheel or press  or  on the audio panel.
SIG or **ROAM** is displayed when the call is connected.
6. **To end:** press and hold the  switch on the steering wheel or press  or  on the audio panel.
7. **To exit:** press a source button, **AM-FM**, **TAPE** or **CD**.

Note: If the steering wheel switch or source button is not pressed within 10 seconds, the audio system will return to the previously selected mode. If the radio, cassette or CD was OFF, the audio system will return to OFF.

Memory recall dialling: (Steering wheel switches only)

Note: Memory recall dialling **cannot** be achieved by using the **MR** button on the audio panel in conjunction with the steering wheel controls.




1. **To dial:** Press and hold the  switch.
PHONE is displayed for two seconds followed by **SIG** or **ROAM**.
2. Press the  switch.
The lowest occupied location name is displayed, followed by the number.

3. If you require a higher location number, repeatedly press the  switch until you obtain the required number.
The display shows the next occupied location number each time the switch is pressed.
Shortly after the last press, the display shows the location name followed by the number.
4. **To connect:** press and hold the  switch on the steering wheel or press  or  on the audio panel.
SIG or **ROAM** is displayed when the call is connected.
5. **To end:** press and hold the  switch on the steering wheel or press  or  on the audio panel.
6. **To exit:** press the  switch on the steering wheel or press a source button, **AM-FM**, **Tape** or **CD**.




Note: If the steering wheel switch or source button is not pressed within 10 seconds, the audio system will return to the previously selected mode. If the radio, cassette or CD was OFF, the audio system will return to OFF




Last number redial:

Note: Last number redial recalls the phone number of the last handsfree call made since the ignition was switched on. When the ignition is switched off, the last number called is lost from the system memory. The last call made on the handset cannot be recalled during handsfree operation.

1. **To dial:** press and hold the  switch on the steering wheel or press  or  on the audio panel.
PHONE is displayed for two seconds followed by **SIG** or **ROAM**.

Note: If the last number was dialled using keypad dialling, you can change the number by pressing the clear C button. If the last number was dialled using memory recall dialling, you can only scroll through the memory recall numbers, but cannot change them.

2. Press the **MR** button followed by the digits **0 0** on the keypad. The last number dialled is displayed. To access previous dialled numbers, press * or # to scroll.
3. **To connect:** press and hold the  switch on the steering wheel or press  or  on the audio panel.
SIG or **ROAM** is displayed when the call is connected.

4. **To end:** press and hold the  switch on the steering wheel or press  or  on the audio panel.
5. **To exit:** Press a source button, **AM-FM**, **TAPE** or **CD**.

Note: If an audio source button is not pressed within 10 seconds, the audio system will return to the previously selected mode. If the radio, cassette or CD was OFF, the audio system will return to OFF



Short message service (SMS)

Note: In handsfree mode, messages can only be read, they cannot be sent.

If an SMS message is received when the phone is not in use, **MESSAGE** appears for 5 seconds on the lower line of the audio panel display. A tone is then heard and the display reverts to the previous status.

To access the message press **MR** and # on the audio panel keyboard. The message number will then be displayed followed by the text of the message.

If an SMS message is received during a call, on completion of that call, a tone is heard and **MESSAGE** is displayed.

To view previous SMS messages, scroll using the   buttons while **MESSAGE** is displayed on the audio panel.

To exit SMS mode, press the **C/TA** or **CLEAR** button on the audio panel.

Electronic lock feature

For details of the electronic phone lock facility, refer to the telephone manufacturer's handbook.

If the phone is locked, the handset display will show **LOCKED** on entering phone mode. The audio system display will show **PHONE LOCKED** for five seconds and then show **ENTER CODE** before leaving phone mode and returning to the previous mode.

To unlock the phone, enter the unlock code using the handset keypad.

Additional information

Continuity of calls

With a call in progress in hands-free mode, the call remains connected if the vehicle ignition switch is turned to position **O** (OFF). When the call ends, another call cannot be made or received unless the ignition switch is turned to position **I** (auxiliary) or **II** (ignition).

DTMF Tones

While in a call you can transmit DTMF (Dual Tone Multi Frequency) tones, to remotely control equipment such as an answering machine, by keying in the appropriate numbers on the radio keypad. The numbers entered will show on the radio display until the call ends. This feature can be keyed by using either the radio keypad or the phone keypad.

Changing a Phone Number

When making a call, you can change the phone number shown on the audio display using the **C/TA** or **CLEAR** button on the audio panel.

A momentary press erases any single digit, a long press erases the complete number.

Caller Identity option

The caller ID option enables the caller's name to be displayed on the audio panel as the call is being received.

If the cellular provider cannot identify the number **INCOMNG CALL** will be displayed

Note: If the cellular provider caller ID function recognises a number/name in the handset 'Phone Book', the number or name will be displayed on the audio panel. On answering the call, the number or name will be replaced by **SIG or ROAM**.

Index

Audio panel controls

- Audio panel key pad 2-3
- Phone mode 2-3
- Volume control and fader 2-3

General information 1-1

In-car telephone controls

- CD button 2-4
- Clear 2-4
- Display messages 2-2
- Memory recall 2-4
- Phone mode button 2-3
- Send and end 2-4

Introduction 1-1

- Audio panel display 1-1
- Conditions for handsfree operation 1-1
- Phone volume adjustment 1-1
- To remove or install the handset 1-1

Making a call

- Keypad dialling 3-1
- Last number redial 3-3
- Memory recall dialling (radio buttons) 3-2
- Memory recall dialling (steering wheel) 3-2
- Turbo dialling 3-1

Receiving a call 3-1

Safety recommendations

- Antenna care 1-2
- Driving 1-2
- Electronic devices 1-2
- Exposure to radio frequency signals 1-2
- Pacemakers 1-2
- Steering wheel controls 2-3

XJ Series Audio panel controls 2-2

- Display messages 2-2

XK Series Audio panel controls 2-1

- Display messages 2-1

JJM 18 31 18/10