
Valve Cover RH 12.29.44

Removal


1. Open the engine compartment and fit paintwork protection sheets.

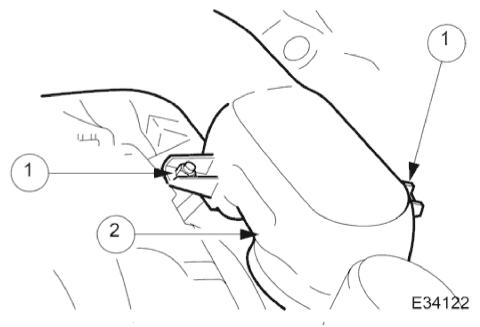

- 2. Disconnect the intake tube from the throttle body.1. Remove the two bolts which secure the intake tube to the throttle body.


1

2. Disconnect the intake tube from the throttle body.

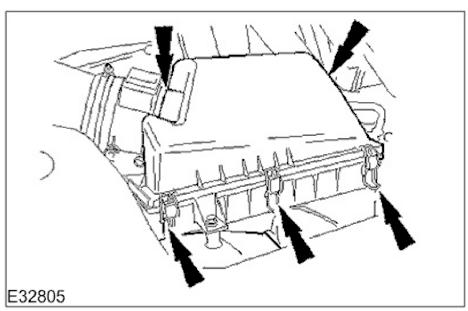


3. Disconnect the air cleaner cover.

- Release the five clips which secure the air cleaner cover.
- 4. Disconnect the air flow meter electrical connector.

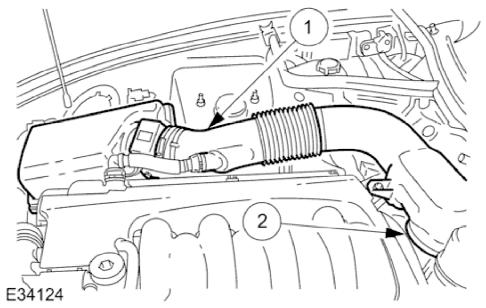


- 5. Remove the intake tube / air flow meter / air cleaner cover assembly.
 - 1. Remove the intake tube / air flow meter / air cleaner cover assembly.
 - 2. Remove and discard the rubber seal; air intake tube to throttle body.
- 6. Carefully remove the right hand engine cover, taking care not to damage the plastic fixings or the rubber inserts.
- 7. Remove the on-plug ignition coils from Bank 1. Refer to Operation 18.20.41.

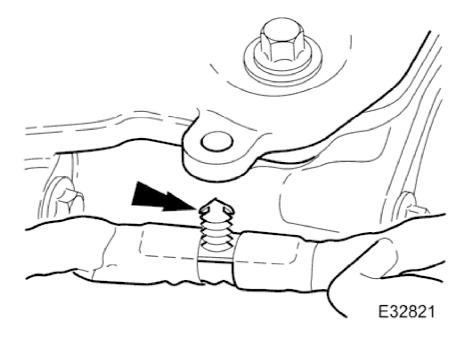


2 2012-01-16

8. Release the clips which secure the engine harness to the cam cover.

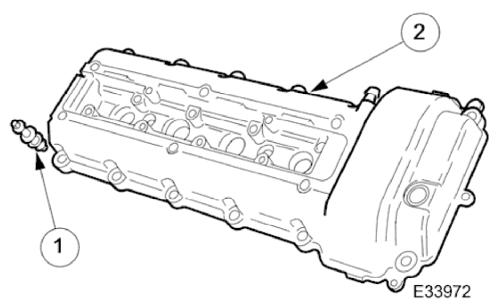


- 9. Remove the cam cover assembly.
 - 1. Release the fourteen screws which secure the cam cover. The screws stay in place within the cover, held by the seals.
 - 2. Remove the cam cover, screws and seals, as an assembly.

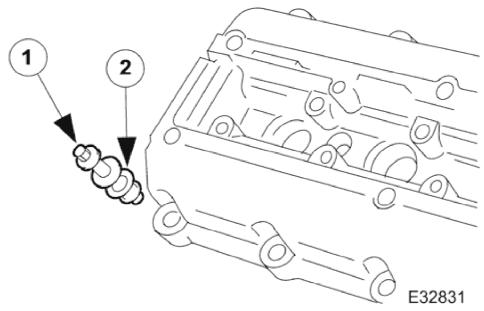


- 10. Separate the screws and seals from the cam cover.
 - 1. One at a time, remove each securing screw from the cam cover.
 - 2. Remove the rubber sealing ring from each securing screw.

3 2012-01-16

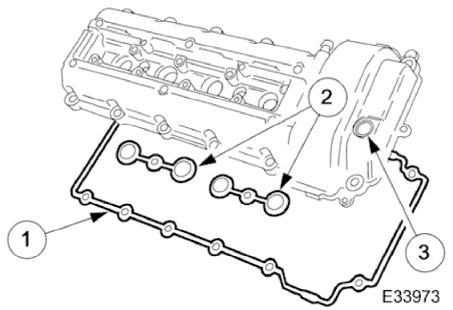


- 11. Remove the main seals from the cam cover.
 - 1. Remove and discard the outer seal.
 - 2. Remove and discard the two seals from around the spark plug apertures.
 - 3. Remove the seal for the VVT solenoid.
- 12. Clean all relevant parts and mating faces.


Installation

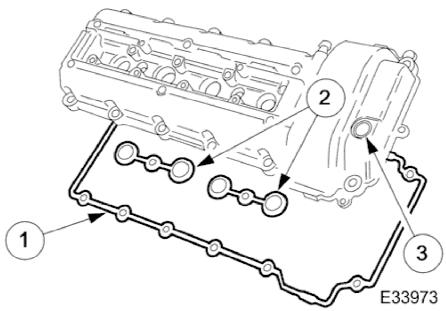

- 1. Install the new main seals to the cam cover.
 - 1. Install the new outer seal.
 - 2. Install the two new spark plug aperture seals.
 - 3. Install the seal to the VVT solenoid apertrure.

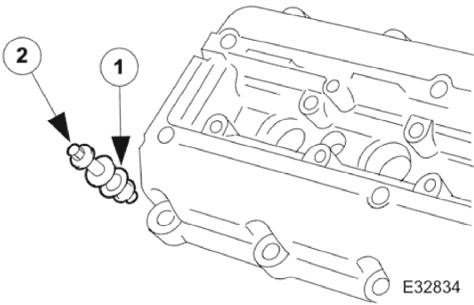


- 2. Install the securing screws to the cam covers.
 - 1. Install a new sealing ring to each screw assembly.
 - 2. Install the screws to the cam covers. Each screw is retained by the cam cover gasket.
 - Refer to the tigtening sequence diagram for details of where to install the studs.

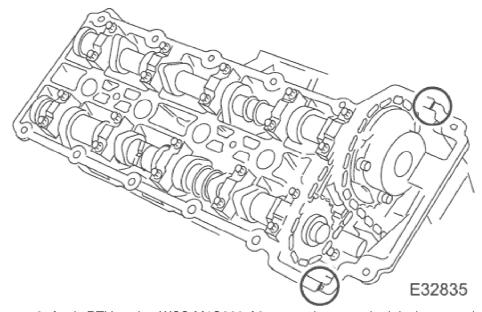


3. Apply RTV sealantWSS-M4G320-A3 to two places on the joint between the timing cover and the cylinder head.

5

- The application of sealant must be 3mm diameter by 12mm long. Install the cam cover immediately after applying the sealant.
- The cover should be installed directly to the head without smearing the sealant.

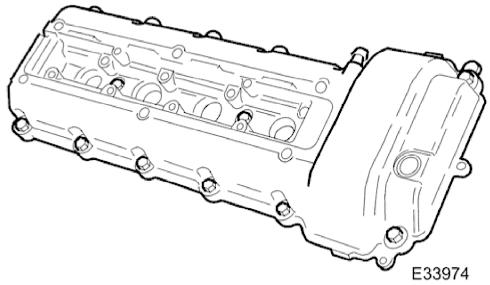


- 4. Install the cam cover.
 - Position the cam cover onto the cylinder head without smearing the sealant and start the threads of each securing screw.

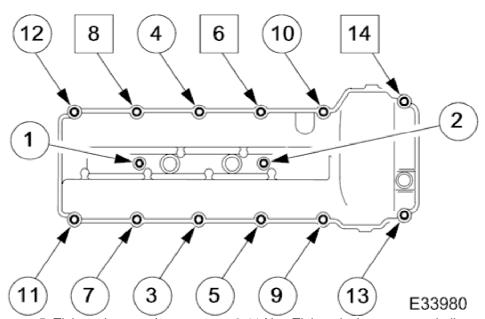


- 5. Tighten the securing screws to 9-11 Nm. Tighten in the sequence indicated.
 - Screws annotated in a square have study to install other components onto, and must be installed in the positions shown.

6

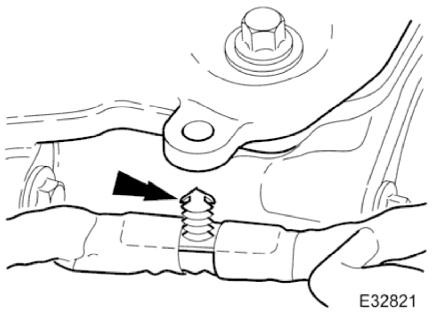


- 6. Reposition the clips which secure the engine harness to the cam cover.
- 7. Install the on-plug ignition coils and the coil cover. Refer to Operation 18.20.41.
- 8. Install the right hand engine cover.

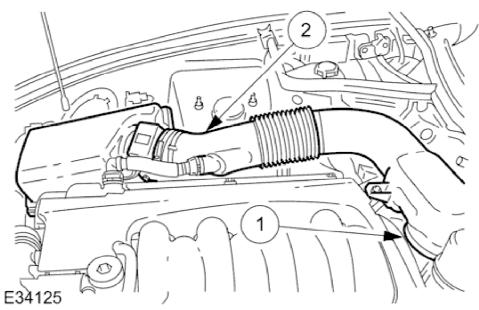


- 9. Install the intake tube / air flow meter / air cleaner cover assembly.
 - 1. Install a new rubber seal; air intake tube to throttle body.
 - 2. Install the intake tube / air flow meter / air cleaner cover assembly.

7 2012-01-16

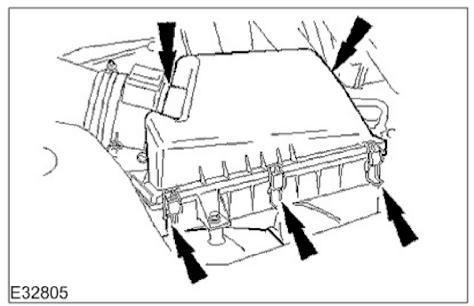

- 10. Reconnect the air cleaner cover.
 - Install the five clips which secure the air cleaner cover.

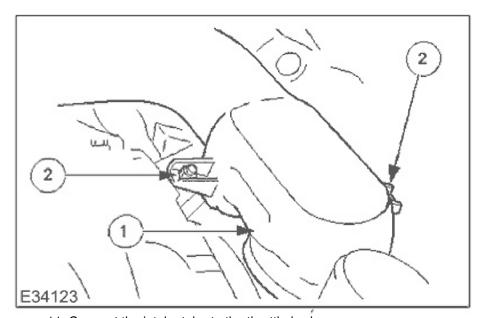

- 11. Connect the intake tube to the throttle body.
 - 1. Connect the intake tube to the throttle body.
 - 2. Install the two bolts which secure the intake tube to the throttle body.
- 12. Reconnect the air flow meter electrical connector.
- 13. Remove the paintwork protection sheets and close the engine compartment.

8