



E33338

**Engine Management Fuse Box**

Fuse No	Rating (amps)	Circuit
1	20	Adaptive damping
2	15	Intercooler water pump (Supercharger)
3	25	Starter solenoid.
4	5	Engine control module.
5	10	Fuel injectors.
6	5	Transmission control module
7	-	Not used.
8	10	Air conditioning compressor clutch.
9	30	Throttle motor.
10	5	Engine control module, Park/Neutral switch, cruise control VSV 1 and 2 (where fitted), EGR valves.
11	-	Not used.
12	10	Air flowmeter, VVT solenoids.
13	-	Not used.
14	10	HO2S sensor heaters (where fitted), EVAP valve, ignition coils relay, throttle motor relay, AC compressor clutch relay, radiator fans control module, CCV.
15	30	Windscreen left-hand heater.
16	5	Control module compartment cooling fan.
17	30	Windscreen right-hand heater.
18	10	Ignition coils, ignition amplifier.