


Fuse Box Details

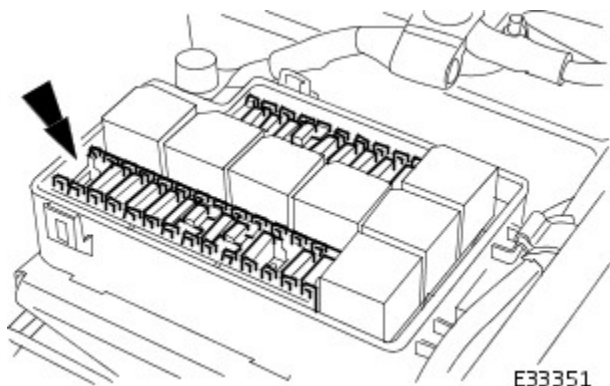

E33351

Engine Compartment Fuse Box

Fuse No	Rating (amps)	Circuit
1	10	Transmission control module.
2	5	Screen heaters relay, alternator regulator.
3	10	Security sounder, headlamp levelling, ignition coils +Ve, fog lamp switches.
4	5	ABS control module.
5	10	Adaptive damping, starter relay coil, engine management control module and relays.
6	10	Right-hand low beam headlamp.
7	30	Power wash pump.
8	10	Left-hand low beam headlamp.
9	10	Security sounder.
10	-	Not used.
11	10	Right-hand horn.
12	30	Radiator cooling fans series/right-hand fast.
13	10	Left-hand horn
14	30	Cooling fans left-hand fast.
15	10	Air conditioning coolant pump.
16	30	ABS pump control.
17	15	Front fog lamps.
18	30	ABS pump motor.
19	10	Right-hand high beam headlamp.
20	-	Not used.
21	10	Left-hand high beam headlamp.
22	30	Wiper motor.