



E33341

Heelboard Fuse Box - Left hand side

Fuse No	Rating (amps)	Circuit
1	20	Right-hand seat control module.
2	5	Rear window switchpack, driver door key barrel, driver door switchpack and memory.
3	5	Dimmer module.
4	5	Diagnostic connector.
5	15	Body processor module.
6	5	Centre console switchpack, reader exciter ECM
7	15	Body processor module (battery supply for solenoids, lamps and motors).
8	5	Steering column adjust switch, driver seat switchpack.
9	10	Radio/cassette head unit.
10	5	Airbag/SRS
11	20	Air conditioning left-hand blower motor.
12	10	Door mirror heaters relay, air conditioning, blower motor relays, power steering control module.
13	25	Left-hand rear window
14	10	Cruise control switch, instrument cluster, catalytic converter over temperature warning.
15	25	Left-hand door control module.
16	5	Electrochromic interior mirror (where fitted), centre console switchpack, gear selector, traction control switch illumination, J-gate mode switch illumination, pins A9 and D8 trunk fusebox.
17	10	Accessory supply.
18	5	Instrument cluster.