



Trunk Fuse Box

Fuse No	Rating (amps)	Circuit
1	10	Security and locking control module (Reversing lamps, rear fog lamps, stop lamps, electrochromic mirror).
2	5	Fuel filler flap.
3	5	In-car entertainment (Radio ON with key in ACC)
4	5	E-post reading lamps, Radio telephone (Key in ACC)
5	25	Cigar lighters (Key in ACC)
6	-	Not used.
7	20	Fuel pump.
8	10	High mounted stop lamp, caravan/trailer stop lamps
9	10	Antenna motor.
10	10	Security and locking control module (trunk release, caravan/trailer direction indicators, fuel filler flap relay).
11	10	Accessory sockets.
12	15	In-car entertainment power amplifier.
13	-	Not used.
14	-	Not used.
15	20	Fuel pump (supercharger, where fitted).
16	20	Caravan/trailer connector.
17	25	Heated rear screen.
18	20	Rear seat movement.
19	5	Right-hand side lamps, left-hand and right-hand number plate lights, caravan/trailer.
20	20	Rear seat movement.
21	5	Left-hand side lamps, left-hand and right-hand sidemarker lights, caravan/trailer.
22	5	Radio telephone permanent 12V.