


Exterior Driver Door Handle 76.58.07

Removal


1. Motor door glass to fully up position.
2. Remove battery cover and disconnect ground cable from battery terminal. Refer to <<86.15.19>>.
3. Remove door casing veneer panel. Refer to <<76.47.11>>.
4. Remove door casing for access. Refer to <<76.34.01>>.

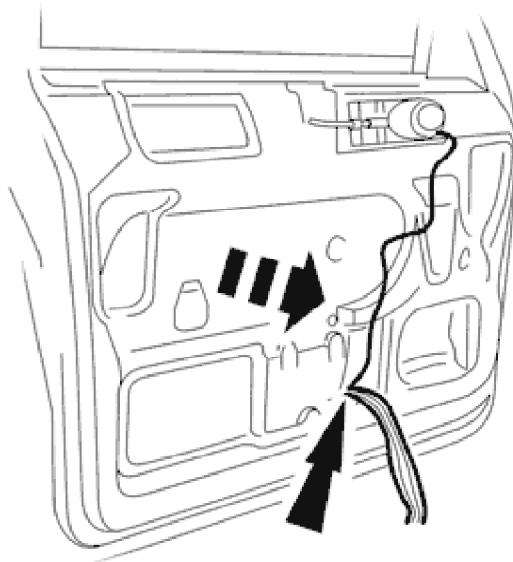

E36273


5. Feeding electrical harness through water shedder, carefully peel shedder from door and place adhesive face down on a clean dry polythene sheet.
6. Position PVC inner sheet for access.

1998 XJ RANGE - Handles, Locks, Latches and Entry Systems - 501-14

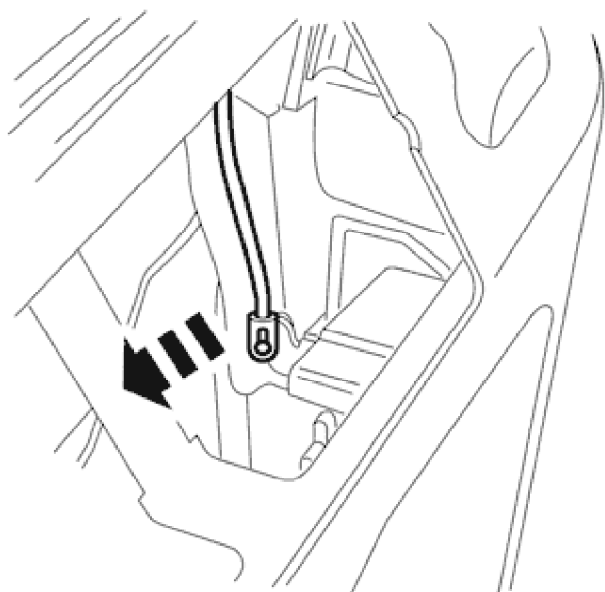

E36274


7. Disconnect outer handle link rod from lock assembly.

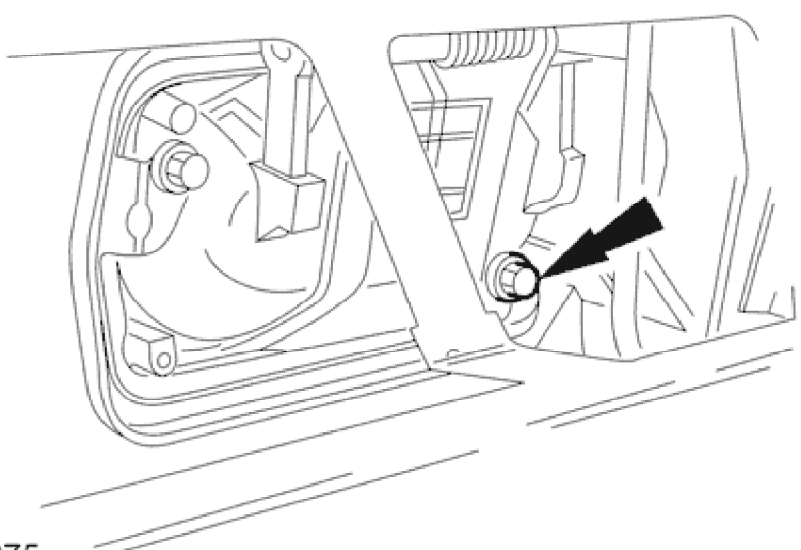

E36275


8. Slacken and remove outer handle rear securing bolt.

1998 XJ RANGE - Handles, Locks, Latches and Entry Systems - 501-14

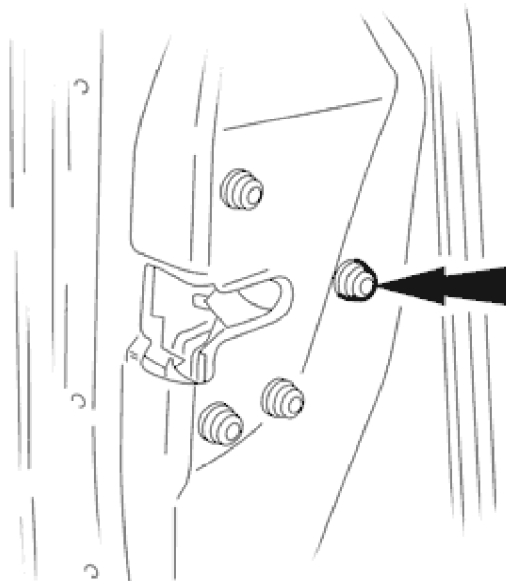

E36276


9. Slacken and remove security guard lower securing bolt and remove guard from door.

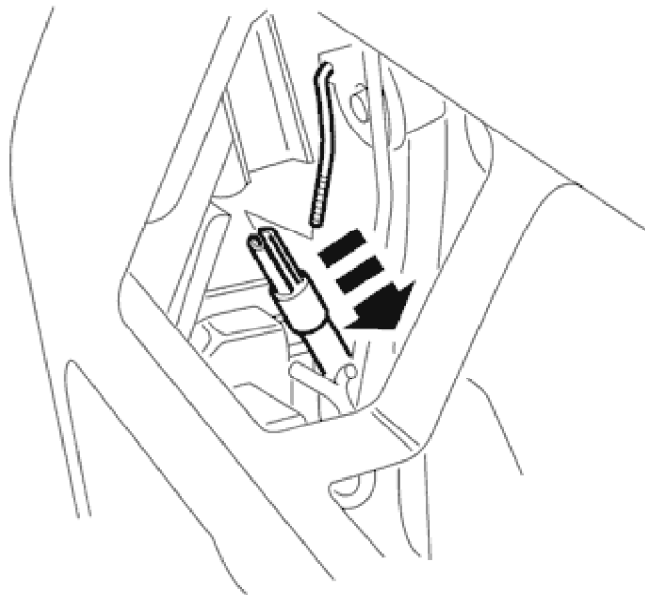

E36277


10. Pull door barrel to lock link rod locking collar downward to release link rod.

1998 XJ RANGE - Handles, Locks, Latches and Entry Systems - 501-14

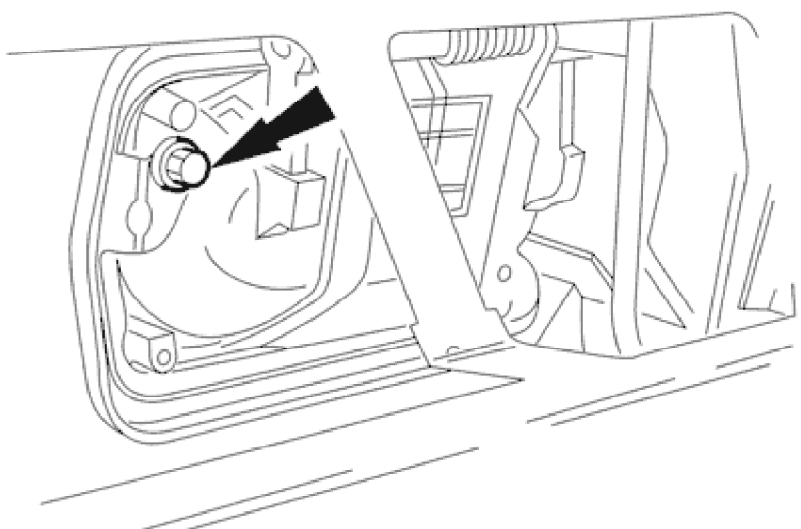


E36278

11. Holding handle firmly in position, slacken and remove front securing bolt and remove handle assembly from door.

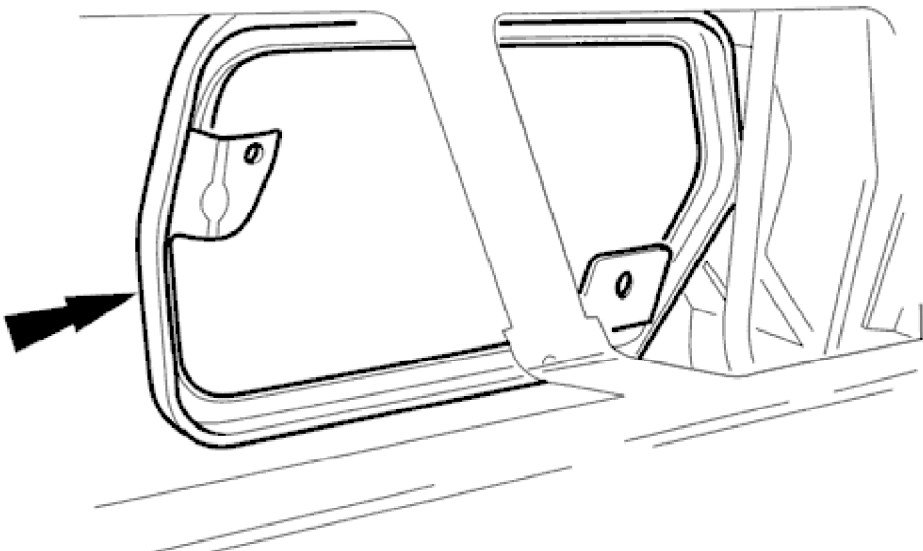


E36284

12. Remove door handle clamping plate.

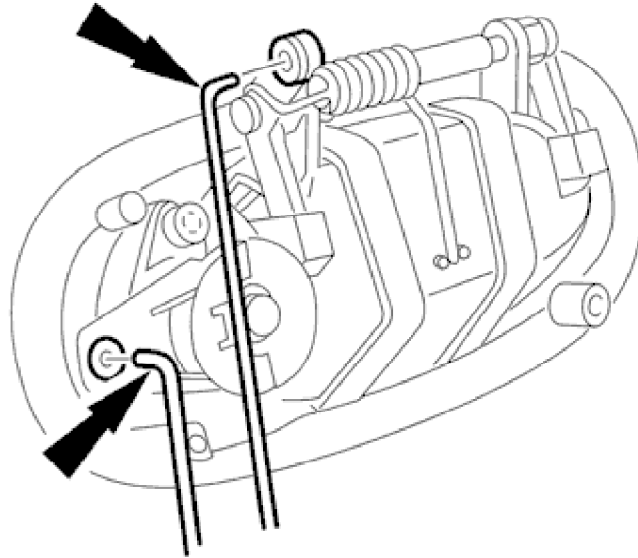

E36285

13. Remove link rods from door handle assembly.

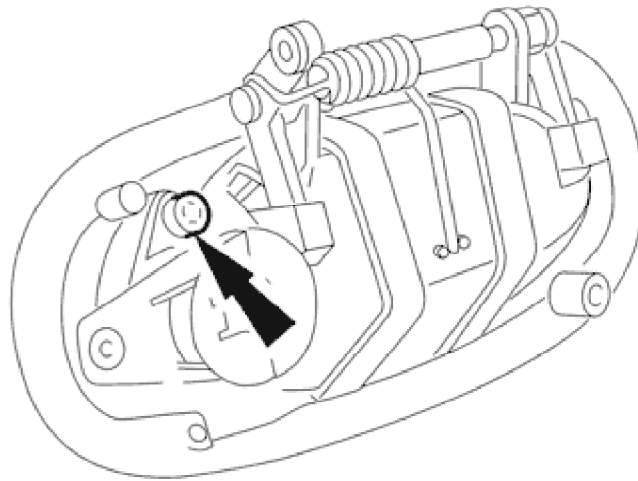

E36286

14. Slacken and remove lock barrel securing screw and remove lock barrel from handle.

Installation

1. Align and fit lock barrel to door handle and fit and tighten securing screw.
2. Fit link rods to door handle assembly.

1998 XJ RANGE - Handles, Locks, Latches and Entry Systems - 501-14

3. Align and fit handle assembly to door
4. Position clamping plate inside door, and holding handle in position, fit and tighten securing bolts.
5. Position barrel link rod on lock assembly and secure with locking collar.
6. Check for satisfactory door handle operation.
7. Slacken and remove door handle rear securing bolt.
8. Position door lock security guard and fit and hand tighten lower securing bolt.
9. Fit and tighten door handle rear/security guard upper securing bolt.
10. Fully tighten security guard lower securing bolt.
11. Connect lock link rod to door handle.
12. Reposition PVC inner sheet.
13. Connect ground cable to battery terminal. Refer to <<86.15.15>>.
14. Check for satisfactory operation of locking system
15. Disconnect ground cable from battery terminal. Refer to <<86.15.15>>.
16. Ensure that shedder contact area of door is clean and dry.
17. Position water shedder at door and carefully pass harness through.
18. Fit and firmly seat water shedder on door ensuring satisfactory adhesion.
19. Fit door casing. Refer to <<76.34.01>>.
20. Fit door casing veneer panel. Refer to <<76.47.11>>.
21. Connect ground cable to battery terminal and fit battery cover. Refer to <<86.15.15>>.