


Spark Plugs 18.20.02

Removal


1. Disconnect battery ground cable (IMPORTANT, see SRO <<86.15.19>> for further information).
2. Remove air intake tube / meter / air cleaner cover for access; refer to 19.10.30.
3. Remove ignition coils; refer to 18.20.41 (bank 1) and 18.20.42 (bank 2).

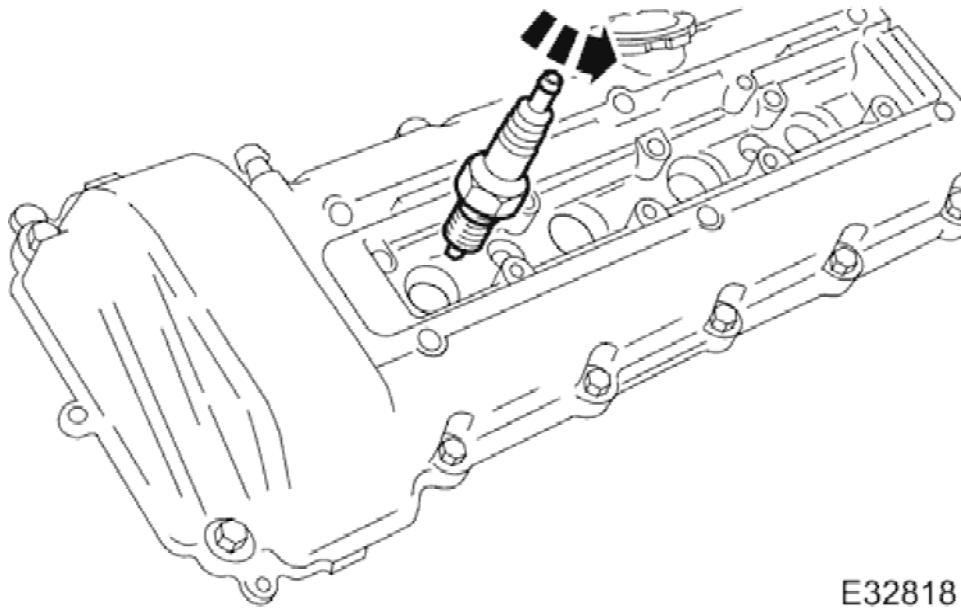

E32818


4. Remove spark plugs.
5. Clean all components as necessary.

Installation

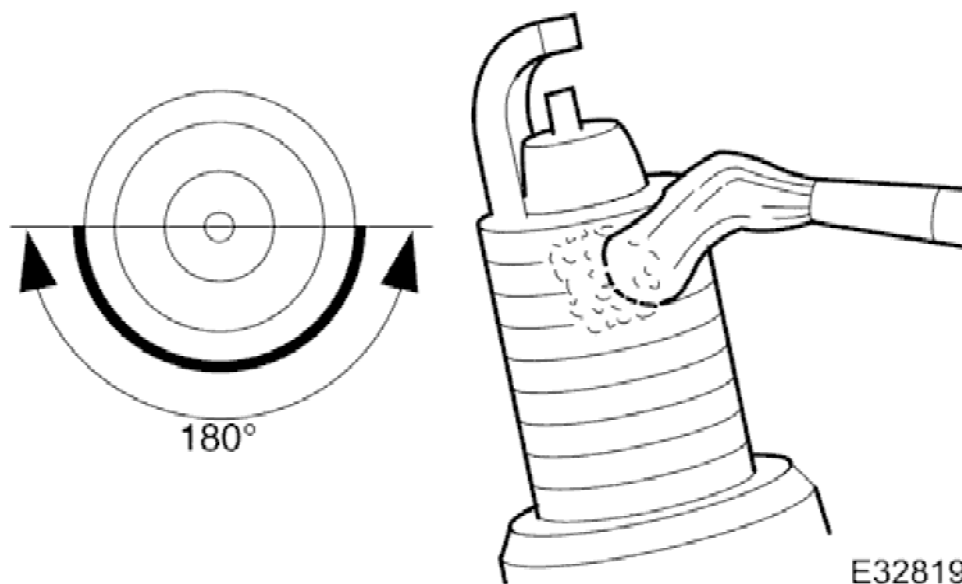

1. Installation is a reversal of the removal procedure.

- Check electrode gap is to the correct specification. Refer to the Specification Section and current Service Bulletins.
- Apply suitable lubricant e.g. Neverseaz Compound, to lower four threads of spark plug(s) adjacent to the electrodes.
- The lubricant must be applied to full thread depth for at least 180° of the thread circumference.
- The electrodes must not be contaminated during this process.

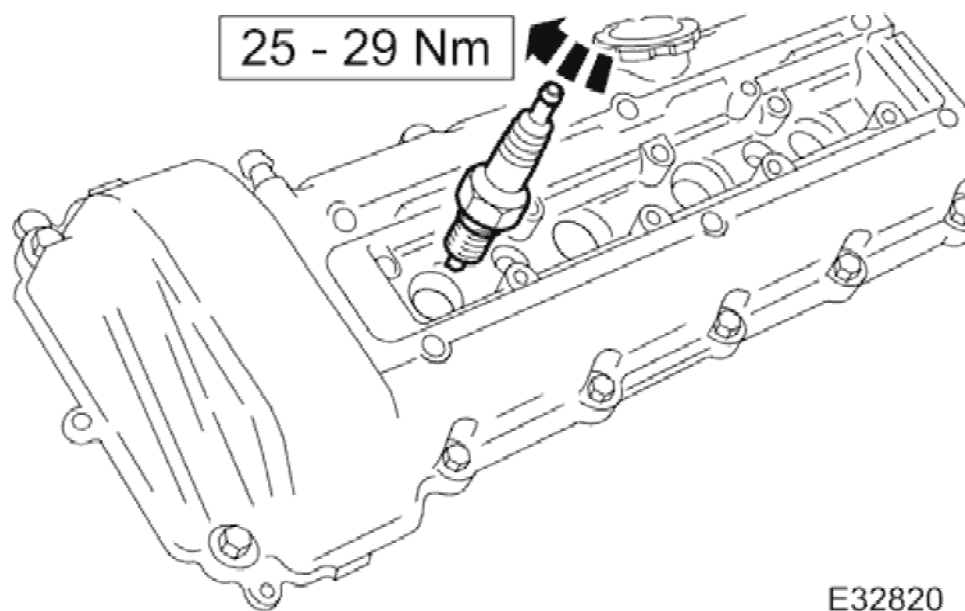

2.