


# 1998 XK RANGE - Automatic Transmission/Transaxle External Controls - Vehicles With

## Selector Lever Indicator Assembly 44.15.14


### Removal

1. Open the driver's door, or both doors if necessary, to allow the side glass to drop. Ensure that the doors remain open until after the battery has been disconnected.

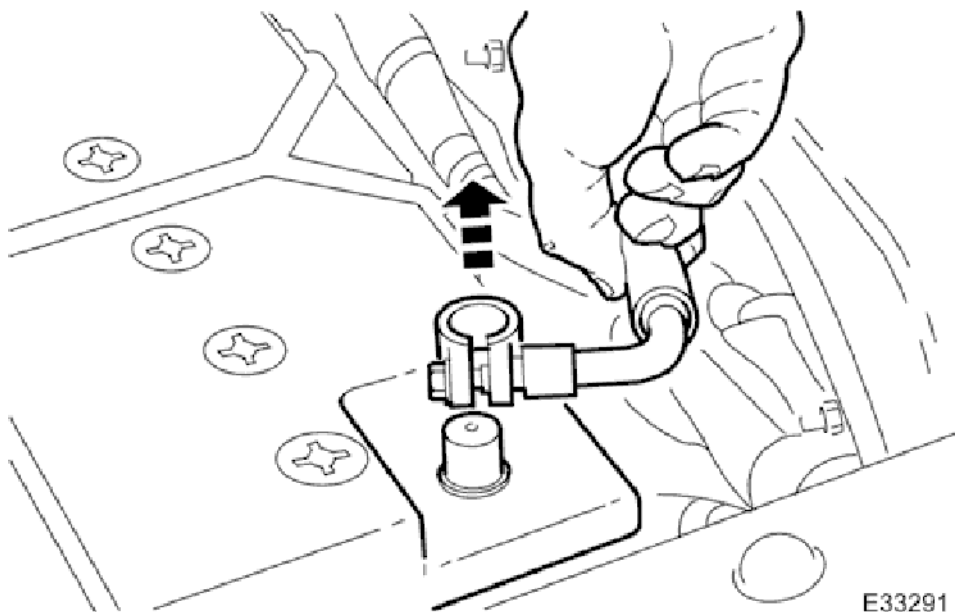


2. Disconnect battery ground cable.
  - Remove the battery cover.
3. Remove the selector lever knob, <<44.15.06>>.
4. Remove the J-gate surround, Section <<501-05>>.
5. Remove the console finisher veneer panel, Section <<501-12>>.

## 1998 XK RANGE - Automatic Transmission/Transaxle External Controls - Vehicles With

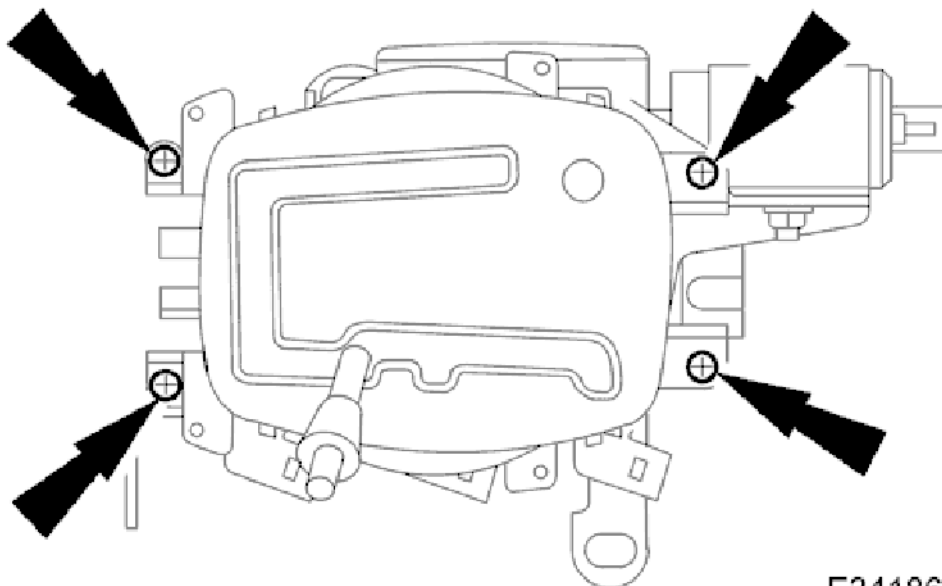

E34186

6. Remove the selector indicator module screws.

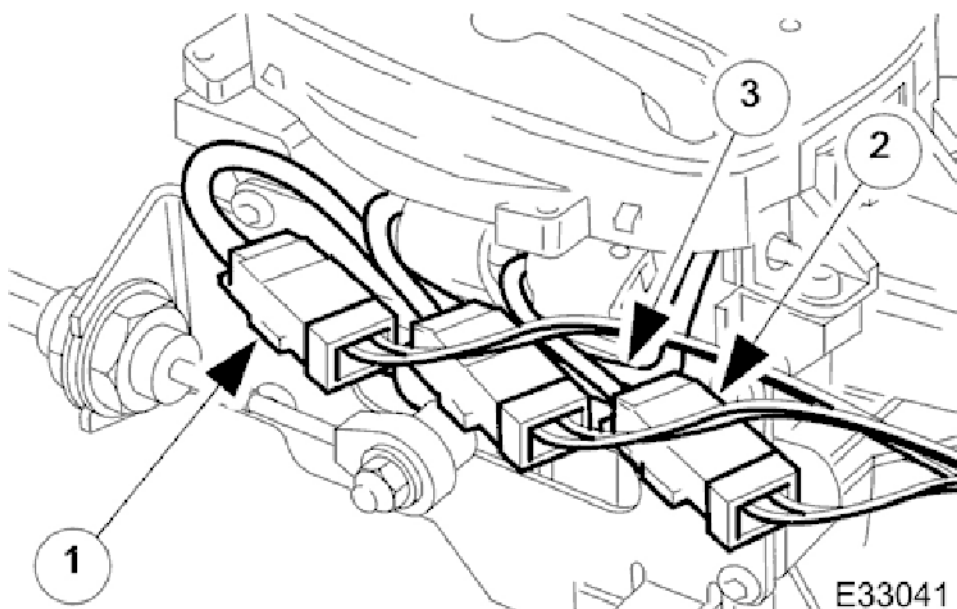

E33041

7. Remove the selector indicator module.

1. Free the D to 4 switch harness multiplug from the mounting bracket and disconnect the multiplug.
2. Displace the P switch multiplug from the mounting bracket.
3. Route the D to 4 harness from under the P switch harness.

### Installation

1. Installation is the reverse of the removal procedure

## 1998 XK RANGE - Automatic Transmission/Transaxle External Controls - Vehicles With

2. Perform the Battery Reconnection Procedure described in Operation <<86.15.15>>.

### Selector Lever Indicator Disc 44.15.15