

Fig. 19.1

COMPONENTS

Component

PARKING AID CONTROL MODULE

PARKING AID SENSOR – LH

PARKING AID SENSOR – CENTER LH

PARKING AID SENSOR – RH

PARKING AID SENSOR – CENTER RH

PARKING AID SOUNDER

Connector / Type / Color

RB1 / 12-WAY / WHITE

BT71 / 16-WAY / WHITE

RB2 / 3-WAY AMP MICRO QUAD LOCK / BLACK

RB3 / 3-WAY AMP MICRO QUAD LOCK / BLACK

RB5 / 3-WAY AMP MICRO QUAD LOCK / BLACK

RB4 / 3-WAY AMP MICRO QUAD LOCK / BLACK

BT70 / 2-WAY / WHITE

Location / Access

TRUNK / LH REAR

REAR BUMPER

REAR BUMPER

REAR BUMPER

REAR BUMPER

CENTER REAR HEADLINING

GROUND

Ground

BT21L

Location / Type

EYELET (PAIR) – TRUNK / RH REAR GROUND STUD

XJ Series (From (V)812317 to (V)F59525)/INFORMATION SYSTEMS AND CONTROLS/PARKING AID ▾

PARKING AID ▾   

No		Description	Price \$	Qty	
1	+	Reversing aid module			
2	+	Sensor			
3	+	Sensor holder			
4	+	Reversing aid speaker			
5	+	Edge clip			
6	+	Bumper harness			
7	+	Drive fastener			

