 





NOTE: 'Crank' Input is used to switch off interior lamps during engine cranking.

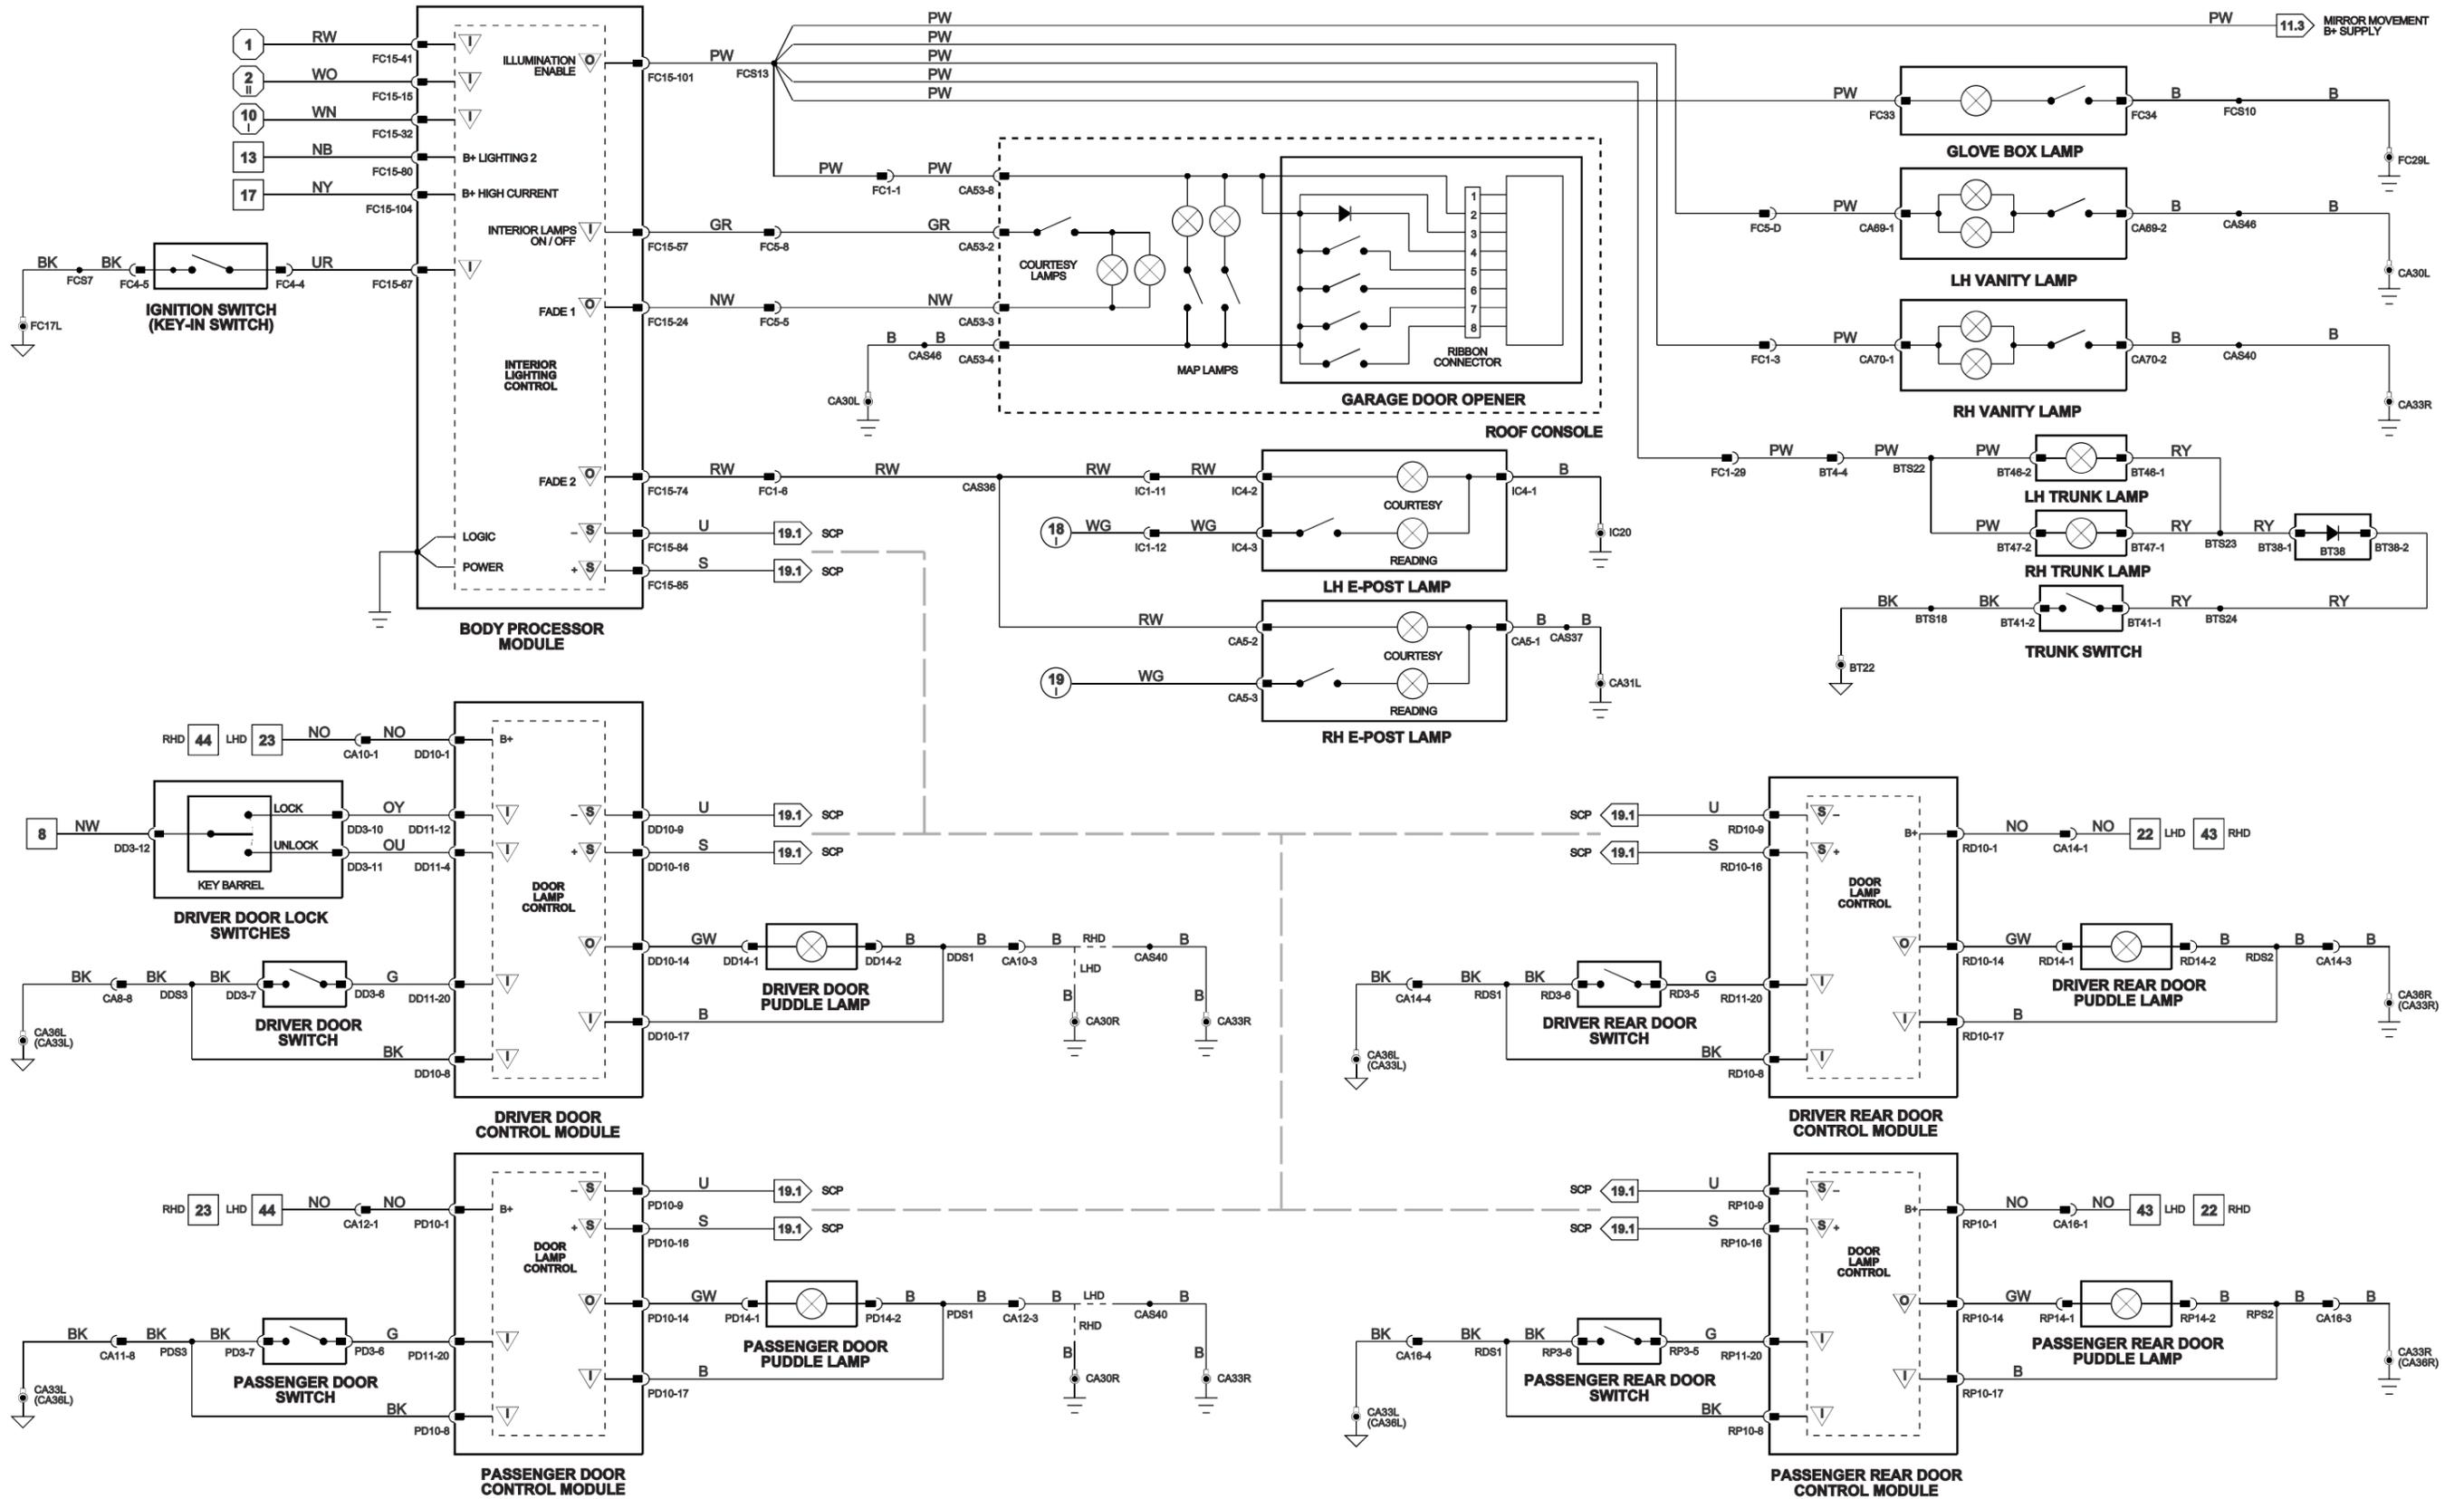

VARIANT: All Vehicles
 VIN RANGE: All
 DATE OF ISSUE: SEPTEMBER 1997