



Exterior Lighting - Brake Pedal Position (BPP) Switch

Removal and Installation

Removal

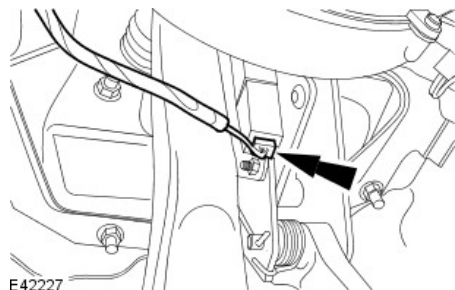

E42227

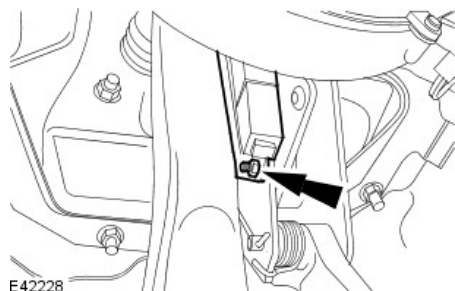


E42228

1. Disconnect the brake pedal position (BPP) switch electrical connector.

2. Remove the BPP switch.


Installation

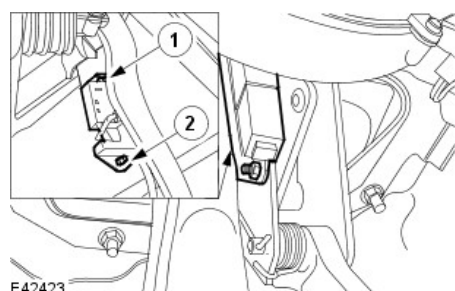

E42423

1. Press and hold down the brake pedal.

2. CAUTIONS:

 Make sure the brake pedal is held clear of the BPP switch ratchet mechanism during installation. Failure to follow this instruction may result in incorrect adjustment of the BPP switch.

 Make sure the BPP switch is correctly installed to the upper locating point.

Install the BPP switch.


1. Align the BPP switch to the upper locating point.

2. Install the BPP switch.


3. Release the brake pedal.

4.  CAUTION: Make sure the brake pedal is fully raised. Failure to follow this instruction may result in incorrect adjustment of the BPP switch.

Fully raise the brake pedal.

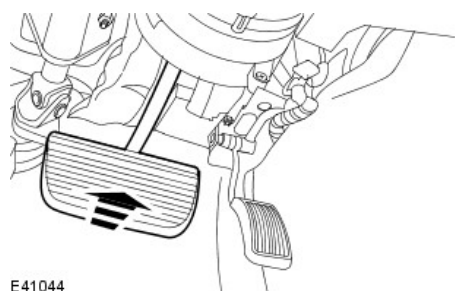

E41044

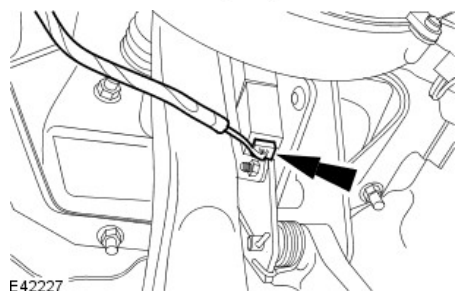

E42227

5. Connect the BPP switch electrical connector.