

Fig. 10.129 XJS wiring diagram – fuel injection

- | | |
|---------------------------------|---|
| 1 Pressure sensor | 13 Cold start relay |
| 2 Power amplifier | 14 Electronic control unit |
| 3 Air temperature sensor | 15 Battery |
| 4 Coolant temperature sensor | 16 Main relay |
| 5 Thermotime switch | 17 Pump relay |
| 6 EGR thermo switch (if fitted) | 18 Fuel pump |
| 7 Cold start valve | 19 EGR control unit |
| 8 Cold start valve | 20 Axle solenoid |
| 9 EGR valve | 194 Starter solenoid ballast resistor relay |
| 10 EGR valve | 250 Fuel cut-off inertia switch |
| 11 Trigger unit | 1A to 6B Fuel injectors |
| 12 Throttle switch | |