

REMOTE CONTROL TRANSMITTERS – MAINTENANCE

The remote control unit transmitter fits onto a key ring; keep the spare remote control transmitter with the vehicle spare keys. It is programmed to match the receiver in the vehicle. If the unit is lost or additional units required they can be purchased 'off the shelf' and programmed to match the receiver.

When the remote control unit's range deteriorates the battery is probably exhausted: batteries are available from a Jaguar Dealer.

To replace the battery:

- (a) Remove the remote control unit from key ring
- (b) Remove the four screws securing the two halves of the unit together (1, Fig. 2)
- (c) Remove the old battery and insert the new battery in the same plus-minus direction (2, Fig. 2)
- (d) Replace the battery compartment lid and secure

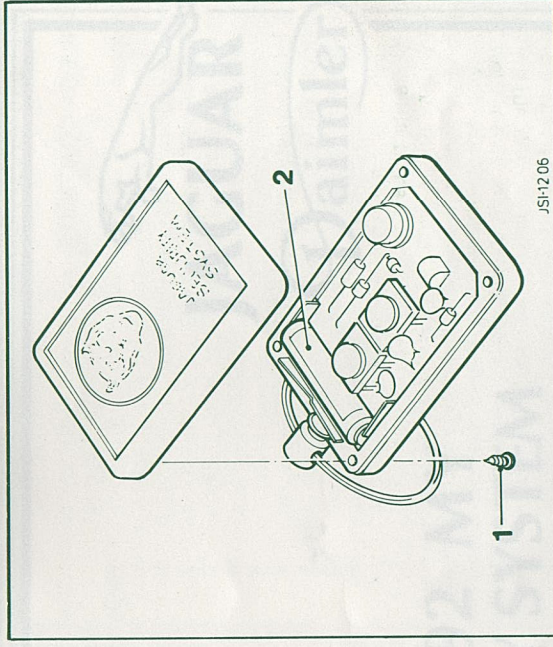


Fig. 2