

BATTERY BACK-UP

Battery back-up will frustrate efforts of thieves to deactivate the system by cutting or disconnecting the vehicle's battery cable. Such an attempt will cause the alarm to sound. The alarm will continue until the battery is reconnected and the system is disarmed. The battery back-up module houses one 6 volt battery available from a Jaguar Dealer. This battery should be replaced about once a year or when sounded for more than a few minutes.

CONVENIENCE FEATURES

Panic Button

If when occupying or in close proximity to the vehicle, the alarm needs to be activated for any reason, hold down the button on the remote control unit for three seconds, with the ignition in the 'off' position. The alarm will sound for ten minutes unless cancelled by either holding down the remote control transmitter button for greater than seven seconds or by turning the ignition 'on'.

Headlamp Convenience

If the remote control unit button is pressed within three seconds after it is pressed to actively arm the system, the headlamps will illuminate for 25 seconds. This facility can be useful for unlocking garage doors etc.

Valet Switch

A valet switch (1, Fig. 1) is used to disable the system when the vehicle is being valet-parked or taken in for service. The L.E.D. status indicator flashes rapidly when in the valet mode (so that a would-be offender will assume the system is armed), and when a door is opened four tones will sound as a reminder that it is on. The system will not arm and the valet reminder tones will be heard instead of the arm or disarm chirps. If the valet switch is switched on with the system already armed, the alarm will be triggered.

Convenience features can be operated even with the valet switch on.

Door Open Indicator

If the ignition is on and a door is opened, the L.E.D. will flash rapidly as an alert to the driver.