

BASIC OPERATION

Setting (arming) the system using the remote control transmitter (Active arming)

On leaving the vehicle, simply press the remote control transmitter button (Fig. 1). The system will then arm and the following will happen:

A single chirp from the siren speaker will be heard as an audible arm indication.

The side lights will flash once with the arm chirp as a visual arm indication.

The L.E.D. status indicator in the vehicle will begin to flash as a visual deterrent (2, Fig. 1)

The door and boot locks will lock.

NOTE: The L.E.D. status indicator is fitted on the steering cowl right-hand side for right-hand drive vehicles; left-hand side for left-hand drive vehicles.

The system will not arm with the remote control unit when conditions are as follows:

- (a) A door has not been closed.
- (b) The doors have been closed but the boot is open.
- (c) The system is in the valet mode (see heading 'Valet Switch').

A 'warble' error note will be heard to give a warning that to arm the system for instant alarm is not possible.

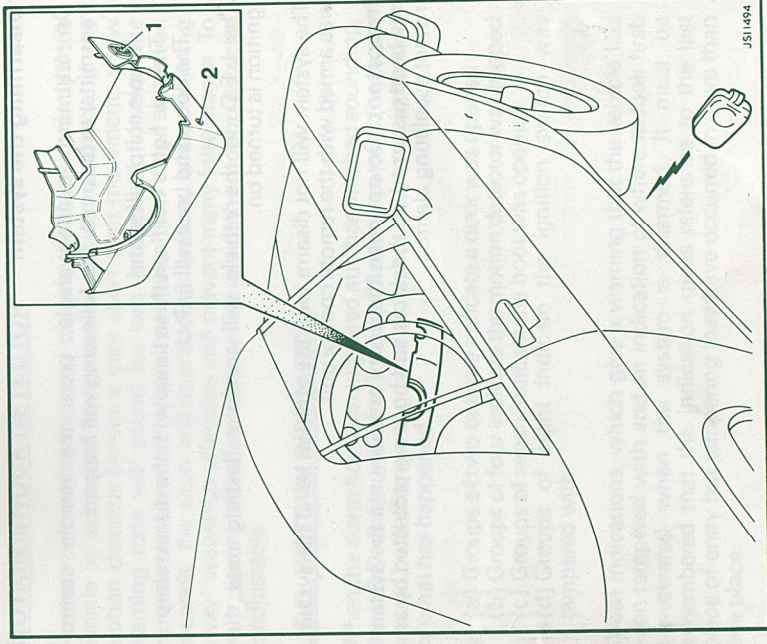


Fig. 1