

Disarming the system

On returning to the vehicle, press the remote control transmitter to disarm it. The following will happen:

A triple chirp will sound

The side lights will flash three times with the disarm chirp

The doors and boot will unlock

The L.E.D. in the vehicle will continue flashing until the ignition is turned on.

The system will not disarm with the ignition key if the system was armed with the remote control unit.

Important: Do not open the doors or boot until the system has been disarmed, as the doors and boot are protected by an instant escalating alarm.

AUTOMATIC (PASSIVE) ARMING

This feature is optional. Please consult the Dealer who will connect this feature if it is desired.

Arming the system

If the vehicle is left unattended, the system will automatically arm 30 seconds after the last door or the boot is closed. The following will happen:

A single "chirp" will sound

The L.E.D. status indicator (2, Fig. 1) in the vehicle will begin to flash, once per second, continuing as long as the system is armed.

NOTE: The system will not arm if:

- (a) A door has not been closed
- (b) The doors have been closed but the boot is open
- (c) The system is in the valet mode (see heading 'Valet Switch')
- (d) The ignition is on or in the accessory position

Please note that in order to avoid the situation of having the keys and remote control unit accidentally locked in the vehicle, the doors and boot are not locked in the passive arming mode. Therefore the vehicle will not be as well protected as when actively armed with the remote control transmitter.