

Fig. 6

Position the ECU assembly to the vehicle and connect the link harness multi-plugs to the vehicle harness (1, Fig. 6).

Fit and align the ECU assembly onto the rear lamp securing studs ensuring that the ECU is pointing downwards.

Tighten the securing nuts.

Using the ratchet straps provided, secure the link harness to the radio aerial antenna housing, ensuring that the link harness fuse is accessible (2, Fig. 6).

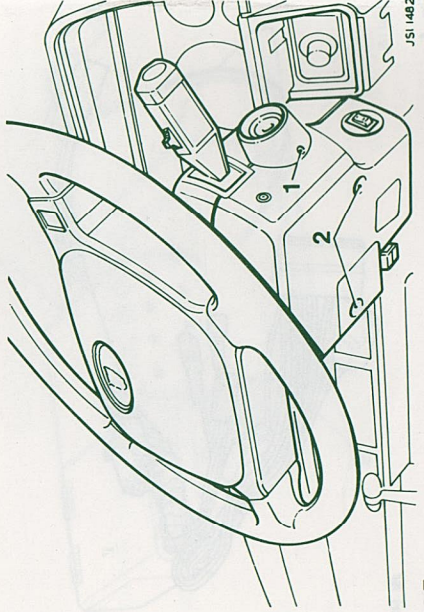


Fig. 7

Open the drivers door.

From inside the drivers compartment, undo and remove the securing screws from the ignition lock surround and the opposing blank (1, Fig. 7).

Undo and remove the two securing screws (2, Fig. 7) from the underside of the lower steering column cowl and remove the cowl.