



Brake Pads - Vehicles With: High Performance Brakes (70.40.02)

Removal


- 1 . Raise and support the vehicle.
- 2 . Remove the front road wheels and tires.
For additional information, refer to Wheel and Tire (74.20.05)

- 3 . Apply protective tape to the caliper.

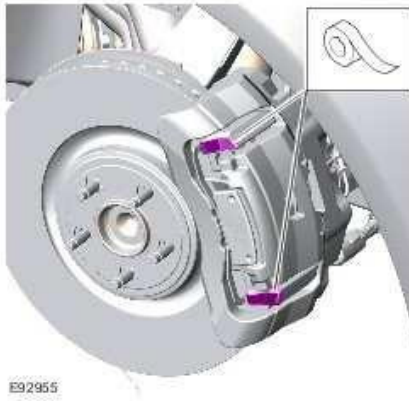

- 4 .  **CAUTION: Removal of the clips is a delicate procedure, damage will occur if any force is used.**

Apply heatshrink or protective tape to the end of the screw-driver.

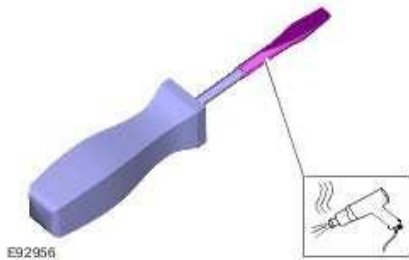


5



CAUTION: Removal of the clips is a delicate procedure, damage will occur if any force is used.

Remove the anti-rattle spring.

- ▶ Lever the anti-rattle spring in the center of the spring until either side is released.

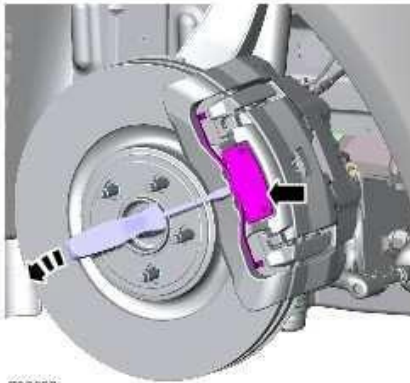


6



CAUTION: Do not allow the brake caliper to hang on the brake hose.


Remove the brake caliper.

- ▶ Remove the 2 access plugs.
- ▶ Remove the 2 caliper guide pins.
- ▶ Tie the brake caliper aside.

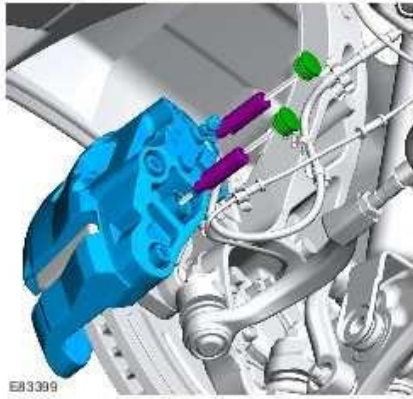

7 . Release the inboard brake pad from the caliper.

▶ Release the clip.

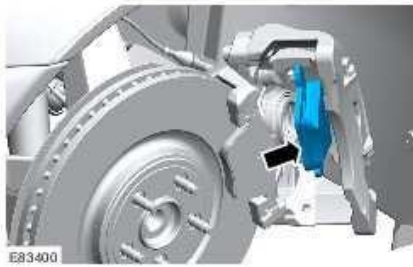

8 . Remove the outboard brake pad.

