


Front Door Trim Panel (76.34.01)

Removal


1 . Remove the exterior mirror trim panel.

- ▶ Release the 3 clips.
- ▶ Disconnect the electrical connector.

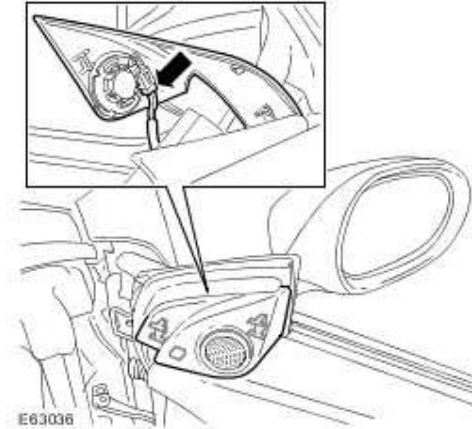

2 . Release the front door trim panel.

- ▶ Remove the bolt cover.
- ▶ Remove the 3 Torx bolts.
- ▶ Release the 16 clips.

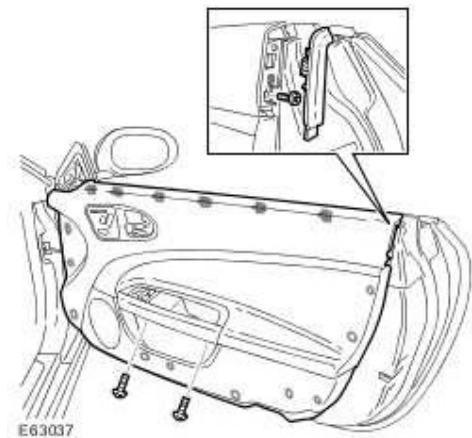


3 . NOTE:

Do not disassemble further if the component is removed for access only.


Remove the front door trim panel.

- ▶ Release the front door interior handle cable.
- ▶ Disconnect the 2 electrical connectors.

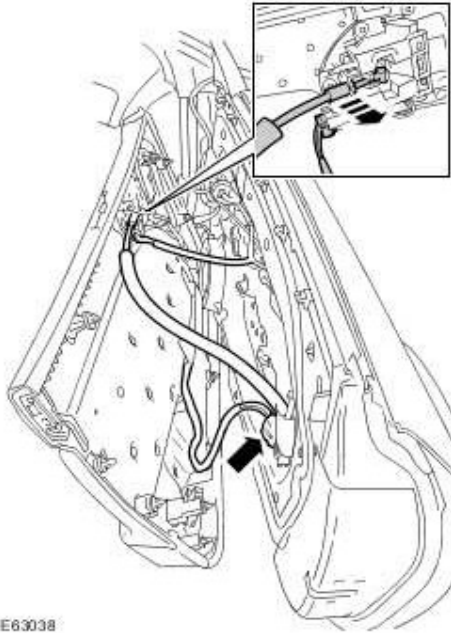

4 . Remove the front door latch remote control handle.

- ▶ Release from the 5 clips.

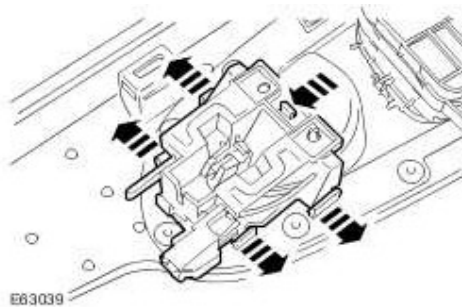


5 . Remove the grab handle cover.

- ▶ Release from the 6 clips.

Exterior Mirror (76.10.52)

Removal

- 1 . Remove the front door trim panel.
For additional information, refer to [Front Door Trim Panel \(76.34.01\)](#)
- 2 . Remove the exterior mirror.
 - ▶ Disconnect the 2 electrical connectors.
 - ▶ Release the 2 wiring harness clips.
 - ▶ Remove the 3 Torx bolts.

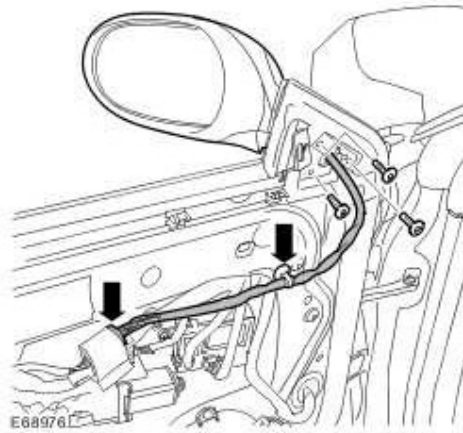

Installation

- 1 . Install the exterior mirror.
 - ▶ Tighten the Torx bolts to 10 Nm (7 lb.ft).
 - ▶ Secure the wiring harness in the clips.
 - ▶ Connect the electrical connectors.
- 2 . Install the front door trim panel.
For additional information, refer to [Front Door Trim Panel \(76.34.01\)](#)