

## Electronic Engine Controls - V8 S/C 5.0L Petrol - Engine Oil Level Sensor

Removal and Installation


### Removal

NOTE: Removal steps in this procedure may contain installation details.

1.  **WARNING:** Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.

Raise and support the vehicle.

2. Refer to: [Air Deflector](#) (501-02 Front End Body Panels, Removal and Installation).
3. Refer to: Engine Oil Draining and Filling (303-01D, General Procedures).

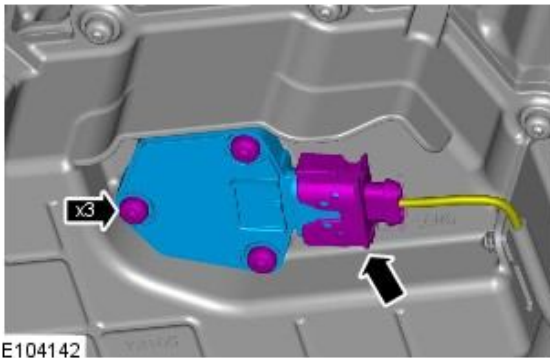

E104142

4.  **CAUTION:** Be prepared to collect escaping fluids.

Torque: 11 Nm

### Installation

1.  **CAUTION:** A new O-ring seal is to be installed.

To install, reverse the removal procedure.