

Vehicle Diagnostic Report

Car Information

Brand : LANDROVER

Quick Scan

PCM - Powertrain control module	Pass No Fault	
TCM - Transmission control module	Pass No Fault	
ABS - ABS control module	2	
RCM - Restraints control module	2	
IPC - Instrument cluster control module	21	
PBM - Parking brake control module	4	
CCM - Speed control module	6	
ADCM - Adaptive damping control module	1	
HCM - Headlamp control module	Pass No Fault	
VIM - Vehicle immobilizer control module	Pass No Fault	
ICS - Impact classification system	6	
DDM - Driver's door module	3	
DSM - Driver's seat module	6	
FSJB - Central junction box (body control module)	17	
ICM - Infotainment control	4	

module.		
ICP - Integrated control panel	4	
KVM - Keyless vehicle module	4	
PAM - Parking assist control module	Pass No Fault	
PDM - Passenger's door module	3	
PSM - Passenger's seat module	5	
HVAC - Heating ventilation and air conditioning control module	2	
RSJB - Auxiliary junction box (body control module B)	5	
FCDIM - Front control/display interface module (high level display front)	Pass No Fault	
ACM - Audio front control module	Pass No Fault	
AAM - Audio amplifier module	Pass No Fault	
BPM - Cellular telephone control module (bluetooth telephone module)	1	
FLR - Forward looking radar	6	
PCM - Powertrain control module	Pass No Fault	
TCM - Transmission control module	Pass No Fault	
ABS - ABS control module	2	
U0423-00	Invalid data received from the	Intermittent

	instrument panel control module.	
U0104-00	Lost communication with speed control module.	Permanent
RCM - Restraints control module	2	
U0121-00	Lost communication with ABS control module	Intermittent
U0100-00	Lost communication with engine control module/powertrain control module 'A'	Intermittent
IPC - Instrument cluster control module	21	
P0635-13	Power steering control circuit	Permanent
B100B-67	Column lock ground authorisation	Intermittent
B100C-67	Column lock supply authorisation	Intermittent
B100D-87	Column lock authorisation	Historic
B100D-96	Column lock authorisation	Historic
B112B-87	Steering wheel module	Intermittent
U0010-88	Medium speed CAN communication bus	Intermittent
U0100-00	Lost communication with engine control module/powertrain control module 'A'	Intermittent
U0103-00	Lost communication with gearshift module	Intermittent
U0104-00	Lost communication with speed control module.	Intermittent
U0139-00	Lost communication with the	Intermittent

	suspension control module B	
U0140-00	Lost communication with body control module.	Intermittent
U0142-00	Lost communication with body control module B.	Intermittent
U0156-00	Lost communication with information center A	Intermittent
U0164-00	Lost communication with heating ventilation and air conditioning control module.	Intermittent
U0199-00	Lost communication with the door control module A	Intermittent
U0200-00	Lost communication with the door control module B	Intermittent
U0208-00	Lost communication with the seat control module A	Intermittent
U0214-00	Lost communication with the remote function actuation.	Intermittent
U0241-00	Lost communication with the headlamp control module A	Intermittent
U0256-00	Lost communication with the front controls interface module.	Intermittent
PBM - Parking brake control module	4	
C1D15-64	Brake switch status.	Intermittent
U0100-00	Lost communication with engine control module/powertrain control module 'A'	Intermittent
U0121-00	Lost communication with ABS control module	Intermittent

U0422-00	Invalid data received from the body control module	Permanent
CCM - Speed control module	6	
P174E-81	Output shaft speed/ABS wheel speed correlation	Intermittent
U0300-55	Internal control module software incompatibility	Intermittent
U0401-81	Invalid data received from engine control module/powertrain control module.	Permanent
U0415-81	Invalid data received from ABS control module	Permanent
U0422-00	Invalid data received from the body control module	Intermittent
U0443-00	Invalid data received from the body control module B	Intermittent
ADCM - Adaptive damping control module	1	
U0422-86	Invalid data received from the body control module	Permanent
HCM - Headlamp control module	Pass No Fault	
VIM - Vehicle immobilizer control module	Pass No Fault	
ICS - Impact classification system	6	

B1005-96	Left frontal impact classification sensor	Permanent
B1005-31	Left frontal impact classification sensor	Intermittent
B1004-96	Right frontal impact classification sensor	Intermittent
B1004-31	Right frontal impact classification sensor	Intermittent
U0121-00	Lost communication with ABS control module	Intermittent
U0100-00	Lost communication with engine control module/powertrain control module 'A'	Intermittent
DDM - Driver's door module	3	
U0010-00	Medium speed CAN communication bus	Permanent
U0140-00	Lost communication with body control module.	Intermittent
U0208-00	Lost communication with the seat control module A	Intermittent
DSM - Driver's seat module	6	
U0010-88	Medium speed CAN communication bus	Intermittent
U0140-00	Lost communication with body control module.	Intermittent
U0142-00	Lost communication with body control module B.	Intermittent
U0155-00	Lost communication with instrument cluster control module.	Intermittent

U0199-00	Lost communication with the door control module A	Intermittent
U3000-87	Control module	Intermittent
FSJB - Central junction box (body control module)	17	
B1009-63	Ignition authorisation	Intermittent
B1009-64	Ignition authorisation	Intermittent
B1026-13	Steering column lock	Intermittent
B102B-87	Passive key	Intermittent
B108A-29	Start button	Intermittent
B1097-14	Heated windshield relay	Intermittent
B115A-13	Front passenger's seat heater	Permanent
B1B66-1C	Right seat heater temperature sensor	Permanent
U0010-88	Medium speed CAN communication bus	Intermittent
U0142-00	Lost communication with body control module B.	Intermittent
U0155-00	Lost communication with instrument cluster control module.	Intermittent
U0156-00	Lost communication with information center A	Intermittent
U0164-00	Lost communication with heating ventilation and air conditioning control module.	Intermittent
U0199-00	Lost communication with the door control module A	Intermittent
U0200-00	Lost communication with the door	Intermittent

	control module B	
U0214-00	Lost communication with the remote function actuation.	Intermittent
U3000-87	Control module	Intermittent
ICM - Infotainment control module.	4	
U0010-00	Medium speed CAN communication bus	Intermittent
U0197-00	Lost communication with the telephone control module.	Intermittent
U0262-00	Lost communication with the audio amplifier B.	Permanent
U3003-62	Battery voltage	Intermittent
ICP - Integrated control panel	4	
U0010-88	Medium speed CAN communication bus	Intermittent
U0155-00	Lost communication with instrument cluster control module.	Intermittent
U3000-55	Control module	Intermittent
U3000-87	Control module	Intermittent
KVM - Keyless vehicle module	4	
U0010-00	Medium speed CAN communication bus	Intermittent
U0140-00	Lost communication with body control module.	Intermittent

U0142-00	Lost communication with body control module B.	Intermittent
U0155-00	Lost communication with instrument cluster control module.	Intermittent
PAM - Parking assist control module	Pass No Fault	
PDM - Passenger's door module	3	
U0010-00	Medium speed CAN communication bus	Permanent
U0140-00	Lost communication with body control module.	Intermittent
U0208-00	Lost communication with the seat control module A	Intermittent
PSM - Passenger's seat module	5	
U0010-88	Medium speed CAN communication bus	Intermittent
U0140-00	Lost communication with body control module.	Intermittent
U0142-00	Lost communication with body control module B.	Intermittent
U0155-00	Lost communication with instrument cluster control module.	Intermittent
U3000-87	Control module	Intermittent
HVAC - Heating ventilation and air conditioning control module	2	

B1B78-84	System pressure.	Permanent
U0010-88	Medium speed CAN communication bus	Intermittent
RSJB - Auxiliary junction box (body control module B)	5	
U0010-88	Medium speed CAN communication bus	Intermittent
U0140-00	Lost communication with body control module.	Intermittent
U0155-00	Lost communication with instrument cluster control module.	Intermittent
U0164-00	Lost communication with heating ventilation and air conditioning control module.	Intermittent
U0214-00	Lost communication with the remote function actuation.	Intermittent
FCDIM - Front control/display interface module (high level display front)	Pass No Fault	
ACM - Audio front control module	Pass No Fault	
AAM - Audio amplifier module	Pass No Fault	
BPM - Cellular telephone control module (bluetooth telephone module)	1	
U3000-87	Control module	Intermittent

FLR - Forward looking radar	6	
P174E-81	No description available	Intermittent
U0300-55	No description available	Intermittent
U0401-81	No description available	Permanent
U0415-81	No description available	Intermittent
U0422-00	No description available	Intermittent
U0443-00	No description available	Intermittent