

Selector Lever Knob (44.15.06)


Removal

Vehicles without supercharger

- 1  **CAUTION: Protect the surrounding trim from damage when changing the component.**

Remove the selector lever knob.

- ▶ Carefully loosen the locking collar.
- ▶ Unscrew the knob.
- ▶ Remove the spacer.
- ▶ Remove the locking collar.

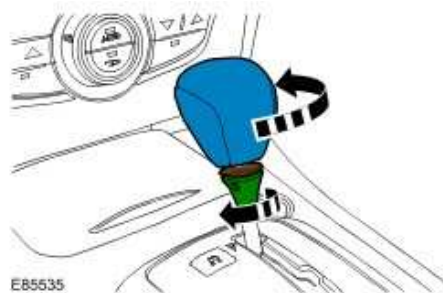

Vehicles with supercharger

- 2 . Remove the selector lever knob.

