

JAGUAR XK8/XKR – 2001 MY

Pre-driving 4-3

Driving Position Memory System (where fitted)

Setting a Driving Position (Memory Set)

The position of the driver's seat, steering column and exterior rear view mirrors can be memorised and recalled. Two different driving position profiles can be entered in the memory.

Storing a driving position profile in the memory can only be achieved with the ignition switch in position 'I'.


1. Adjust the seat, steering column and exterior rear view mirrors to the desired position.
2. Push the memory (M) button. The LED in the switchpack next to the button will come on for a 4 second period, during which time the driving position profile must be entered.
3. Push the button '1' or '2' to memorise the configuration. The memory button light will go out and a chime will indicate that the setting procedure is complete.

By repeating these three steps and pressing the unused button (1 or 2), a second driving position can be stored in the memory.

To set a new driving position, adjust to the desired position and perform steps 2 and 3. The previous memory will be erased and the new position will be set.

Recalling a Memorised Position

To recall a memorised position: press and hold the appropriate memory button (1 or 2) until all seat, steering column and door rear view mirror movement has stopped. A chime will sound when the memorised position is reached.

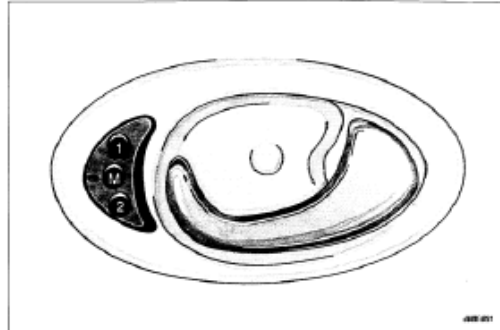


Driving Position Memory System Operating Tips

- When making adjustments to a set driving position, reset the new position in the same memory channel.
- A driving position will only be memorised if the ignition switch is in position 'I' and the memory button light is ON (4 second period).
- Previous memory is erased when a new driving position is entered.
- Memorised driving positions cannot be recalled whilst the vehicle is in motion.

JAGUAR XK8/XKR – 2003 – 2006 MY

3-20 Before driving

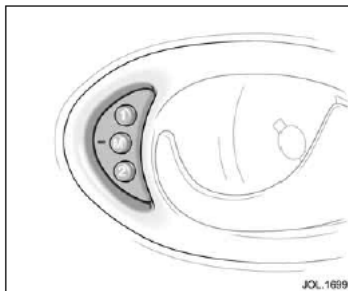

Driving position memory system

Setting a driving position (memory set)

The position of the driver's seat, headrest, steering column and exterior rear view mirrors can be memorised and recalled. Two different driving position profiles can be entered in the memory.

Storing a driving position profile in the memory can only be achieved with the ignition switch in position 'I'.

1. Adjust the seat, headrest, steering column and exterior rear view mirrors to the desired position.

2. Push the memory (M) button. The LED in the switchpack next to the button will come on for a 4 second period, during which time the driving position profile must be entered.
3. Push the button 1 or 2 to memorise the configuration. The memory button light will go out and a chime will indicate that the setting procedure is complete.

By repeating these three steps and pressing the unused button (1 or 2), a second driving position can be stored in the memory.

To set a new driving position, adjust to the desired position and perform steps 2 and 3. The previous memory will be erased and the new position will be set.

Recalling a memorised position

To recall a memorised position: Press and hold the appropriate memory button (1 or 2) until all seat, steering column and door rear view mirror movement has stopped. A chime will sound when the memorised position is reached.

Driving position memory system operating tips

- When making adjustments to a set driving position, reset the new position in the same memory channel.
- A driving position will only be memorised if the ignition switch is in position 'I' and the memory button light is ON (4 second period).
- Previous memory is erased when a new driving position is entered.

Memorised driving positions cannot be recalled whilst the vehicle is in motion.