


Front Safety Belt Buckle 76.73.49


Removal

1. Remove the front seat. For additional information, refer to<<501-10>>.

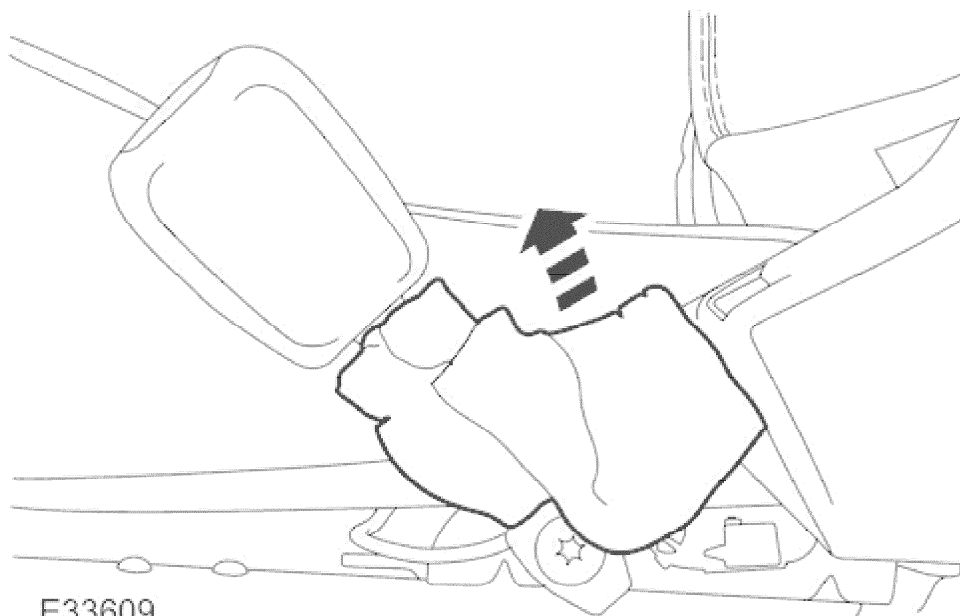

E33609


2. Reposition the seat belt buckle gaiter.

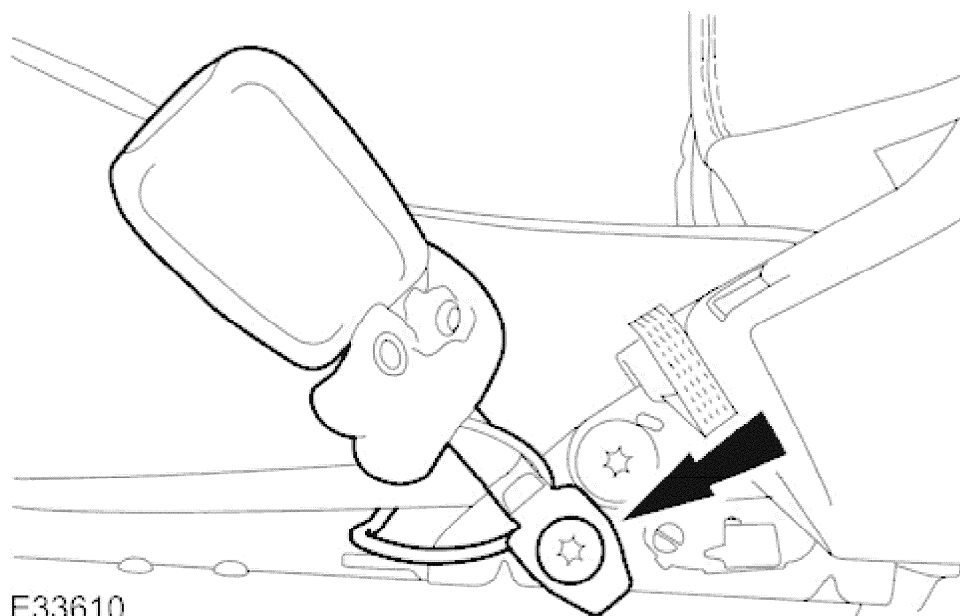

E33610

3. Detach the seat belt buckle.


4. Invert the seat.

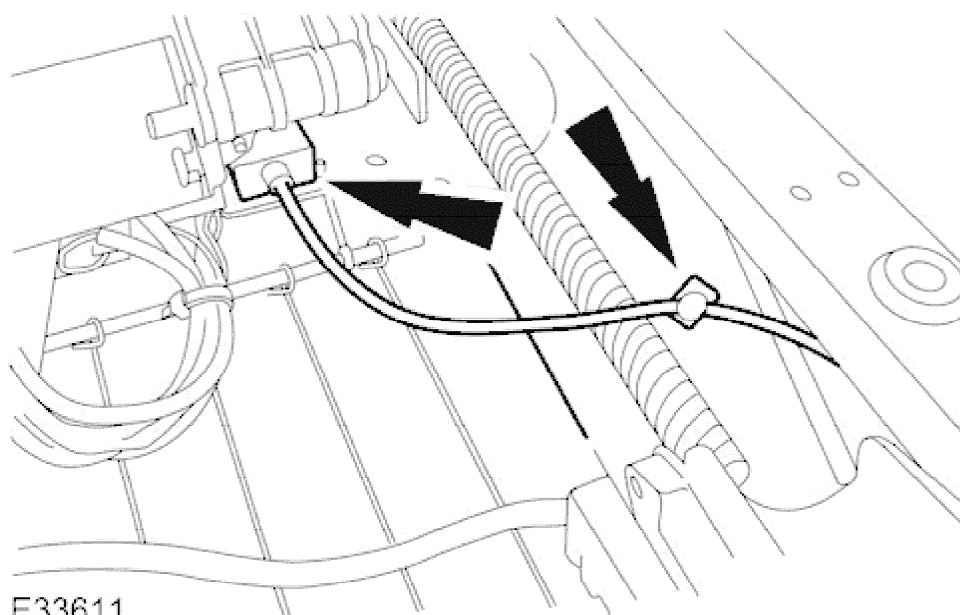

E33611

5. Remove the seat belt buckle.
 - Remove the fir tree clip.
 - Disconnect the electrical connector.

Installation

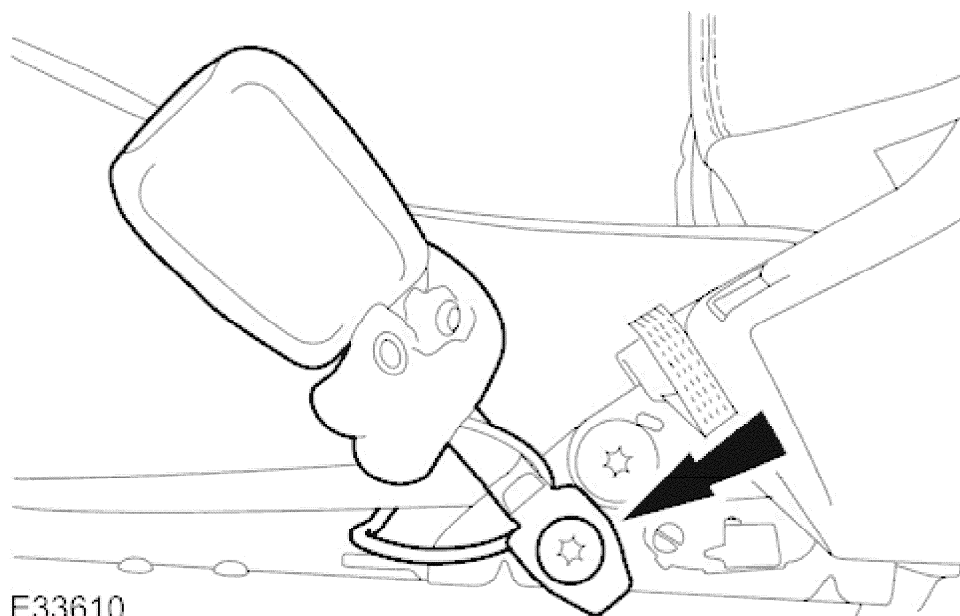

E33610

1. To install, reverse the removal procedure.
 - Tighten to 45Nm.