


## Headlamp Assembly 86.41.33


### Removal

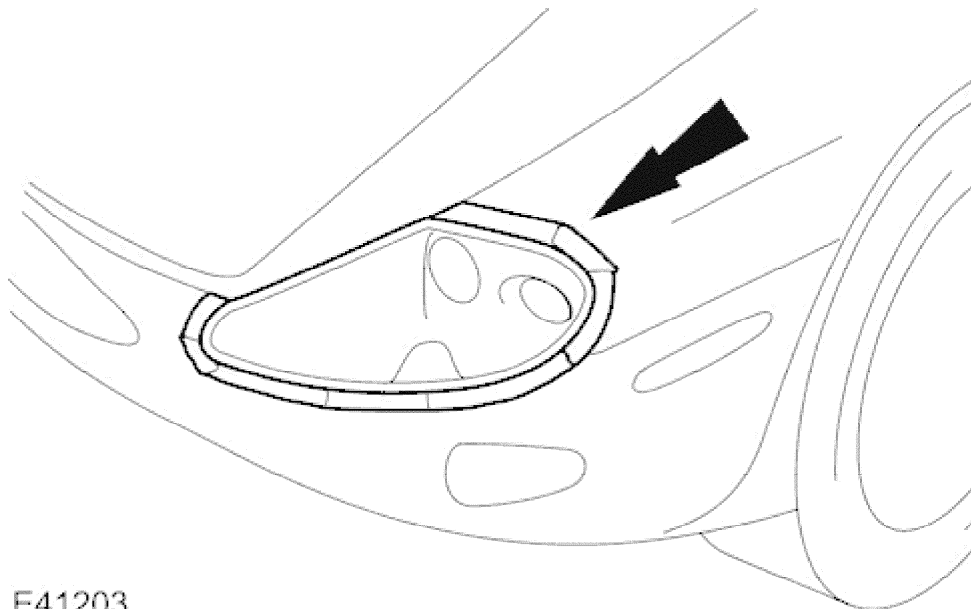

E41203


1.  **CAUTION:**  
Failure to follow this instructions may result in damage to the paintwork.

Install suitable protective tape.

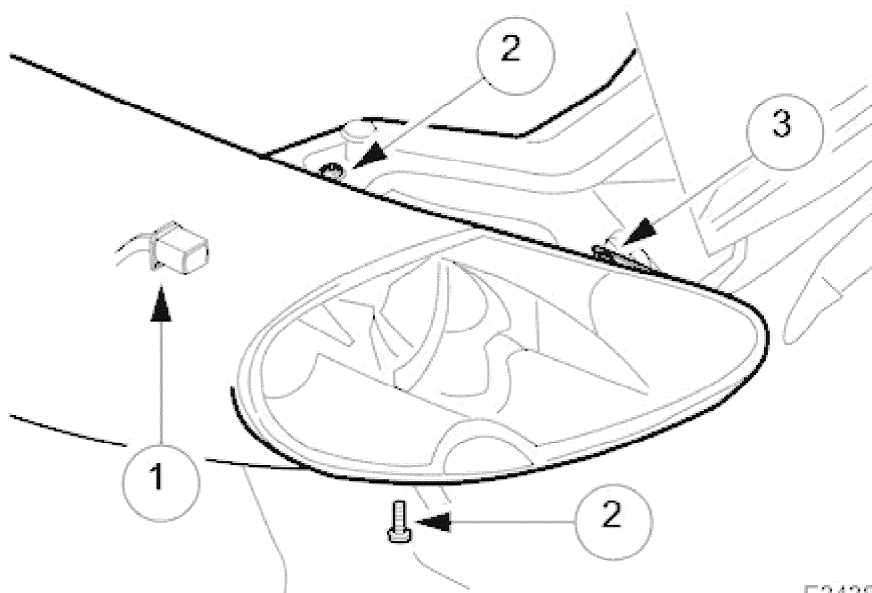

E34384

2. Detach the headlamp assembly.
  1. Disconnect the headlamp assembly electrical connector.
  2. Remove the headlamp assembly retaining bolts.
  3. Detach the headlamp assembly.

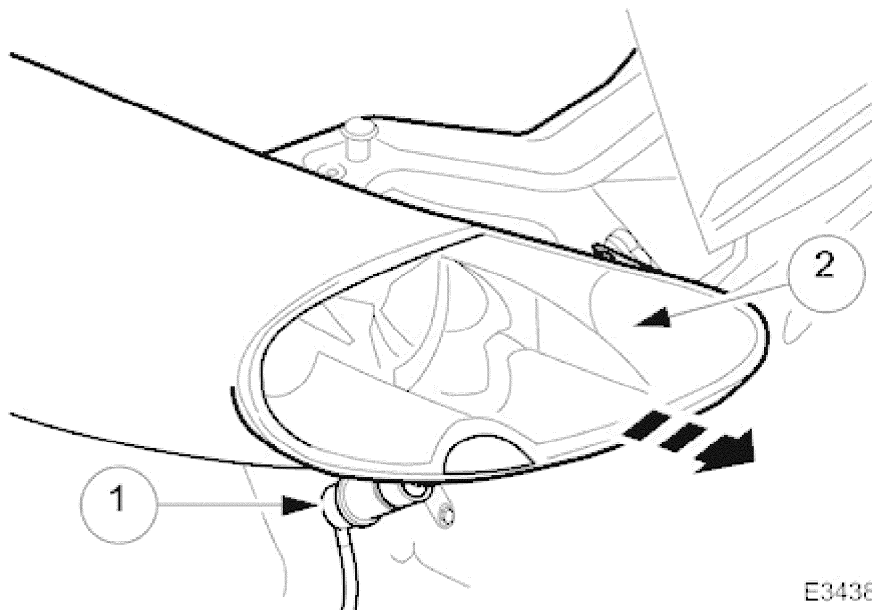

E34385

3. Remove the headlamp assembly.
  1. Disconnect the headlamp washer jet.
  2. Remove the headlamp assembly.

## Installation

1. To install, reverse the removal procedure.
2. Adjust the headlamp. <<**Headlamp Adjustment - Vehicles With: High Intensity Discharge Headlamps**>>
3. Adjust the headlamp. <<**Headlamp Adjustment - Vehicles Without: High Intensity Discharge Headlamps**>>