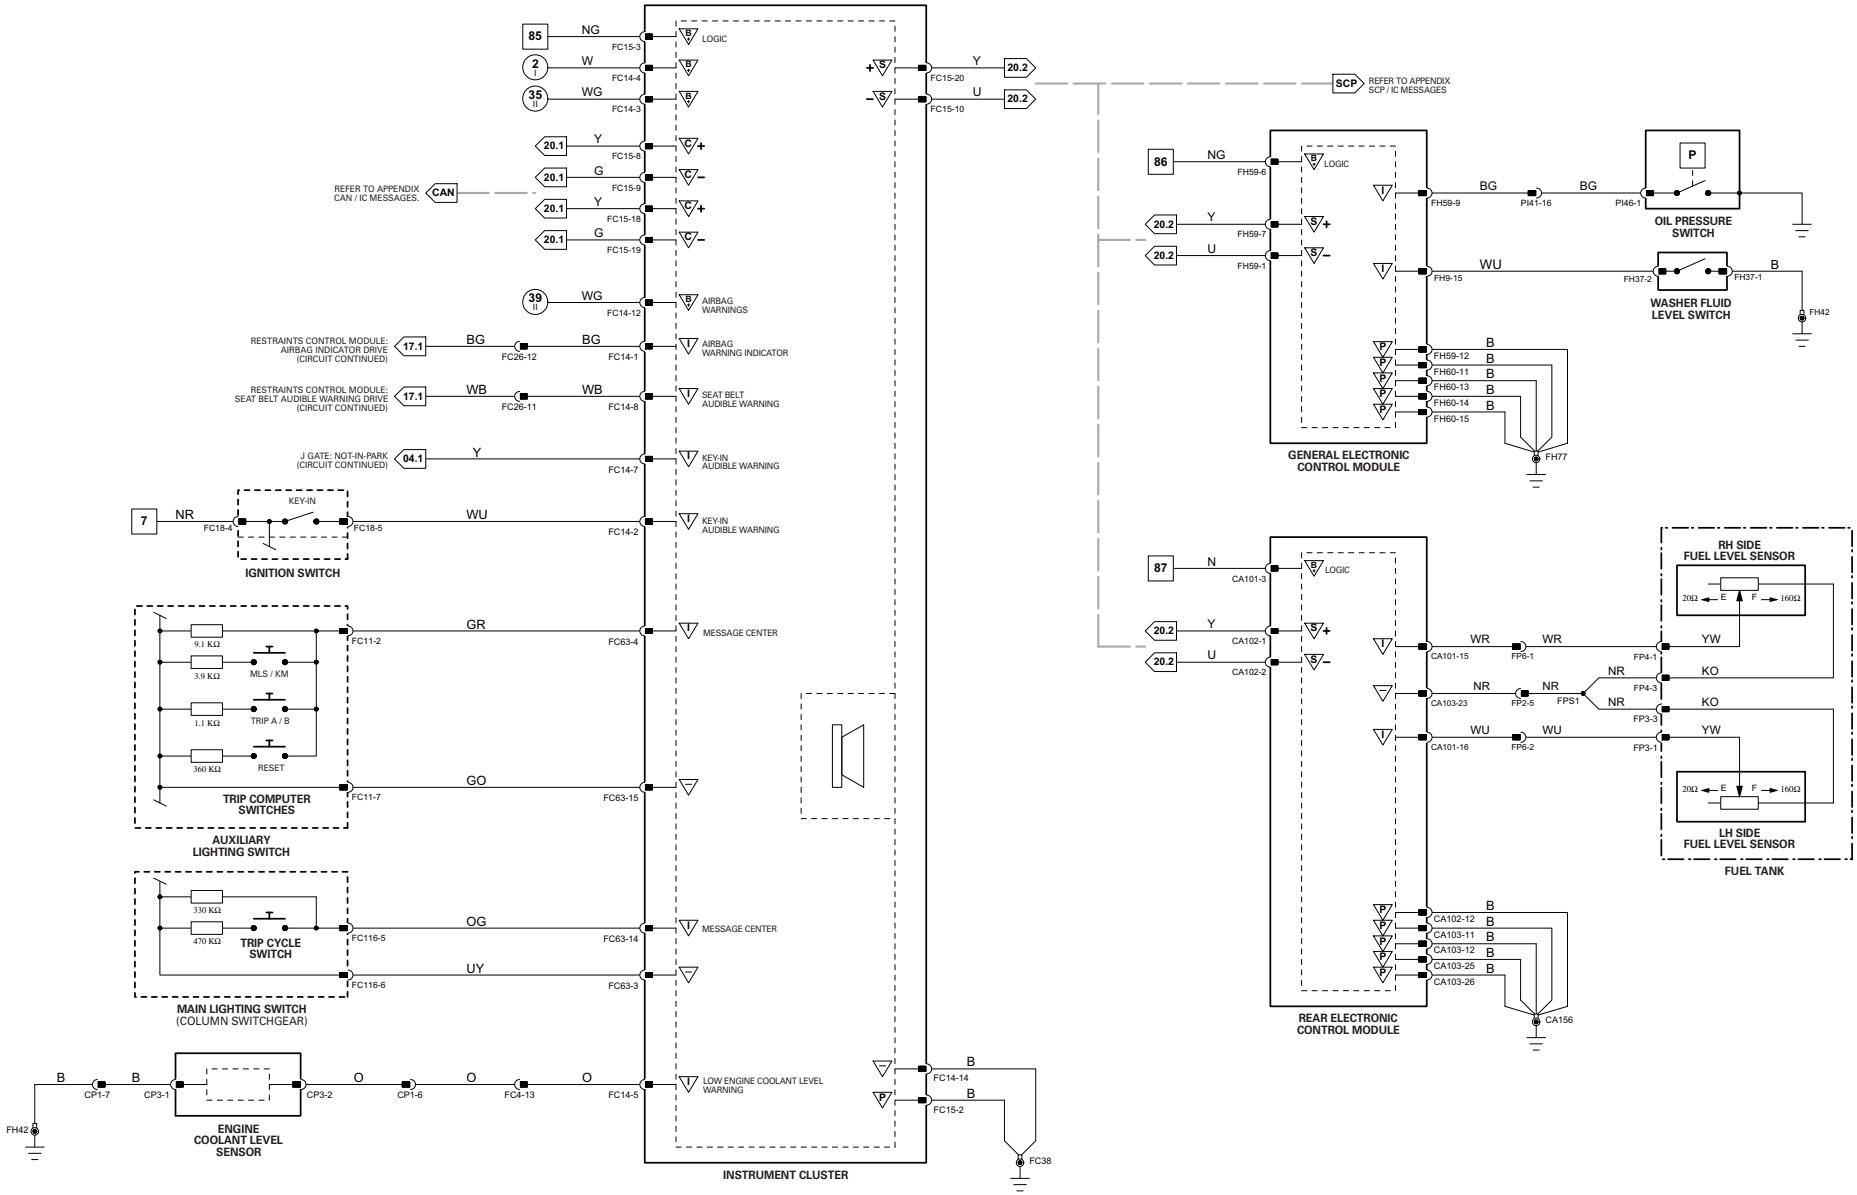
85
NG
FC15-3
LOGIC
2
W
FC14-4
35
WG
FC14-3
20.1
Y
FC15-8
G
FC15-9
FC15-18
FC15-19
REFER TO APPENDIX CAN / IC MESSAGES.
CAN
39
FC14-12
AIRBAG WARNINGS
RESTRAINTS CONTROL MODULE: AIRBAG INDICATOR DRIVE (CIRCUIT CONTINUED)
17.1
BG
FC26-12
FC14-1
AIRBAG WARNING INDICATOR
RESTRAINTS CONTROL MODULE: SEAT BELT AUDIBLE WARNING DRIVE (CIRCUIT CONTINUED)
WB
FC26-11
FC14-8
SEAT BELT AUDIBLE WARNING
J GATE: NOT-IN-PARK (CIRCUIT CONTINUED)
04.1
FC14-7
KEY-IN AUDIBLE WARNING
7
NR
FC18-4
KEY-IN
FC18-5
WU
FC14-2
IGNITION SWITCH
9.1 KΩ
3.9 KΩ
MLS / KM
1.1 KΩ
TRIP A / B
360 KΩ
RESET
TRIP COMPUTER SWITCHES
FC11-2
GR
FC63-4
MESSAGE CENTER
FC11-7
GO
FC63-15
AUXILIARY LIGHTING SWITCH
330 KΩ
470 KΩ
TRIP CYCLE SWITCH
FC116-5
OG
FC63-14
FC116-6
UY
FC63-3
MAIN LIGHTING SWITCH (COLUMN SWITCHGEAR)
B
CP1-7
CP3-1
CP3-2
O
CP1-6
FC4-13
FC14-5
LOW ENGINE COOLANT LEVEL WARNING
FH42
ENGINE COOLANT LEVEL SENSOR
INSTRUMENT CLUSTER
FC15-20
FC15-10
20.2
FC14-14
FC15-2
FC38
SCP
REFER TO APPENDIX SCP / IC MESSAGES
86
FH59-6
FH59-7
FH59-1
FH59-9
FH9-15
BG
PI41-16
PI46-1
OIL PRESSURE SWITCH
WU
FH37-2
FH37-1
WASHER FLUID LEVEL SWITCH
FH42
FH59-12
FH60-11
FH60-13
FH60-14
FH60-15
FH77
GENERAL ELECTRONIC CONTROL MODULE
87
CA101-3
CA102-1
CA102-2
CA101-15
WR
FP6-1
FP4-1
YW
NR
FP4-3
KO
CA103-23
FP2-5
FPS1
FP3-3
CA101-16
FP6-2
FP3-1
RH SIDE FUEL LEVEL SENSOR
20Ω
E
F
160Ω
LH SIDE FUEL LEVEL SENSOR
FUEL TANK
CA102-12
CA103-11
CA103-12
CA103-25
CA103-26
CA156
REAR ELECTRONIC CONTROL MODULE