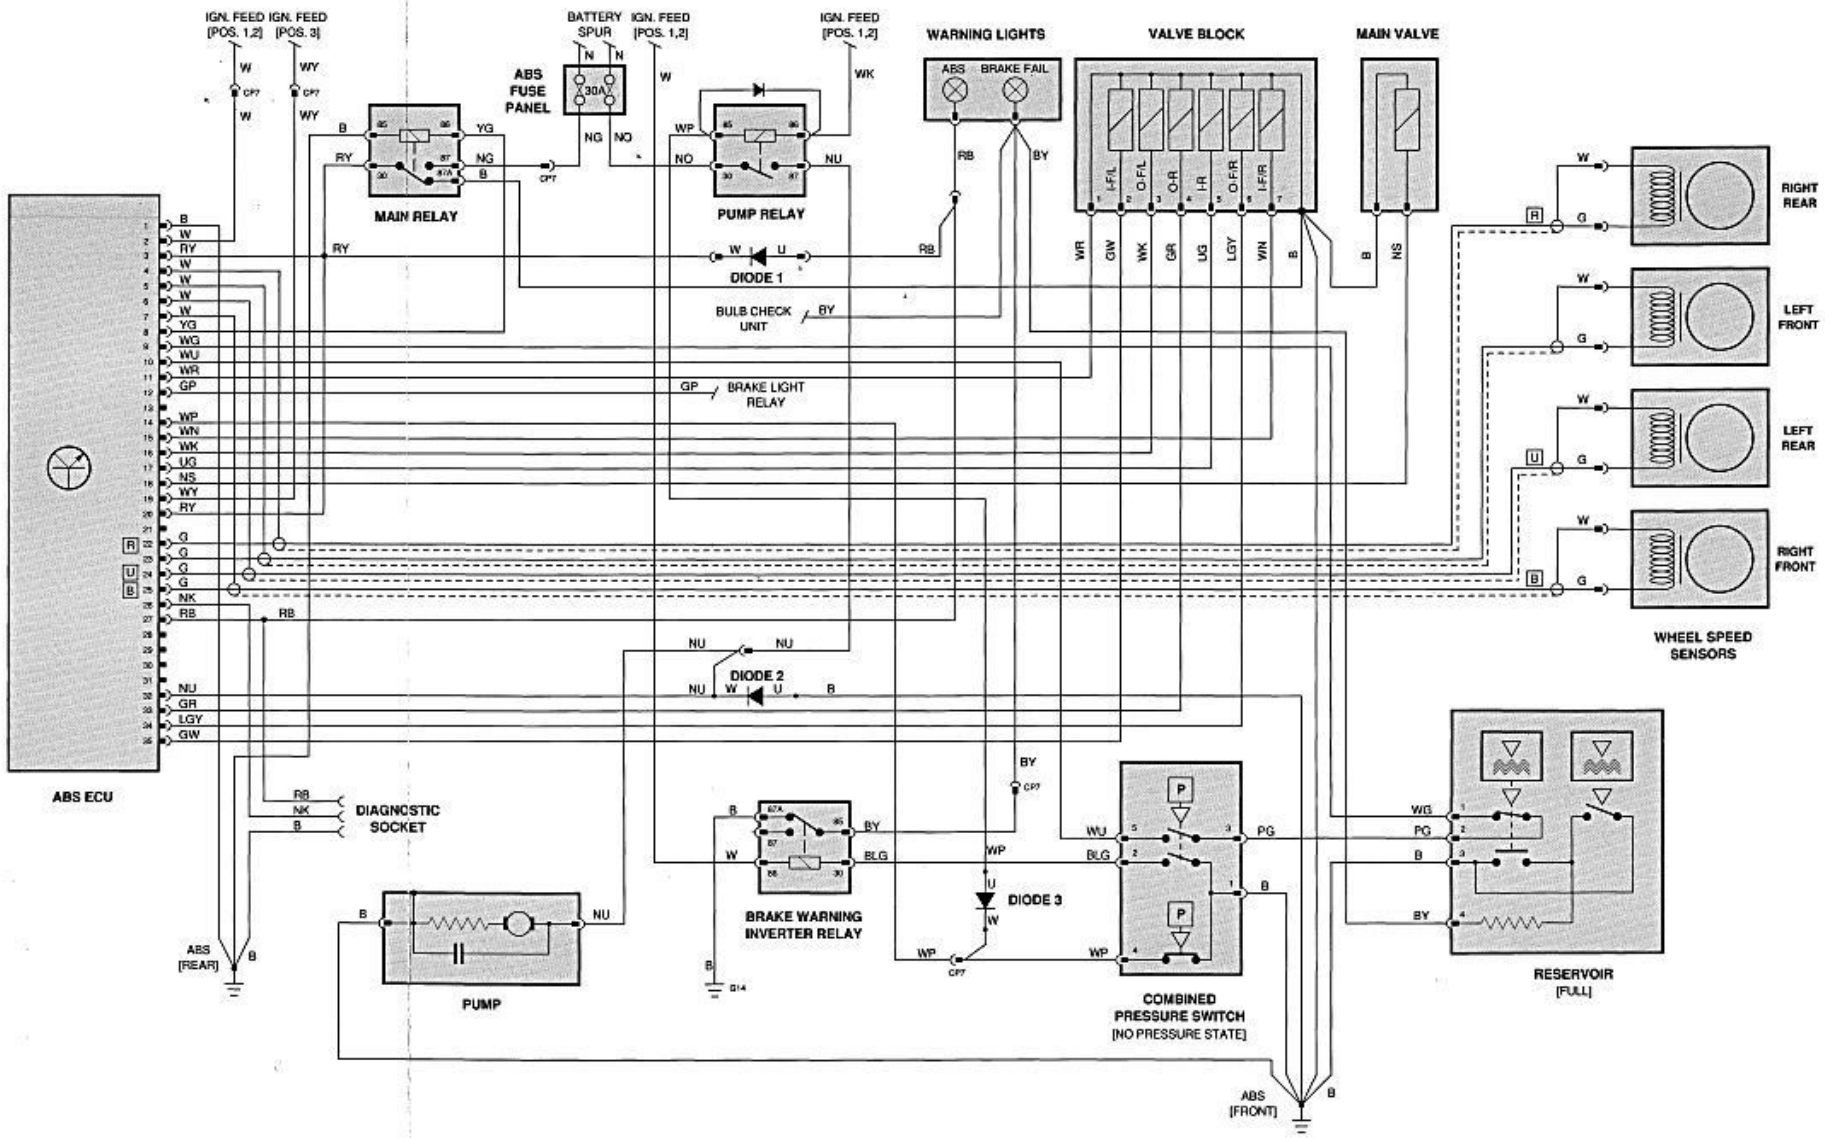
IGN. FEED [POS. 1,2]
IGN. FEED [POS. 3]
BATTERY SPUR
IGN. FEED [POS. 1,2]
IGN. FEED [POS. 1,2]
ABS FUSE PANEL
30A
WARNING LIGHTS
ABS
BRAKE FAIL
VALVE BLOCK
MAIN VALVE
MAIN RELAY
PUMP RELAY
DIODE 1
BULB CHECK UNIT
BRAKE LIGHT RELAY
DIODE 2
DIODE 3
ABS ECU
DIAGNOSTIC SOCKET
ABS [REAR]
PUMP
BRAKE WARNING INVERTER RELAY
COMBINED PRESSURE SWITCH [NO PRESSURE STATE]
ABS [FRONT]
RESERVOIR [FULL]
WHEEL SPEED SENSORS
RIGHT REAR
LEFT FRONT
LEFT REAR
RIGHT FRONT

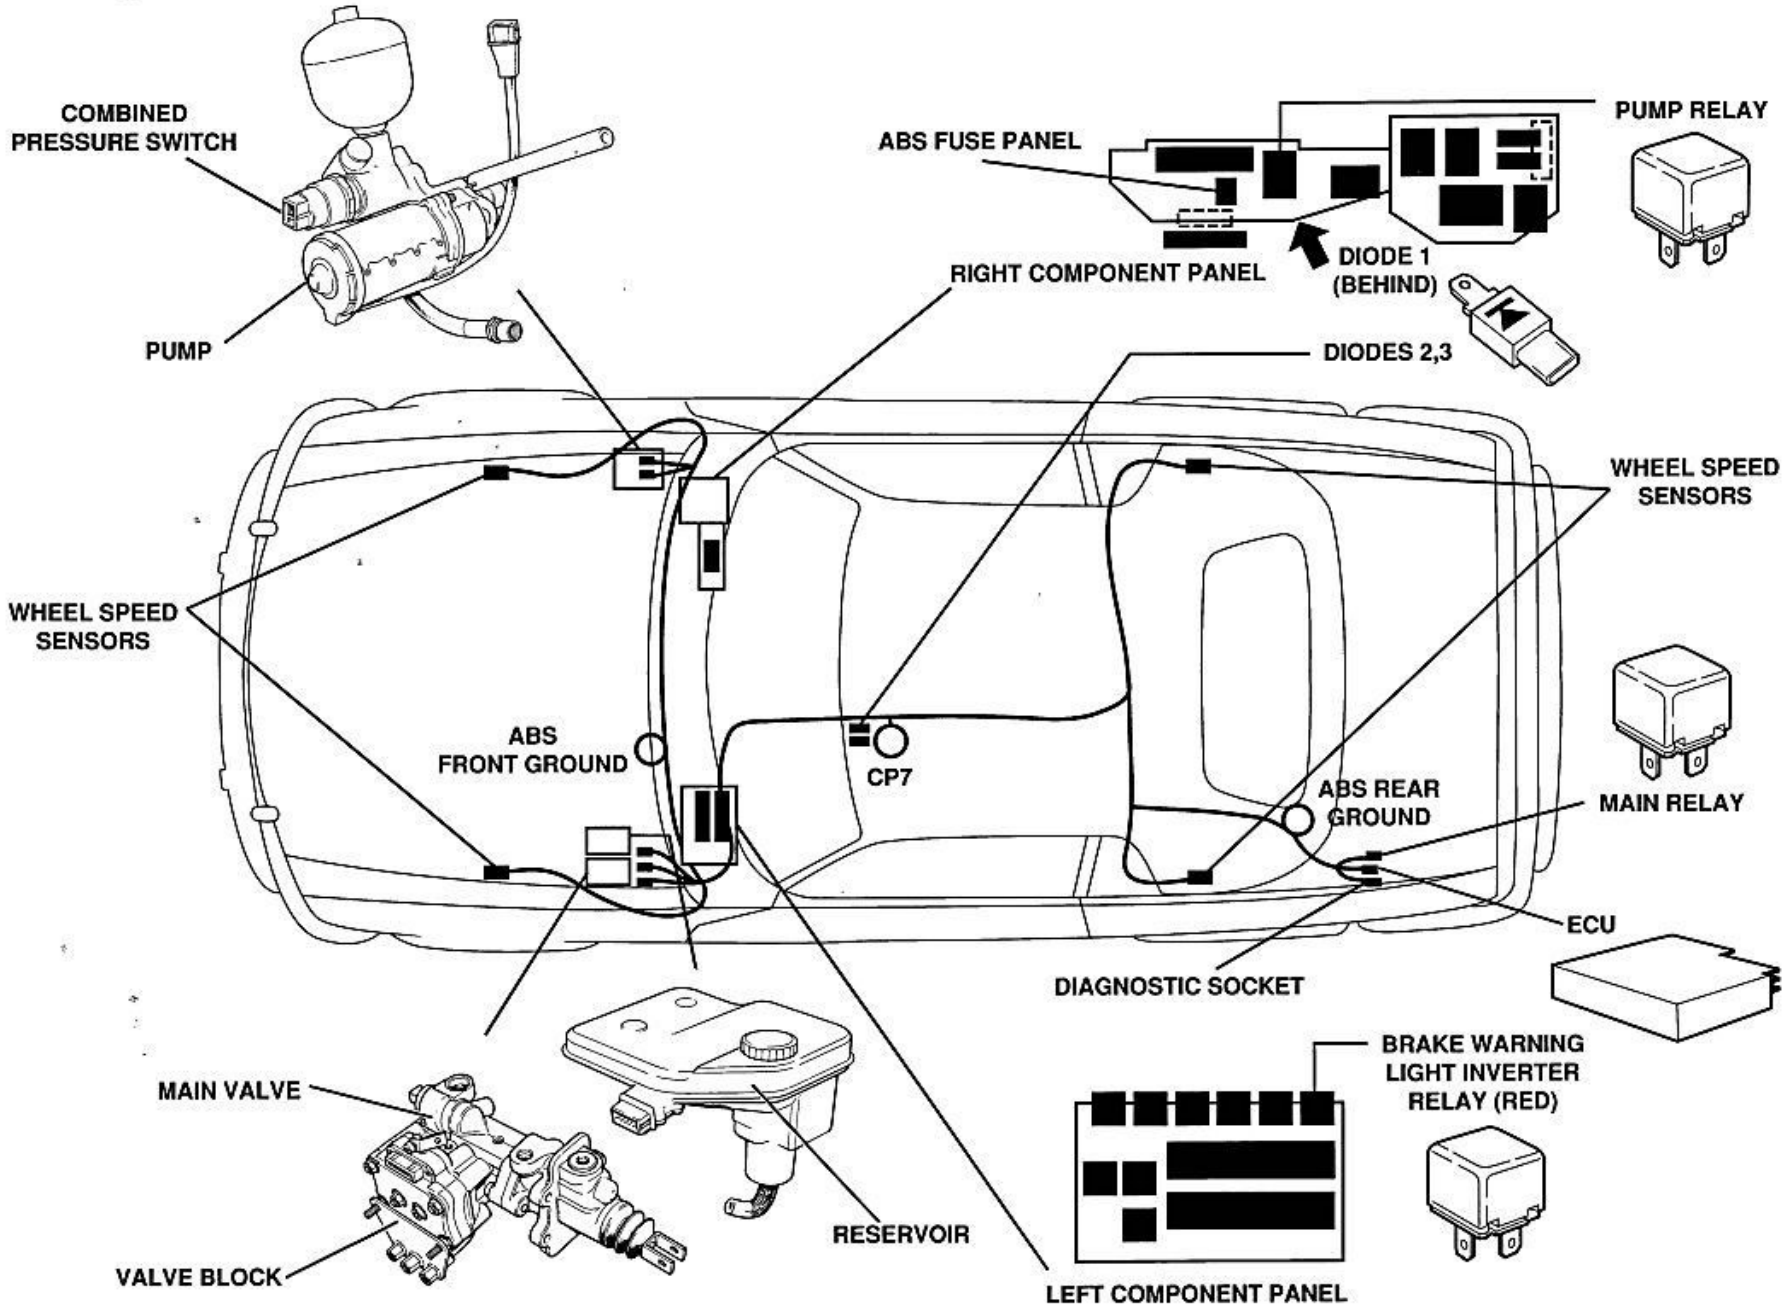
COMBINED PRESSURE SWITCH
PUMP
ABS FUSE PANEL
PUMP RELAY
RIGHT COMPONENT PANEL
DIODE 1 (BEHIND)
DIODES 2,3
WHEEL SPEED SENSORS
WHEEL SPEED SENSORS
ABS FRONT GROUND
CP7
ABS REAR GROUND
MAIN RELAY
ECU
DIAGNOSTIC SOCKET
BRAKE WARNING LIGHT INVERTER RELAY (RED)
MAIN VALVE
RESERVOIR
VALVE BLOCK
LEFT COMPONENT PANEL

FIG 28.2