

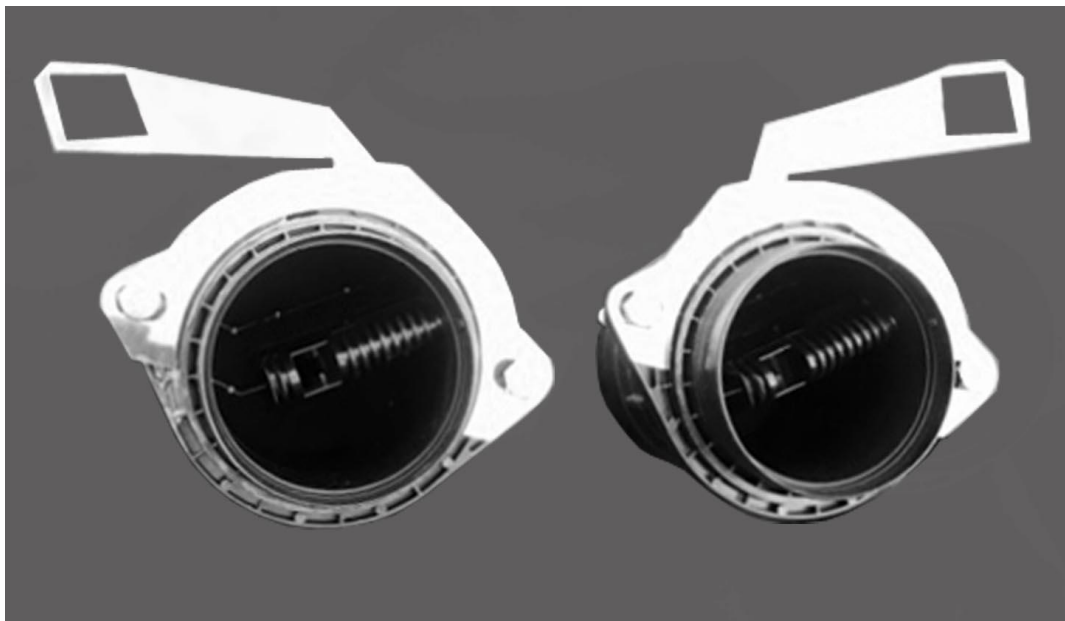


PDF link to this document

<https://www.dropbox.com/s/82xgcjwarjbj0il/f-type-intake.pdf?dl=0>

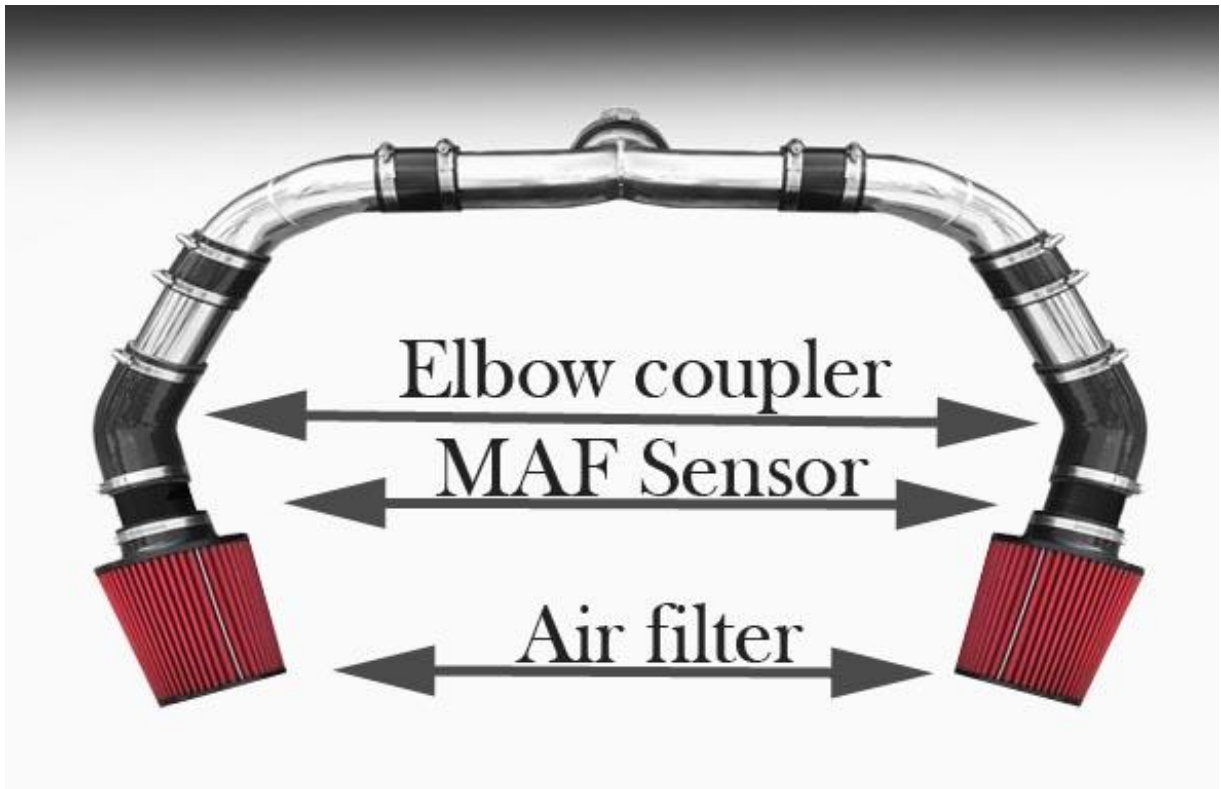

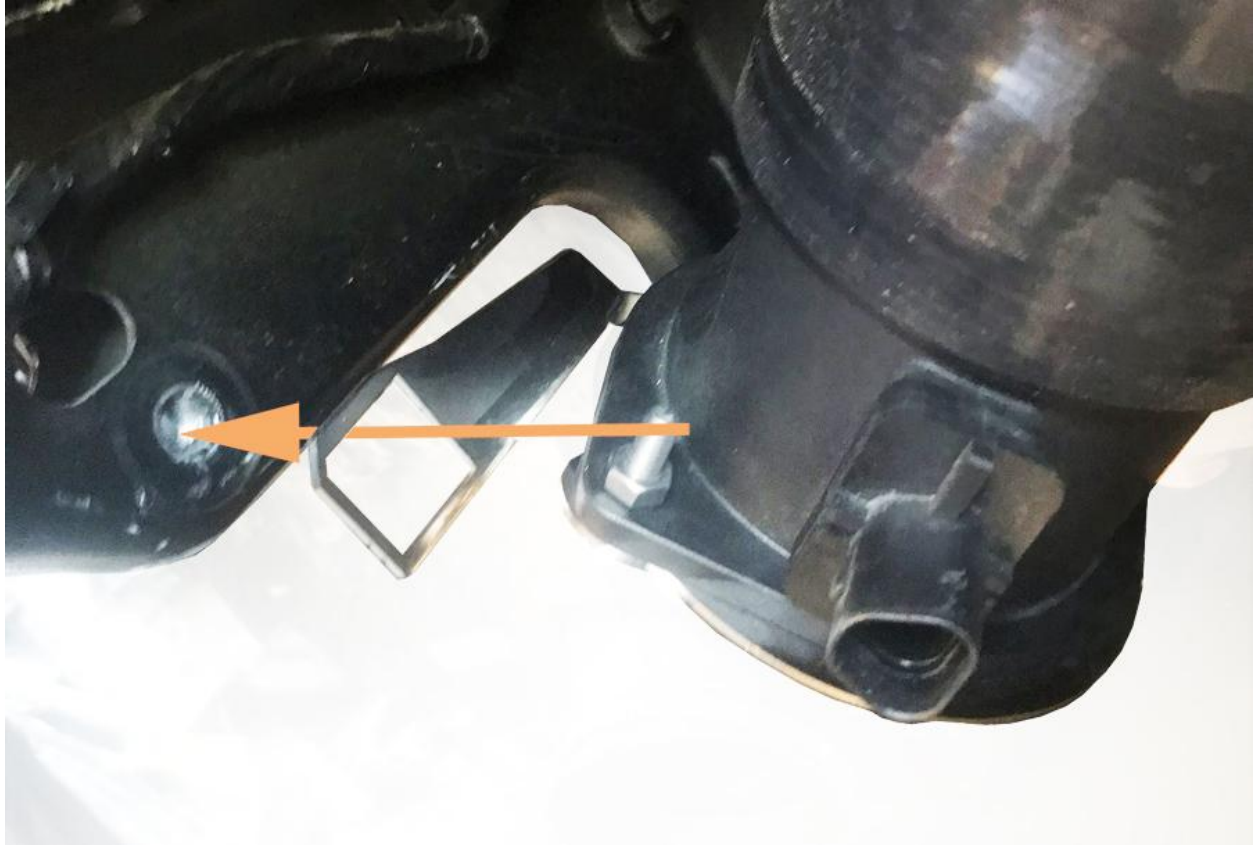


Upper Tube Packing List

- 1 x Y tube
- 1 x right side tube
- 1 x left side tube
- 1 x 3.5" coupler
- 2 x 2.75" coupler
- 1 x breather hose union
- 6x hose clamps

Lower Intake packing List

- 2x air filter
- 2x maf bracket
- 2x M6 bolt (to secure maf bracket to vehicle chassis)
- 2x large washers (to secure maf bracket to vehicle chassis)
- 4 x M6 bolts , nuts, and washer (to secure maf bracket to maf sensor)
- 1x extra M6 bolt 1x extra nut*

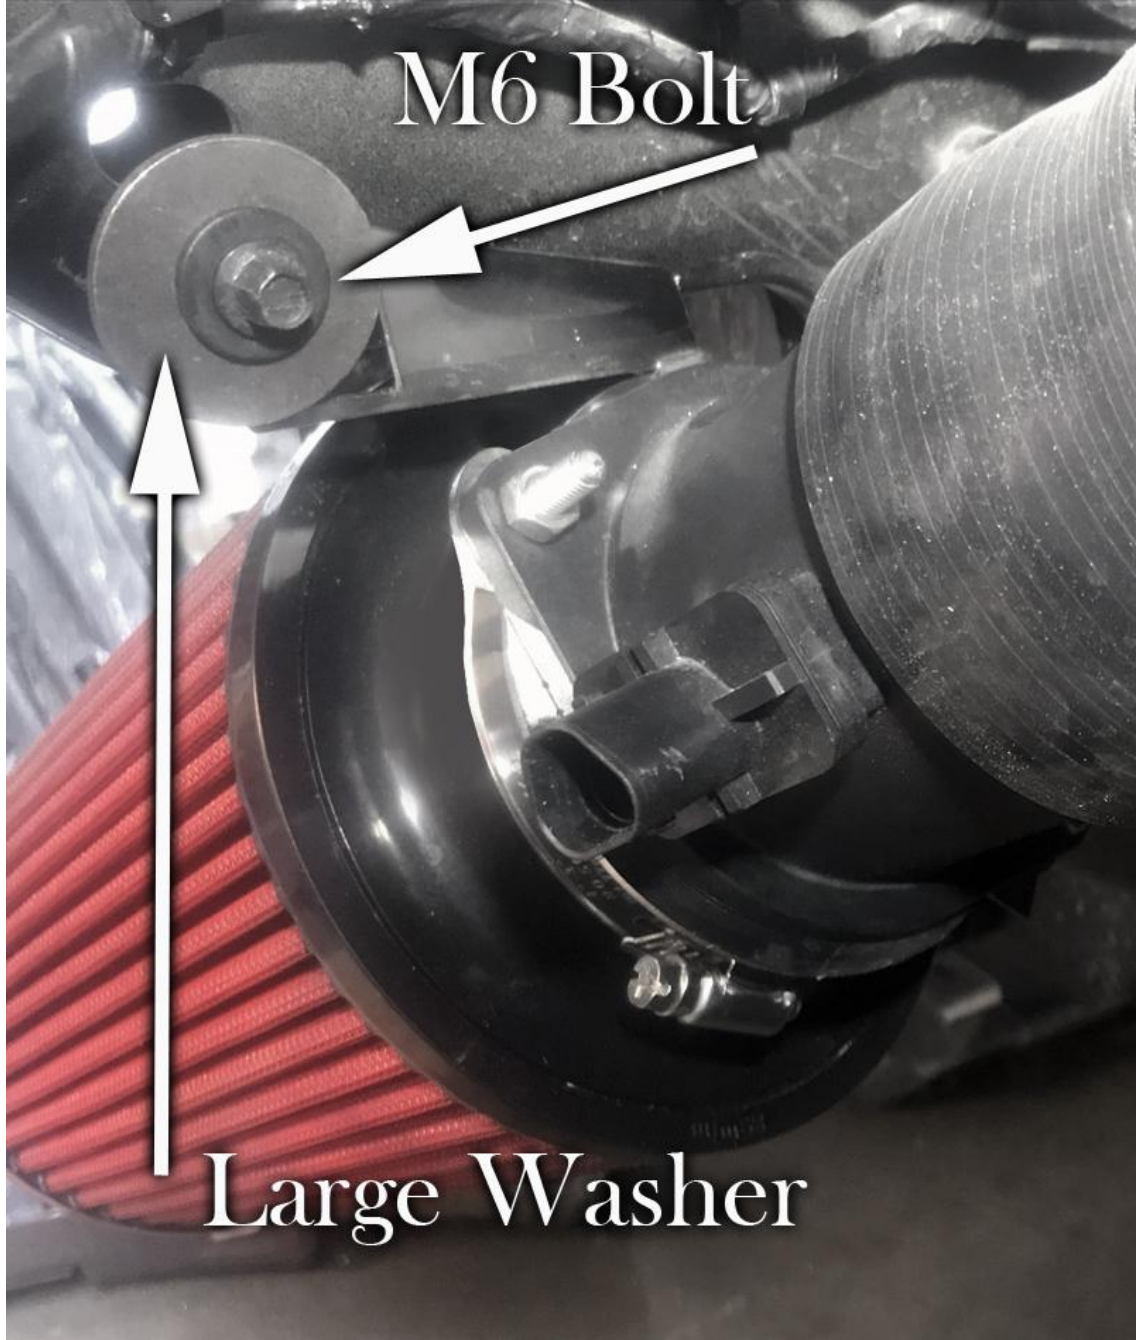

M6 Bolt

Large Washer



