


As always, <u>this is how I did it and not suggesting you do it this way or any other specific way</u>. Do so at your own risk and in any fashion you choose to do it. This guide is simply in the spirit of offering a method that worked for me. **This is on an F-Type R AWD 5.0L S/C. Others will be similar...**

Helpful Tools/Info:


No tools needed for this one. Just unplug and use a zip-tie.

Gaining Access and Disabling:


1. Open Rear Cargo Door/Lift Gate and remove trunk liner panels

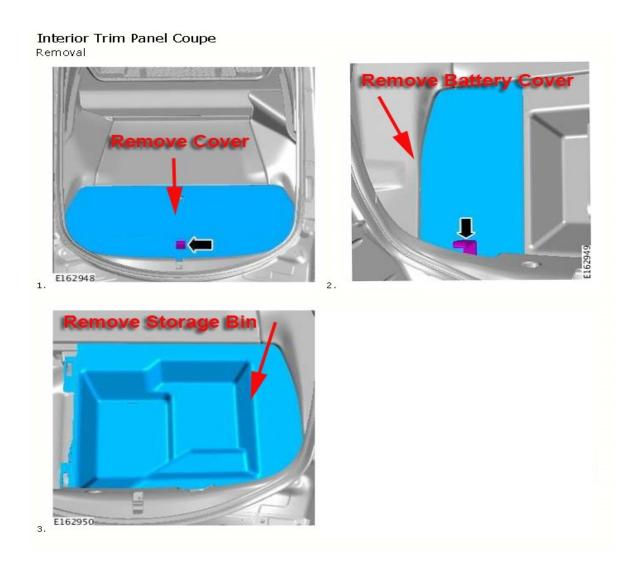

2. Locate control module bottom right hand side - as you look in the boot

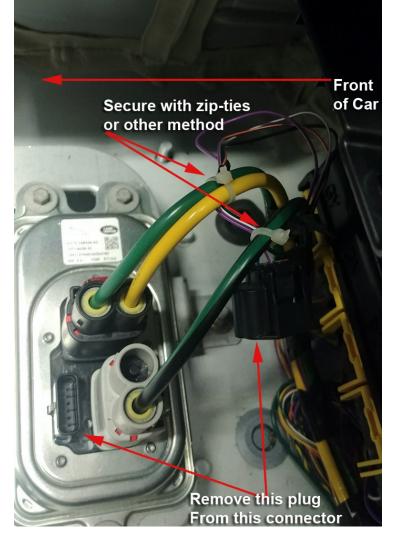

Unplug and zip-tie wire as indicated:

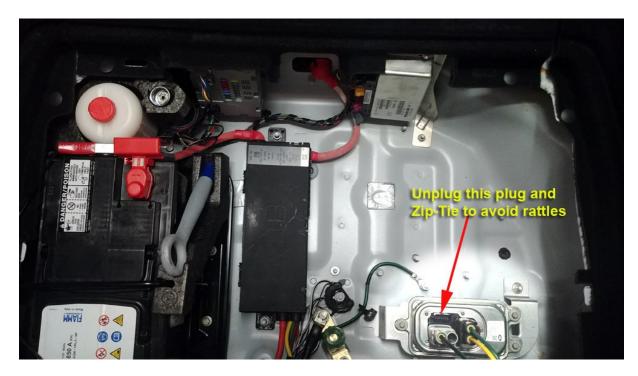

3. Replace all panels and close Lift Gate.

4. When you start your car, the ECO (Start/Stop) button will illuminate during the system check and then turn off. Your ECO Stop/Start will no longer function.



You will receive no errors unless you press the ECO button, and then it will show that ECO Stop/Start is unavailable.



This is a fairly easy operation.