

INSTALLATION PRECAUTIONS / NOTES: (continued)

- Contact original purchase source if additional information is desired regarding these mirror products.
- For installation situations that installer is not familiar with, a qualified installation technician or mechanic should be consulted for assistance.
- Use wire ties to hold wires away from hot engine can critical systems such as brake mechanism.

1.0 VEHICLE PREPARATION

- 1.1 Inspect mirror for damage.
- Place parts on a clean, padded surface.
 - If the vehicle is equipped with an anti-theft radio, the security code must be recorded prior to disconnecting the battery cable. The code should be re-entered after reconnecting the negative battery terminal.
 - Record programmed radio stations.

2.0 REMOVE ORIGINAL EQUIPMENT (OEM) REARVIEW MIRROR

CAUTION: DO NOT USE EXCESSIVE FORCE WHEN REMOVING MIRROR FROM WINDSHIELD. THE WINDSHIELD BUTTON MAY SEPARATE FROM THE WINDSHIELD OR THE WINDSHIELD MAY BREAK.


- 2.1 Wedge mount mirror removal procedure: (Common Method for screwless mount)
Note that there are several versions of mirror mount systems.
If unfamiliar with mirror removal, seek professional assistance.
- Using a small 1/8" (4 mm) flat blade screwdriver, insert the flat end into the opening at the bottom of the mirror mount at the windshield.
 - Slide the screwdriver into the center of the mirror mount until resistance is felt.
 - Gently apply a small amount of additional upward force to lift away locking spring in the mount.
 - While still applying upward pressure with the screwdriver, grasp the mirror bracket and wiggle side to side. Lift mirror up toward the headliner and off the windshield mount button.
- 2.2 Camlock Mirror Removal procedure: (Common Method)
- Grasp the base of the mirror.
 - Rotate 90 degrees left or right.
 - Slide mirror downward toward dash to remove.

3.0 INSTALL NEW INTERIOR MIRROR

- 3.1 Wedge Mount Mirror Installation:
- Holding the mirror assembly by the bracket tube and mirror head, slide the mirror bracket over the mirror button on the windshield.
 - Rock mirror side to side to aid installation until mirror fits tightly onto mirror button.
 - Use #20 Torx screwdriver, to tighten locking screw through hole in bottom of compass Pod below mirror mount.

NOTE: If mirror does not fit mirror button on windshield, purchase Rearview Mirror Adhesive kit from auto supply store and mount wedge style mirror button supplied with kit. Follow adhesive supplier directions for button installation.

- 3.2 Camlock Mount Mirror Installation:
- Remove Retainer spring from Windshield retainer button.
 - Replace with new spring from kit.
 - Hold auto-dimming mirror up to windshield retainer button as if mirror is installed.
 - Rotate the mirror 90 degrees right or left from installed position.
 - Slide the mirror base mount into the retainer button on the windshield moving up from bottom of button.
 - Rotate the mirror back to the final installed position.

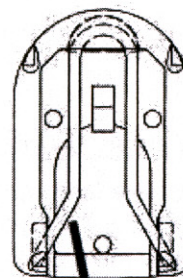

**Mirror Button
Retainer Spring**