
Roof Opening Panel Front Drain Hose (76.82.21)

Removal


- 1. Remove the <u>fender</u> splash shield.
- 2. Remove the roof opening panel front drain hose.

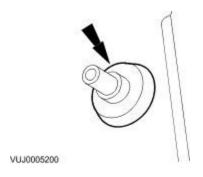


- 3. Remove both A-pillar trim panels.
- 4. Remove both B-pillar upper trim panels.
- 5. Remove both C-pillar trims.
- 6. Remove both sun visors.
- 7. **NOTE:** Left-hand shown, right-hand similar. Remove the <u>sun visor</u> retaining clip.



- 8. Remove the overhead console.
- 9. **NOTE:** Left-hand shown, right-hand similar. Detach the rear passenger assist handle retaining screw covers.

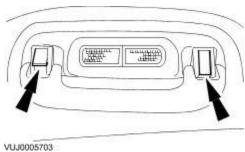


10. **NOTE:** Left-hand shown, right-hand similar. Detach the rear passenger assist handle.

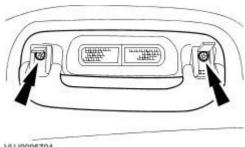


VUJ0005704

- 11. **NOTE:** Left-hand shown, right-hand similar. Remove the rear passenger assist handle.
 - Disconnect the electrical connector.

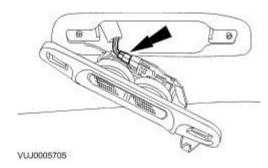


12. **NOTE:** Left-hand shown, right-hand similar. Detach the front passenger assist handle retaining screw covers.

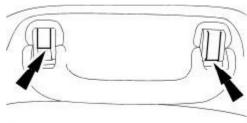


VUJ0005706


13. **NOTE:** Left-hand shown, right-hand similar. Remove the front passenger assist handle.

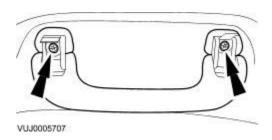


14. Detach the <u>headliner</u>.

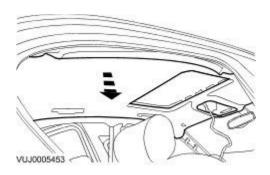

15. Detach the roof opening panel front drain hose.

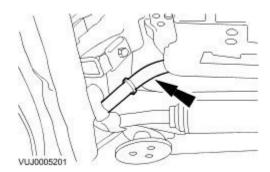

16. Remove the roof opening panel front drain hose.

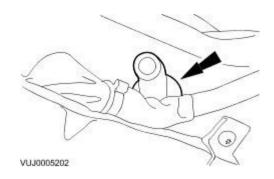

Installation

1. To install, reverse the removal procedure.