



### Front Door Armrest 76.34.22

#### Removal

1. Remove battery cover and disconnect ground cable from battery terminal. Refer to <<86.15.19>>.
2. Remove door casing. Refer to <<76.34.01>>.

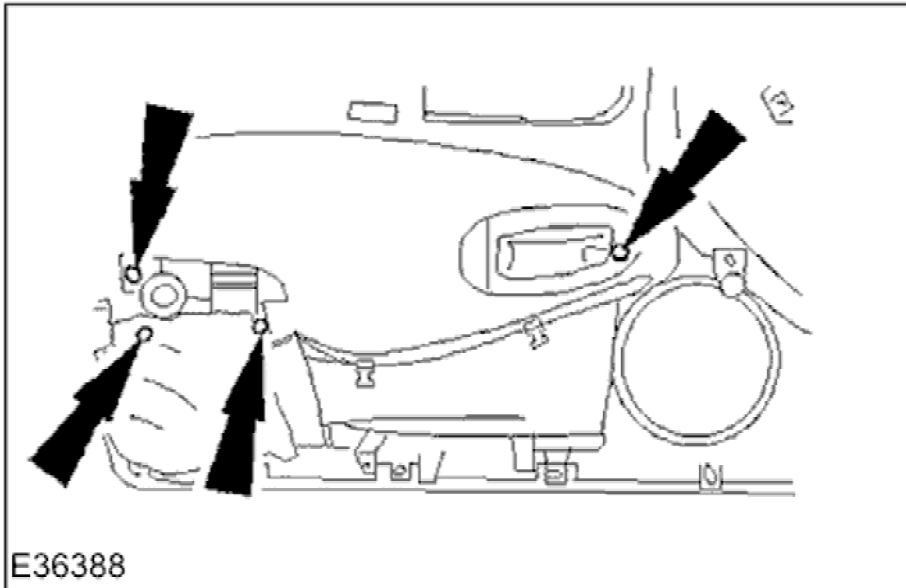


3. Slacken and remove four screws securing armrest to door casing and remove armrest from casing.

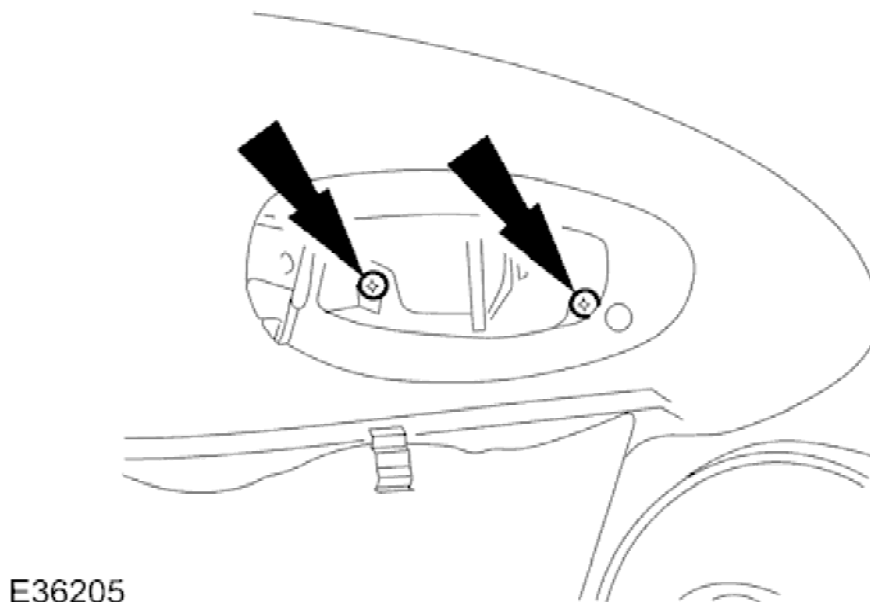

4. Remove switchpack from armrest.

## 2001 XJ RANGE - Interior Trim and Ornamentation - 501-05

1. Slacken and remove two screws securing switchpack and finisher to armrest.
2. Remove switchpack and finisher from armrest.

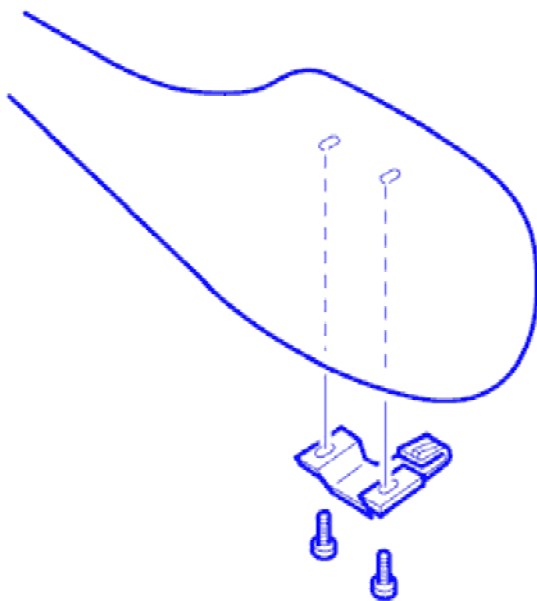

E36336

5. Slacken and remove two screws securing armrest retaining clip and remove clip from armrest.

### Installation

1. Position retaining clip on armrest and fit and tighten securing screws.
2. Position switchpack and finisher on armrest and fit and tighten securing screws.
3. Position armrest on casing and fit and tighten four securing screws.
4. Fit casing to door. Refer to <<76.34.01>>.
5. Connect ground cable to battery and fit battery cover. Refer to <<86.15.15>>.