

Interior Trim and Ornamentation - Parcel Shelf

Removal and Installation


Removal

All vehicles

1. Refer to: [C-Pillar Lower Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).


Vehicles with electric rear blind

2.

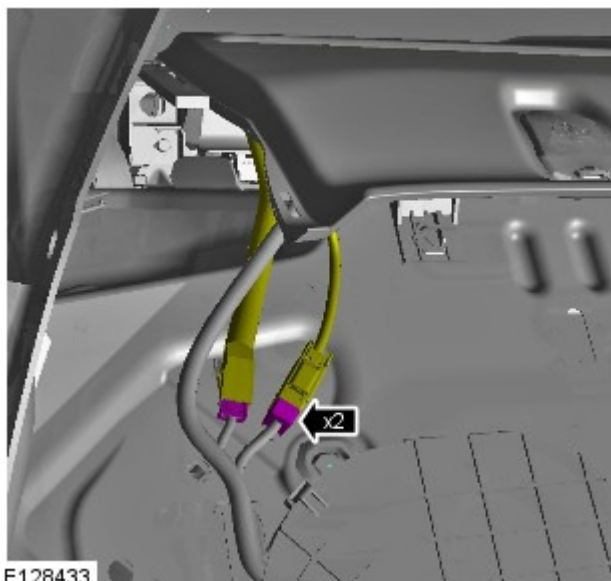



Vehicles without electric rear blind

3.

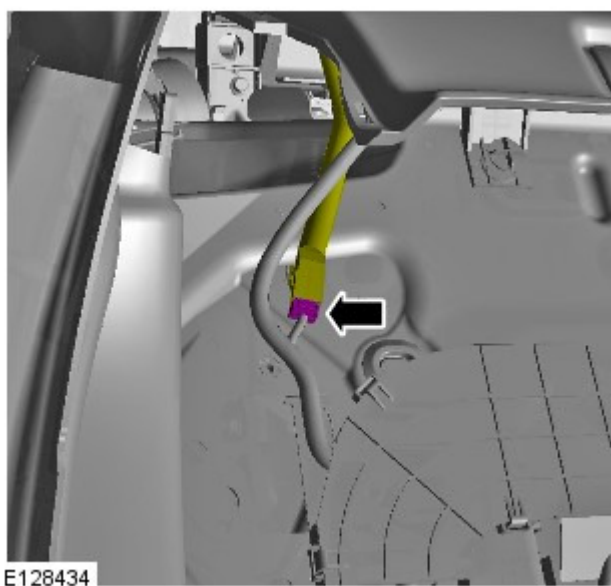

All vehicles



4.

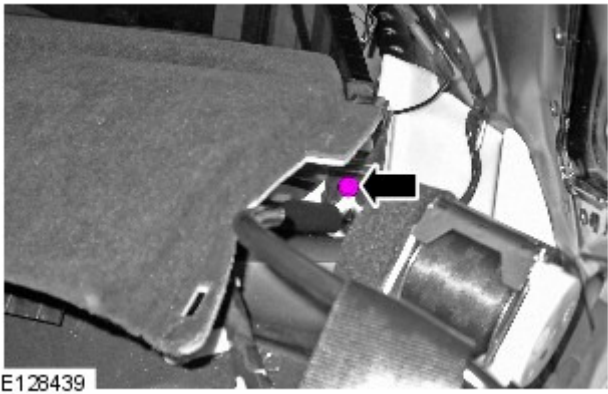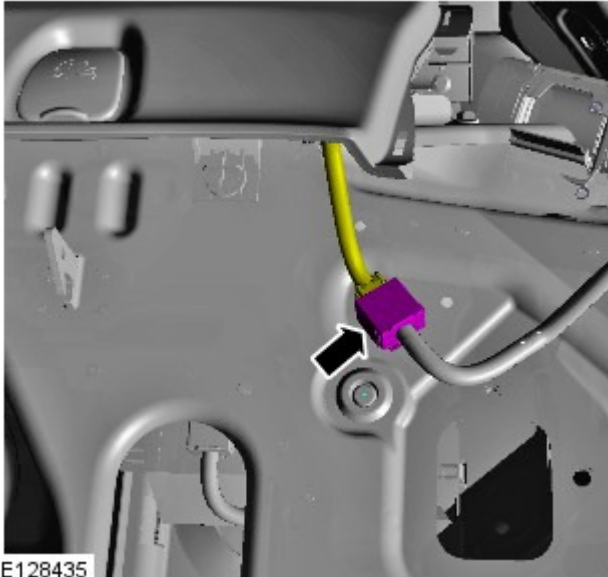


5.  NOTE: Loosen the bolt, but do not fully remove.

6.  NOTE: Loosen the bolt, but do not fully remove.

7.

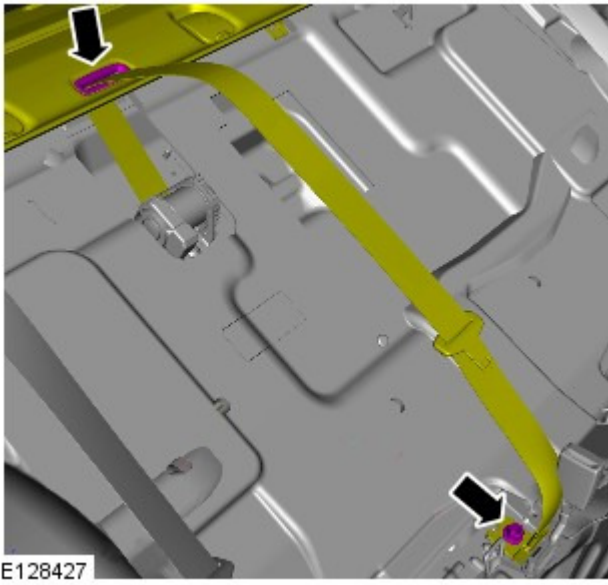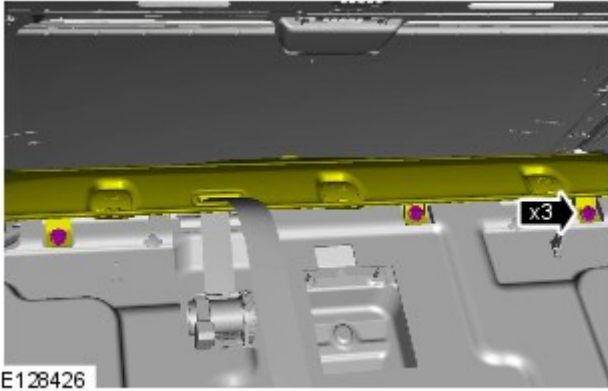


8.

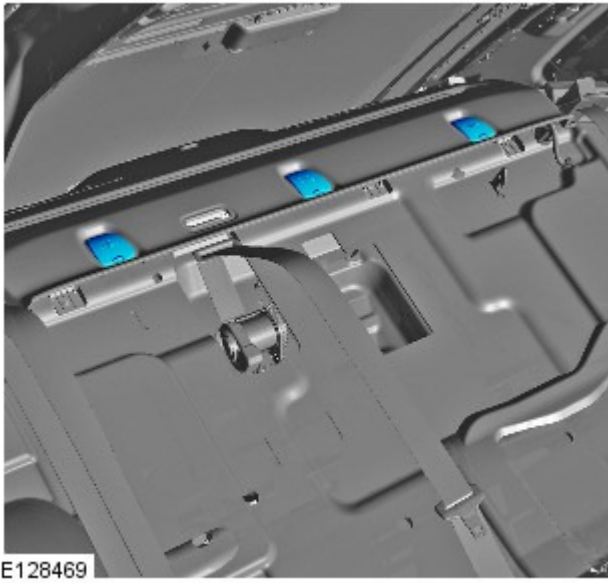

9.


10.

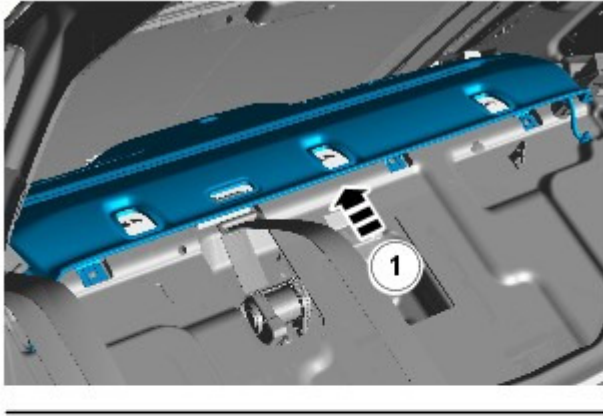


E128428


Installation



All vehicles

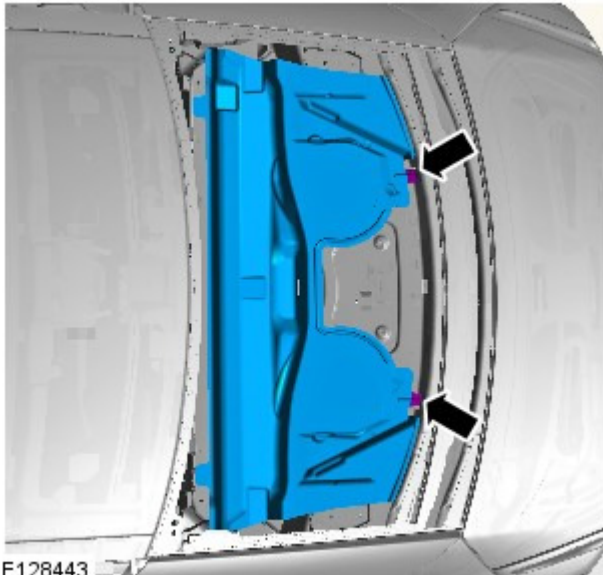

E128443


1.  CAUTION: Make sure that the noise vibration harshness (NVH) material is correctly located.

2.  CAUTION: Make sure that the wiring harness does not catch when installing the parcel shelf.

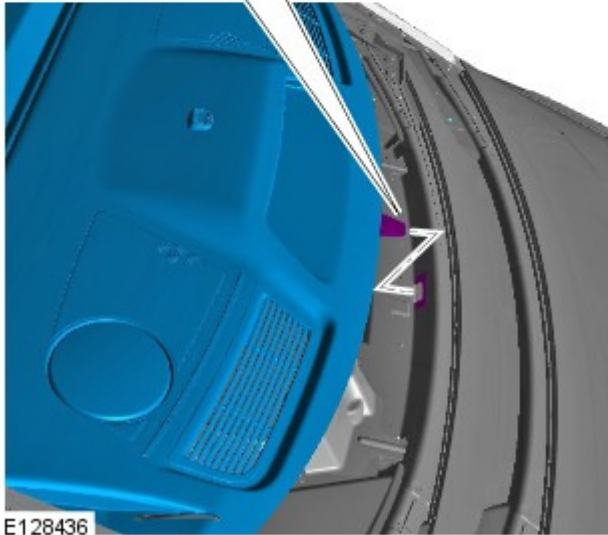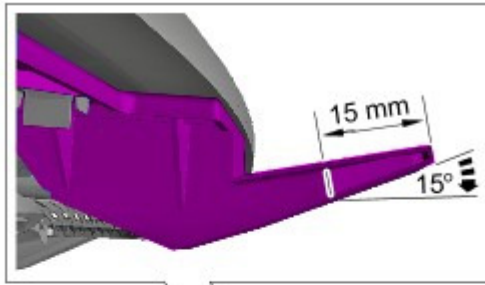

E128436

3. Torque: 40 Nm

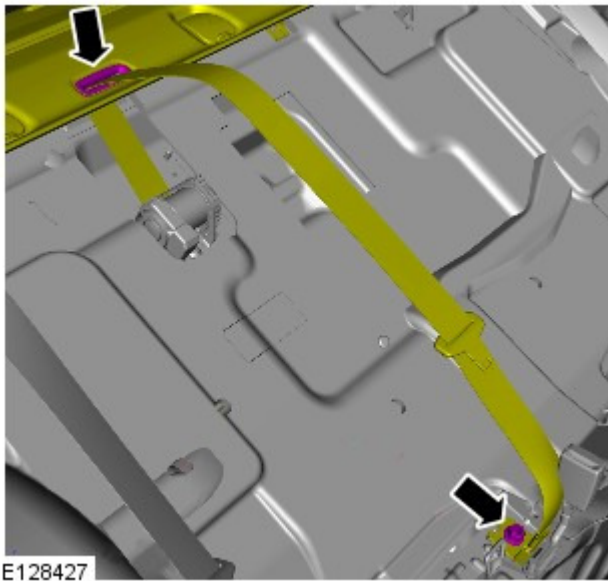


E128427

4.




E128469

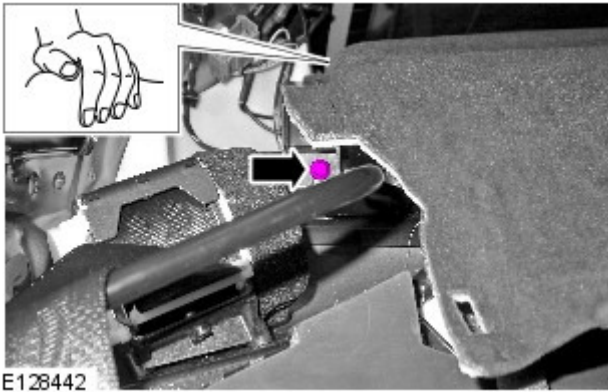

E128442


5.
 - Torque: 6 Nm
 - Apply gentle pressure.

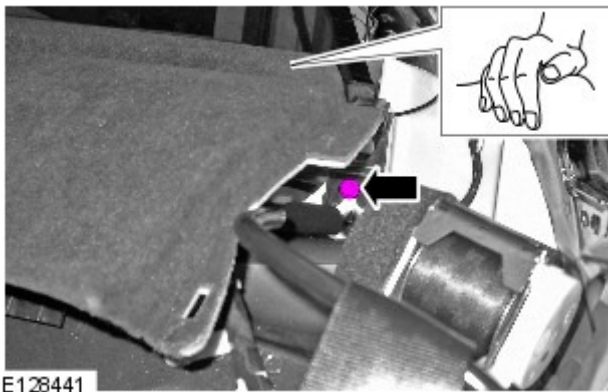

E128441


6.
 - Torque: 6 Nm
 - Apply gentle pressure.

7.

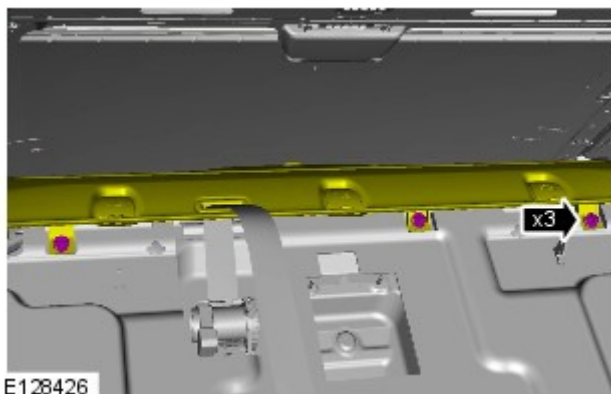


Vehicles with electric rear blind

8.

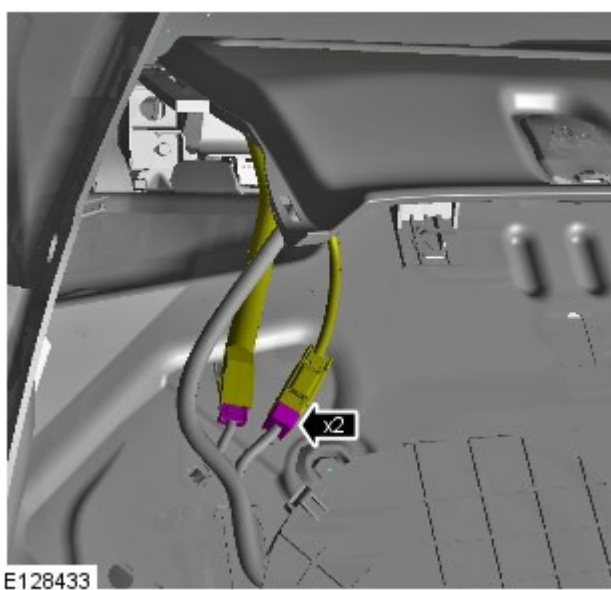


Vehicles without electric rear blind

9.

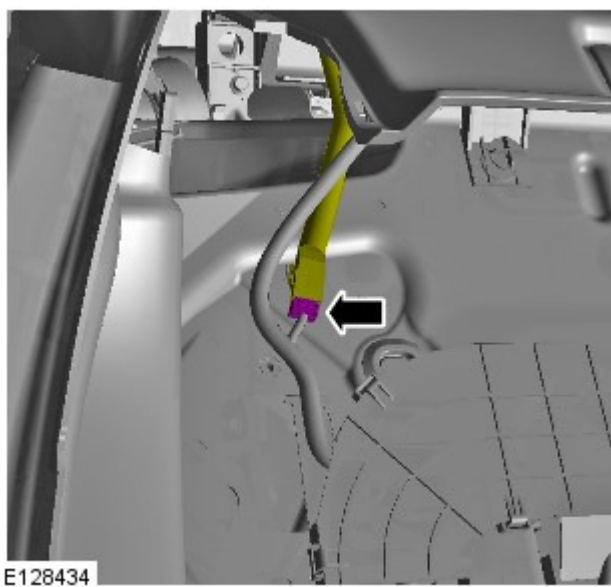

All vehicles

10.

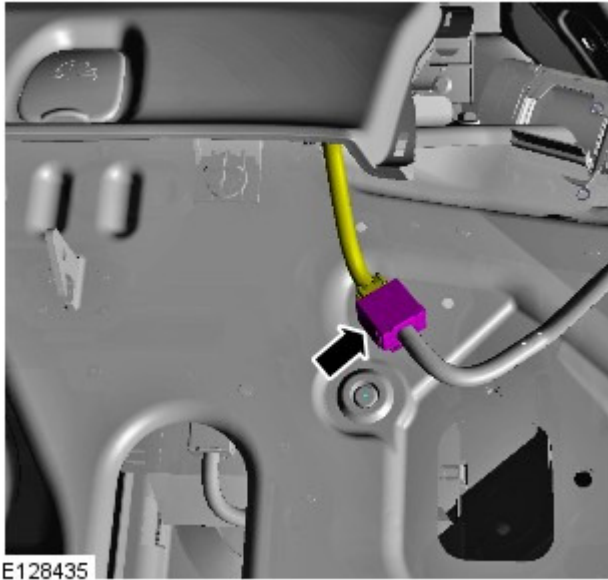

11. Refer to: [C-Pillar Lower Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).