



# How to Set

Video link for installation.


[https://www.youtube.com/watch?v=7\\_pnSiH4\\_CE=](https://www.youtube.com/watch?v=7_pnSiH4_CE=)

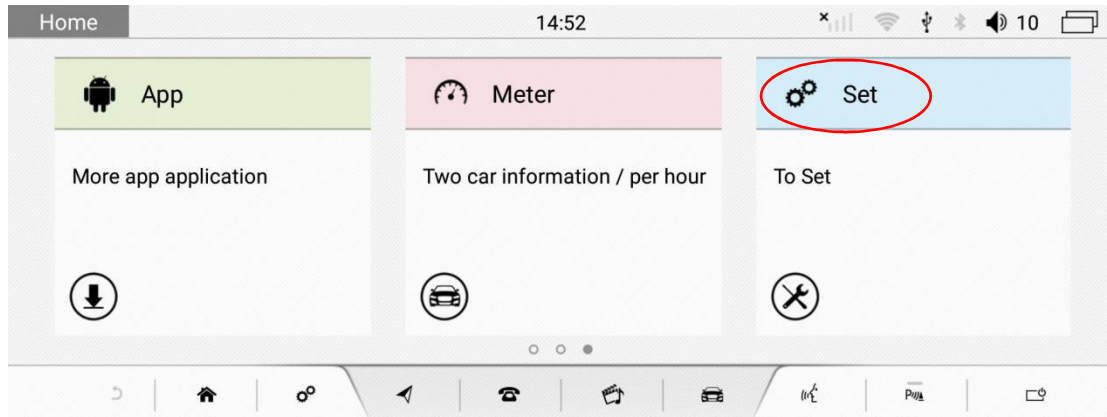


Click Set to enter setting

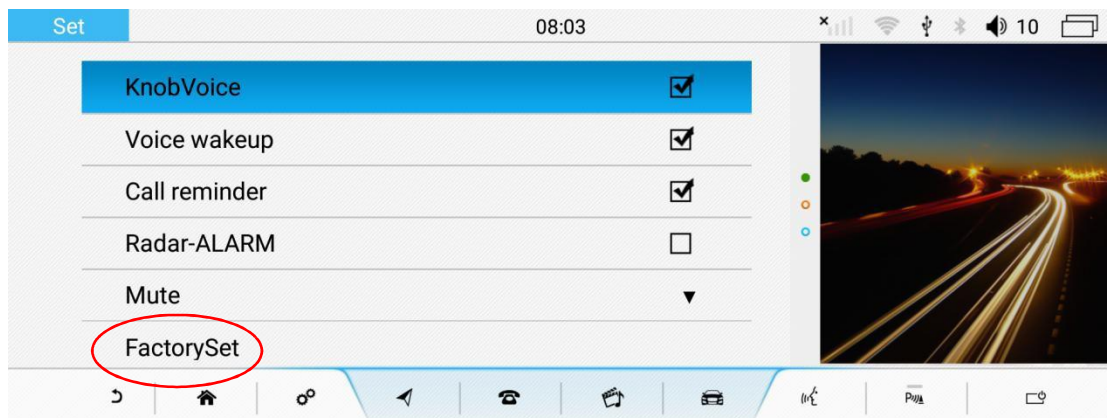


Click FactorySet

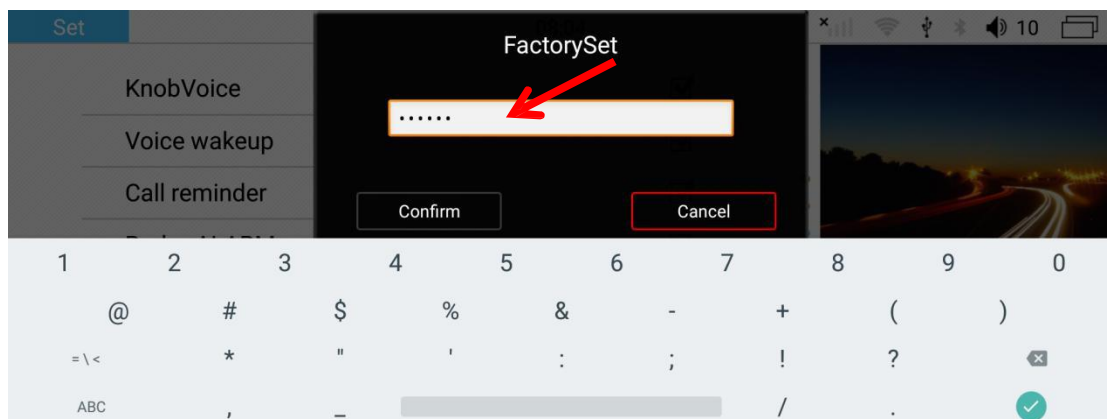

Input password: 666666 to enter factory menu

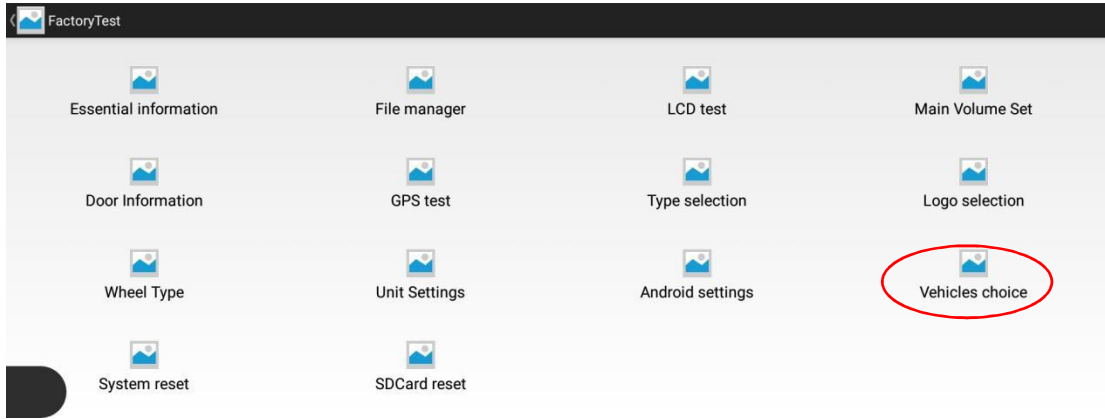

**Find Vehicles choice**

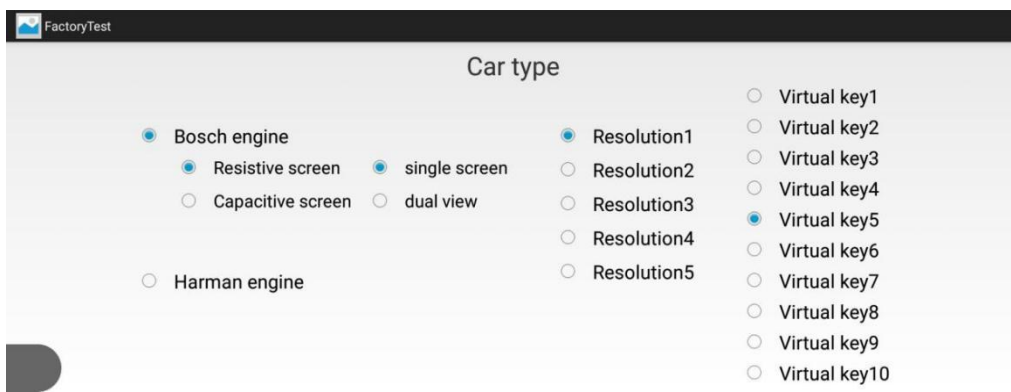

Now we need to find out our original screen type.

1. If your car is with CD player, you need to select Bosch engine. If your car is without CD player, you need to select Harman engine.




**BOSCH**



**HARMAN**

2. Make sure your original screen type.

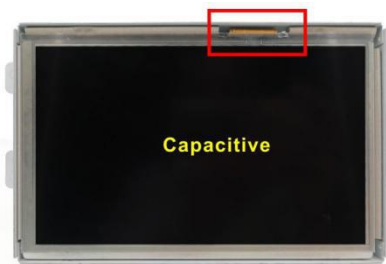

**Capacitive**



**Resistive**

**3 Single screen and dual view:**



**4 Test all resolution from 1-5 to find your right one.**

**Virtual Key:**

Please find your own virtual key comparing with your own car

Land Rover & Jaguar all included as follow:

