

## **Interior Trim and Ornamentation - Front Door Trim Panel Finish Panel**


Removal and Installation








 Pull door handle inwards and exercising care to avoid damaging tweeter, remove escutcheon from casing.

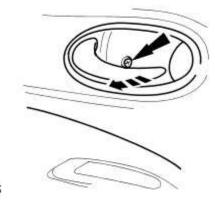

E36335

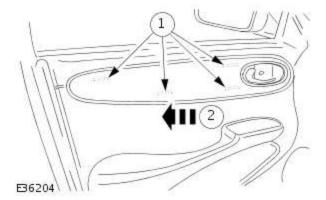

- 2. Remove veneer panel from casing.
  - 1. Using a thin plastic lever, carefully ease rear of veneer panel inwards to release the two rear securing tangs.
  - 2. Slide veneer panel rearwards to release front retainers.

## **Installation**

- Position veneer panel on casing and slide forward to engage front retainers.
- **2.** Using a soft pad or cloth, press rear of panel firmly to seat the securing tangs.
- 3. Fit door handle escutcheon.