

## Front Door Trim Panel Finish Panel 76.47.11

#### Removal

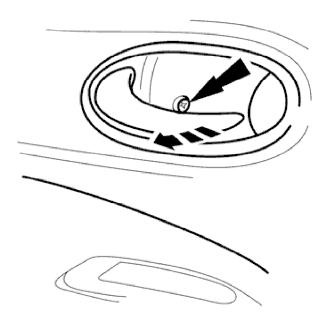

# E36335

- 1. Remove interior door handle escutcheon.
  - Remove cover from door handle escutcheon securing screw and slacken and remove screw.
  - Pull door handle inwards and exercising care to avoid damaging tweeter, remove escutcheon from casing.

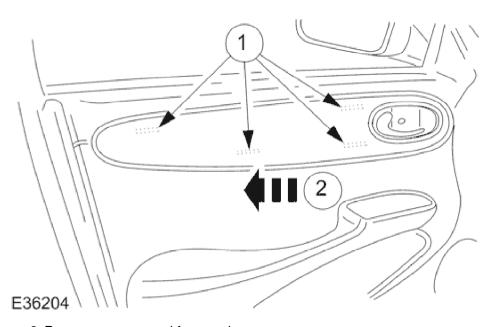

- 2. Remove veneer panel from casing.
  - 1. Using a thin plastic lever, carefully ease rear of veneer panel inwards to release the two rear securing tangs.

1

2010-11-21

# 1998 XJ RANGE - Interior Trim and Ornamentation - 501-05

2. Slide veneer panel rearwards to release front retainers.

### Installation

- 1. Position veneer panel on casing and slide forward to engage front retainers.
- 2. Using a soft pad or cloth, press rear of panel firmly to seat the securing tangs.
- 3. Fit door handle escutcheon.

2 2010-11-21