

Fig. 2

Identify and displace the two vehicle alarm harness multi-plug connectors (SSI-natural 16 way sumitomo and black 2 way econoseal; 2, Fig. 1).

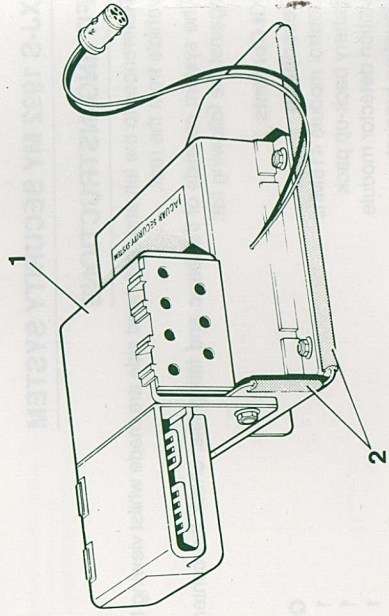


Fig. 3

Position the electronic control unit to the mounting bracket and secure with four flange nuts and shakeproof washers supplied (Fig. 2).
Fit and align the motion sensor and battery back-up pack to the bracket using two flange nuts and shakeproof washers supplied, ensuring that the battery back-up pack is mounted above the ECU (1, Fig. 3).
Fit and seat the two edge protecting strips to the edges of ECU mounting bracket as shown (2, Fig. 3).