

JSI 1483

Fig. 8

Mark out centres for drilling valet switch and LED holes on the side of the lower cowl (Fig. 8).

NOTE: LED to be fitted left hand side for LHD and right hand side for RHD.

Position the cowl over a suitable block of wood.

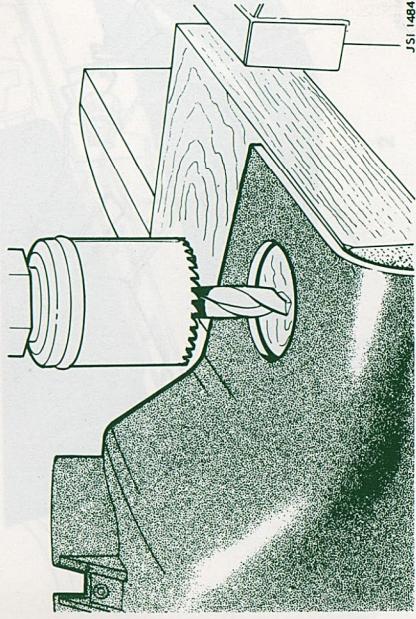


Fig. 9

Using a 1 inch (25mm) hole saw, carefully cut valet hole (Fig. 9).

Using a suitable drill (Size C), drill the LED hole.

De-burr the drilled holes and remove any swarf from the cowl.