

Fig. 14

Identify and displace the vehicle alarm harness multi-plug (SS2-red 10 way sumitomo) from behind the dash liner, to the left of the fuse box (Fig. 14).

Fully seat the two relays (where market permits) to their respectively coloured bases on the link harness supplied. (Purple to purple base; blue to blue base; 1, Fig. 15).

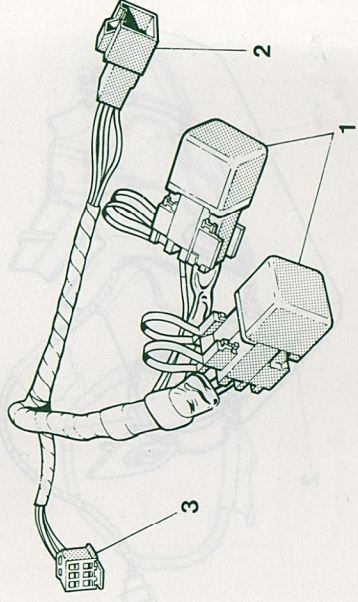


Fig. 15

Connect the link harness multi-plug (2, Fig. 15, red 10 way) to the previously identified vehicle alarm harness multi-plug (1, Fig. 16).

Fully seat the relay bases to the projecting lugs on the mounting bracket (2, Fig. 16).

Connect the link harness multi-plug (3, Fig. 16) to the LED/valet harness (3, Fig. 15).

Fully seat the cowl to the steering column, ensuring that the harness does not become trapped.

Fit and tighten the two lower cowl retaining screws (2, Fig. 7).

Replace and refit the ignition lock surround and opposing blank.

Fit and tighten the securing screws (1, Fig. 7).