

XJ-S 1992 MY SECURITY SYSTEM

FITTING INSTRUCTIONS

References to the left and right hand side are made whilst viewing the vehicle from the rear.

The system consists of the basic and fitting kits, check the contents against the following list:

Kit Contents	Qty
Description	
Control module 418Mhz	1
Battery back-up pack	1
Motion detector module	1
Mounting bracket	1
Boot link harness	1
Edge strip 35mm long	1
Edge strip 150mm long	6
Shakeproof washer	6
Flange nut	2
Radio frequency transmitter 418Mhz	2
Valet switch	1
LED/valet switch harness	1
LED bezel	1
Siren	1
Siren bracket	1
Bulkhead link harness	1
Relay bracket	1
Start inhibit relay	1
Headlamp flash relay (where market requires)	1
Screw No. 8 x 0.5in	2
Washer	1
Nut M6	1
Tie strap 200mm long	12

1

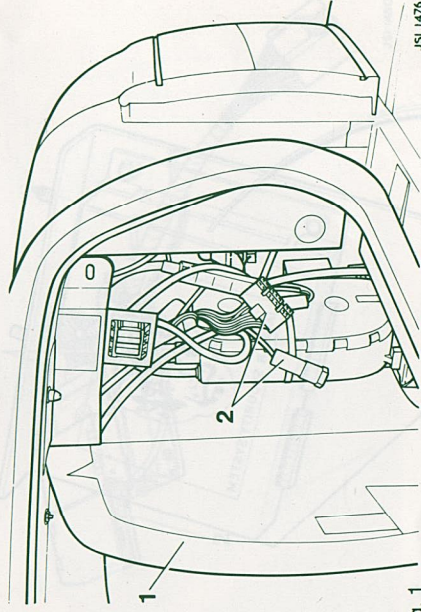


Fig. 1

J51 1476

Precautions

For safety and protection of the vehicle we recommend that the negative (earth) terminal of the battery be disconnected during installation.

Do not under any circumstances connect a 12 volt battery supply to the siren speaker.

Before drilling any holes be sure that the other side of panel is clear of anything that could be damaged.

Fitting instructions

Open the boot lid.

Remove the battery cover trim situated to the right of the spare wheel.

Disconnect the negative battery terminal.

Remove the right hand side rear sideliner (1, Fig. 1).