


JSI 1479

Fig. 4

Using the link harness supplied (Fig. 4) connect the 14 way and 16 way multi-plugs to the ECU (1, Fig. 5).

Connect the link harness 3 way connector to the motion detector (2, Fig. 5).

Connect the link harness 2 way connector to the battery back-up unit (3, Fig. 5).

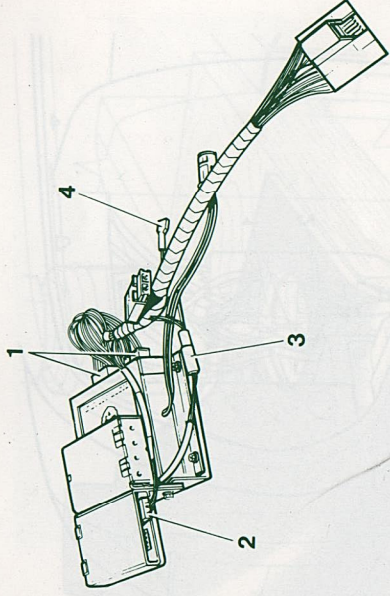

JSI 1480

Fig. 5

NOTE: If the passive arming facility is desired, connect the yellow leads together (4, Fig. 5).

From inside the boot, slacken but do not remove the right hand rear lamp cluster lower fixing nuts.