
Front Door Trim Panel 76.34.01

Removal

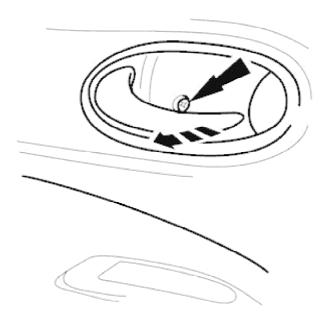


E36335

- 1. Remove interior door handle escutcheon.
 - Remove cover from door handle escutcheon securing screw and slacken and remove screw.


1

- Pull door handle inwards and exercising care to avoid damaging tweeter, remove escutcheon from casing.
- 2. Remove door casing veneer panel. Refer to <<76.47.11>>.

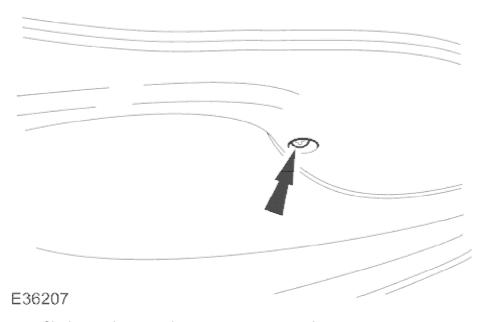


3. Slacken and remove the armrest centre securing screw.

2013-04-13

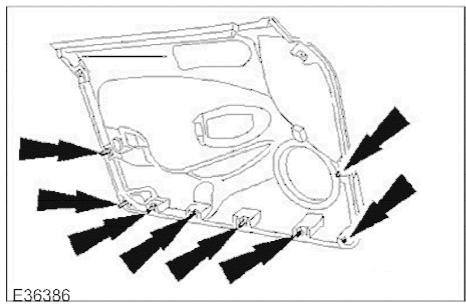


4. Carefully release the eight fasteners securing lower section of casing to door.

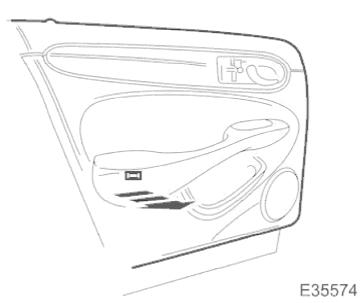


5. Lift rear edge of door casing to release retaining clip housing from door panel.

2 2013-04-13

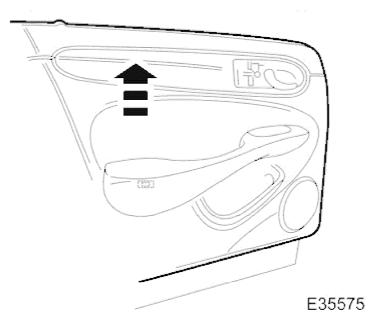

- 6. Lift casing clear of door waist flange and lock button and withdraw for access.
- 7. Using pliers, remove housing from clip and fit to door panel.

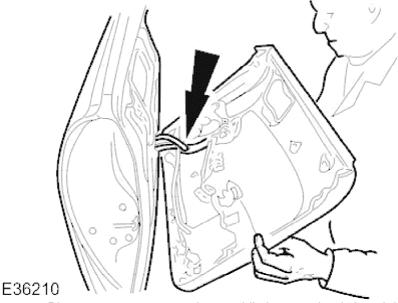


8. Disconnect tweeter, speaker, puddle lamp and switchpack harness multiplugs.

3


9. Remove armrest lower securing clip housing from casing. and refit to door.

2013-04-13

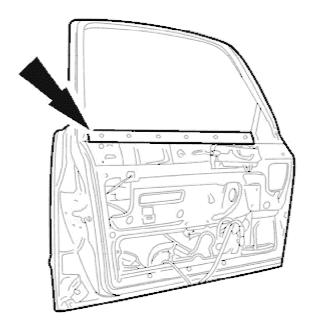

E36338


- 10. Remove door inner waist seal from holder, slacken and remove screws securing waist seal holder and remove seal holder.
- 11. Remove armrest from door casing. Refer to <<76.34.22>>.

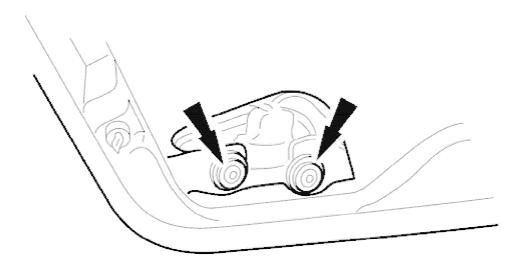

E36340


12. Slacken and remove puddle lamp securing screws and remove lamp assembly from casing.

2013-04-13

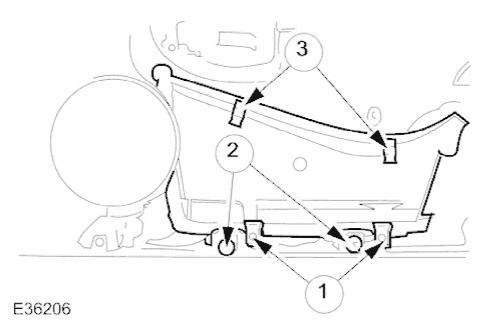

- 13. Remove pocket from door casing.
 - 1. Release puddle lamp harness from clips at base of door pocket.
 - 2. Slacken and remove the two screws securing bottom of pocket to casing.
 - 3. Remove two spring clips securing top of pocket to casing.

14. Lift pocket from casing.

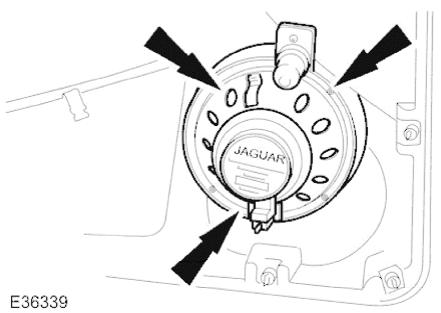

15. Slacken and remove door speaker securing screws and remove speaker from casing.

Installation

- 1. Fit and fully seat casing securing clips.
- 2. Position speaker grill in casing align speaker and fit and tighten securing screws.

5 2013-04-13

- 3. Position pocket in casing and secure with screws and spring clips.
- 4. Fit puddle lamp to casing, fit and tighten securing screws and position harness in pocket clips.
- 5. Fit door armrest to casing. Refer to <<76.34.23>>.
- 6. Fit inner waist seal holder to casing and fit and tighten the securing screws.
- 7. Align and fit inner waist seal.
- 8. Fit door armrest to casing. Refer to .
- 9. Check that armrest tang locater and screw insert are correctly positioned in door panel.
- 10. Position casing for access and connect tweeter, speaker, puddle lamp and switchpack harnesses.
- 11. Finally position casing locating fold over waist flange and firmly press armrest to locate retaining tang in door panel.
- 12. Commencing at front, press and firmly seat casing lower fasteners in door inserts.
- 13. Fit and tighten armrest centre securing screw in door insert.
- 14. Fit door casing veneer panel. Refer to <<76.47.11>>.
- 15. Position door handle escutcheon on casing, fit and tighten securing screw and fit cover over screw.

6 2013-04-13