


1999 XJ RANGE - Seating - 501-10

Front Seat Head Restraint Motor 86.75.17

Removal


1. Power seat fully forward and position squab in fully upright position.
2. Remove front seat back finisher. Refer to 76.70.09.
3. Remove battery cover and disconnect ground cable from battery terminal. (Refer to <<86.15.19>>)

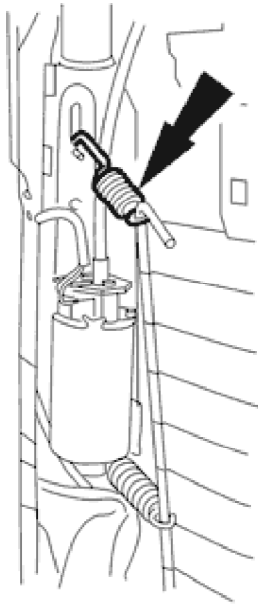

E35691

4. Release and remove seat tensioner spring.


1999 XJ RANGE - Seating - 501-10

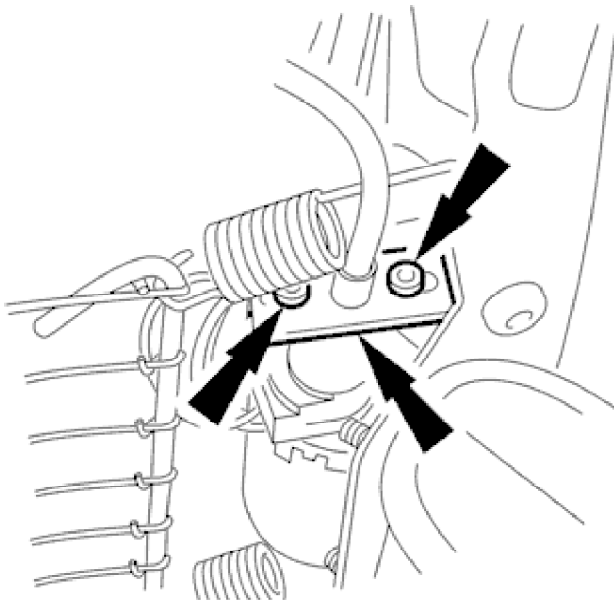

E35692

5. Slacken and remove headrest motor securing screws and remove drive cable retaining plate.

6. Withdraw drive cable from motor.

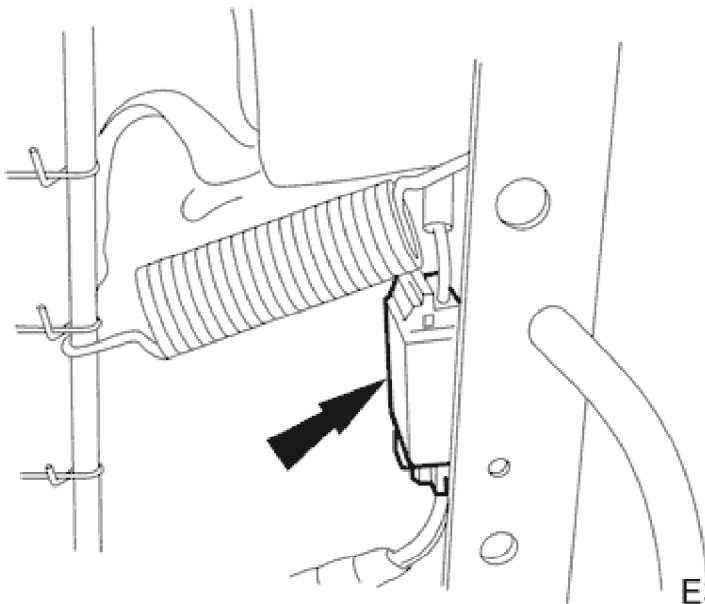

E35695

7. Release motor harness multiplug (yellow) from mounting bracket, position motor for access and disconnect multiplug.

8. Remove headrest motor from seat.

Installation

1999 XJ RANGE - Seating - 501-10

1. Position motor in seat frame, connect harness multiplug and seat multiplug in mounting bracket.
2. Install motor on headrest drive cable and align with mounting bracket.
3. Fit motor securing screws and drive cable retaining plate.
4. Tighten motor securing screws.
5. Install seat tensioner spring.
6. Fit seat back finisher. Refer to 76.70.09.
7. Connect ground cable to battery terminal and fit battery cover. Refer to <<86.15.15>>.