


1999 XJ RANGE - Handles, Locks, Latches and Entry Systems - 501-14

Exterior Rear Door Handle 76.58.02


Removal

1. Remove battery cover and disconnect earth cable from battery terminal. Refer to <<86.15.19>>.
2. Remove rear door casing. Refer to <<76.34.04>>.

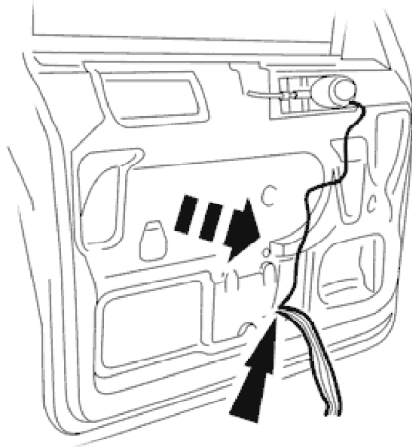

E36273


3. Carefully withdraw water shedder passing harness through it and remove water shedder from door.
4. Place water shedder adhesive face down on clean dry plastic sheet.

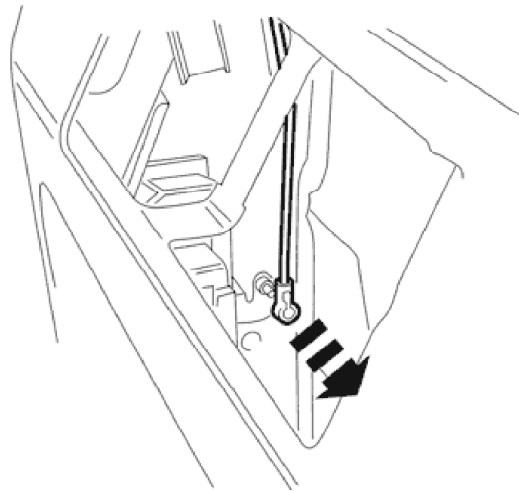

E36293


5. Disconnect door handle operating link from lock assembly.

1999 XJ RANGE - Handles, Locks, Latches and Entry Systems - 501-14

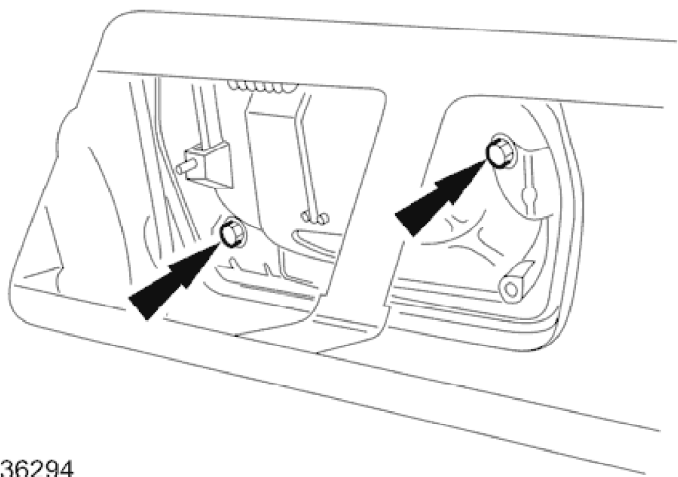


E36294

6. Firmly holding door handle, slacken and remove the two securing bolts.

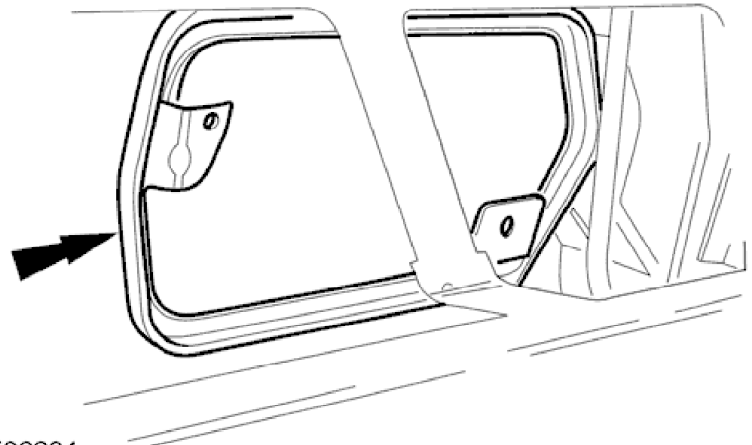

E36284

7. Withdraw handle mounting bracket from door interior and remove handle from door.

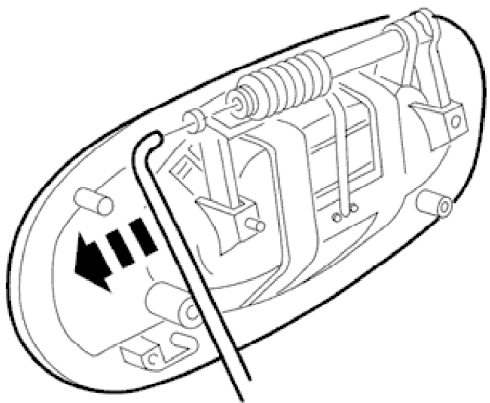

E36295

8. Remove lock link rod from door handle assembly.

1999 XJ RANGE - Handles, Locks, Latches and Entry Systems - 501-14

Installation

1. Fit link rod to handle assembly.
2. Position handle assembly on door.
3. Position mounting bracket on inside of door and connect lock link rod.
4. Fit and tighten mounting bracket securing bolts.
5. Reposition PVC inner sheet in door.
6. Check for satisfactory door handle operation.
7. Connect ground cable to battery terminal. Refer to <<86.15.15>>.
8. From driver door check for satisfactory operation of locking system.
9. Disconnect ground cable from battery terminal. Refer to <<86.15.15>>.
10. Ensure that water shedder contact area of door is clean and dry.
11. Position water shedder at door and carefully pass harness through.
12. Fit and firmly seat water shedder on door ensuring satisfactory adhesion.
13. Fit door casing. Refer to <<76.34.01>>.
14. Fit door casing veneer panel. Refer to <<76.47.11>>.
15. Fit ground cable to battery terminal and fit cover to battery. Refer to <<86.15.15>>.