

### **Pressure Cutoff Switch 82.10.32**

#### Removal

1. Raise and support the vehicle. <<100-02>>

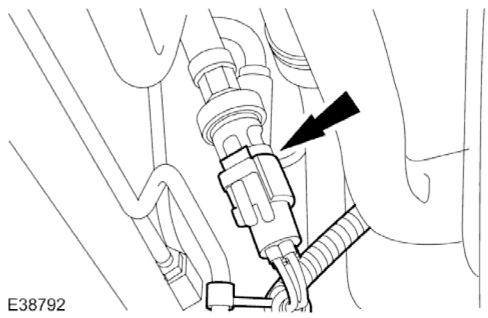

2. Disconnect the pressure cutoff switch electrical connector.

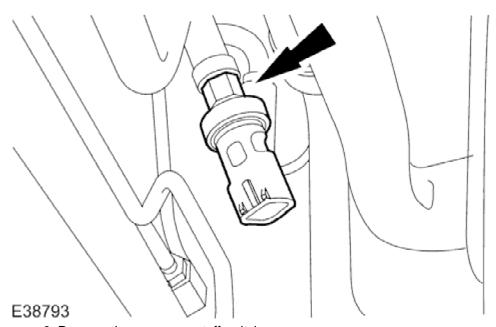


- 3. Remove the pressure cutoff switch.
  - Remove and discard the pressure cutoff switch O-ring seal.

1

2012-11-01

## 2004 XK RANGE - Air Conditioning - 412-03

#### Installation

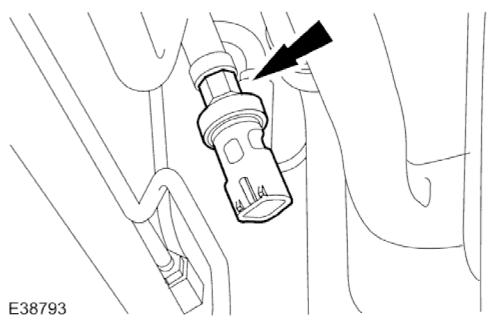


#### 1. **NOTE:**

Install a new pressure cutoff switch O-ring seal.

Lubricate the new O-ring seal with A/C refrigerant oil.

Install the pressure cutoff switch.
1. Tighten to 8 Nm.

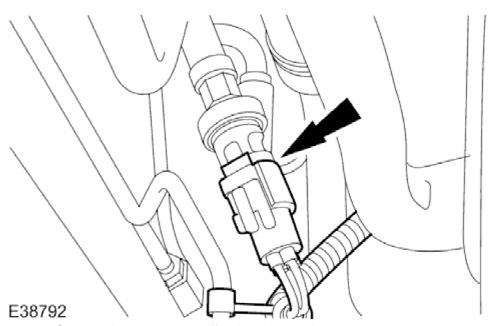

2. Connect the pressure cutoff switch electrical connector.

2012-11-01 2

# 2004 XK RANGE - Air Conditioning - 412-03

3. Carry out the A/C system flourescent dye leak detection procedure. <<412-00>>

3 2012-11-01